3M Full Facepiece Respirator 6000 Series

User Instructions for 3MTM Small 6700, Small 07138, Medium 6800, Medium 07139, Large 6900, Large 07140 Full Facepieces

Important: Keep these *User Instructions* for reference.

*07138, 07139, 07140 are catalog numbers only. NIOSH approved $3M^{TM}$ Small 6700, Medium 6800, Large 6900 Full Facepiece.

GENERAL SAFETY INFORMATION

Intended Use

The 3MTM Full Facepiece Respirators 6000 Series are NIOSH approved and designed to help provide respiratory protection against certain airborne contaminants when used in accordance with all use instructions and limitations and applicable safety and health regulations.

The 3M Full Facepiece 6000 Series meets the requirements of the ANSI Z87.1-2003 standard, high impact level, for face and eye protection.

This product contains no components made from natural rubber latex.



/\warning

This respirator helps protect against certain airborne contaminants. **Misuse may result in sickness or death.** For proper use, see your supervisor, or *User Instructions* or call 3M in U.S.A. at 1-800-243-4630. In Canada, call Technical Service at 1-800-267-4414.

These *User Instructions* provide information about facepiece use only. Important information is provided in the *User Instructions* with each of the air filtration/supplied air systems. Failure to follow *User Instructions* for the air filtration/supplied air systems being used **may result in sickness or death.**

Do not clean respirator with solvents. Cleaning with solvents may degrade some respirator components and reduce respirator effectiveness. Inspect all respirator components before each use to ensure proper operating conditions.

Your employer must provide breathing air that meets at least the requirements of the specification for Grade D breathing air, as described in the Compressed Gas Association Commodity Specification G-7.1-1997 in the United States. In Canada, breathing air systems must be supplied with air, which meets at least the requirements of CSA Standard Z180.1. Failure to do so **may result in sickness or death**.

USE INSTRUCTIONS AND LIMITATIONS

Important

Before use, the wearer must read and understand these *User Instructions*. Keep these instructions for reference.

Use For

Respiratory protection from certain airborne contaminants according to NIOSH approvals, OSHA limitations, in Canada CSA standard Z94.4 requirements, other applicable regulations and 3M instructions.

Do Not Use For

Concentrations of contaminants which are immediately dangerous to life or health, are unknown or when concentrations exceed 10 times the permissible exposure limit (PEL) in air-purifying mode when qualitatively fit tested, 50 times the PEL in air purifying mode when quantitatively fit tested, 1000 times the PEL when used in supplied air mode, or according to specific OSHA standards or applicable government regulations, whichever is lower.

Use Instructions

- 1. Failure to follow all instructions and limitations on the use of this respirator and/or failure to wear this respirator during all times of exposure can reduce respirator effectiveness and **may result in sickness or death.**
- 2. Before occupational use of this respirator a written respiratory protection program must be implemented meeting all the requirements of OSHA 29 CFR 1910.134 such as medical evaluation, training and fit testing and applicable OSHA substance specific standards. In Canada, follow the recommendations of CSA Z94.4 and/or requirements of the applicable jurisdiction, as appropriate.
- 3. The airborne contaminants, which can be dangerous to your health, include those that are so small you cannot see them.
- 4. Leave contaminated area immediately and contact supervisor if you smell or taste contaminants or if dizziness, irritation, or other distress occurs.
- 5. Store respirator away from contaminated areas when not in use.
- 6. Dispose of used product in accordance with applicable regulations.

Use Limitations

- 1. This respirator does not supply oxygen when used in air-purifying mode. Do not use in atmospheres containing less than 19.5% oxygen.
- 2. Do not use when concentrations of contaminants are immediately dangerous to life and health, are unknown or when concentrations exceed 10 times the permissible exposure limit (PEL) in air-purifying mode when qualitatively fit tested, 50 times the PEL in air-purifying mode when quantitatively fit tested, 1000 times PEL in supplied air mode, or according to specific OSHA standards or applicable government regulations, whichever is lower.
- 3. Do not alter, abuse or misuse this respirator.
- 4. Do not use with beards or other facial hair or other conditions that prevent a good seal between the face and the faceseal of the respirator.

Time Use Limitations

- 1. If respirator becomes damaged, leave the contaminated area immediately and repair or replace the respirator.
- 2. Replace filters in accordance with the filter Time Use Limitations.
- 3. Replace cartridges in accordance with an established change schedule or earlier if smell, taste or irritation from contaminants is detected.

NIOSH Cautions and Limitations

The following restrictions may apply. See NIOSH Approval Label.

- A- Not for use in atmospheres containing less than 19.5 percent oxygen.
- B- Not for use in atmospheres immediately dangerous to life or health.
- C- Do not exceed maximum use concentrations established by regulatory standards.
- D- Air-line respirators can be used only when the respirators are supplied with respirable air meeting the requirements of CGA G-7.1 Grade D or higher quality.
- E- Use only the pressure ranges and hose lengths specified in the User's Instructions.
- F- Do not use powered air-purifying respirators if airflow is less than four cfm (115 lpm) for tight fitting facepieces or six cfm (170 lpm) for hoods and/or helmets.
- G- If airflow is cut off, switch to filter and/or cartridge or canister and immediately exit to clean air.
- H- Follow established cartridge and canister change schedules or observe ESLI to ensure that cartridges and canisters are replaced before breakthrough occurs.
- I- Contains electrical parts which have not been evaluated as an ignition source in flammable or explosive atmospheres by MSHA/NIOSH.
- J- Failure to properly use and maintain this product could result in injury or death.
- L- Follow the manufacturer's User's Instructions for changing cartridges, canister and/or filters.
- M- All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA, and other applicable regulations.
- N- Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.
- O- Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
- P- NIOSH does not evaluate respirators for use as surgical masks.
- S- Special or critical User's Instructions and/or specific use limitations apply. Refer to User's Instructions before donning.

S-Special or Critical User's Instructions

3MTM Mercury Vapor Cartridges 6009 and 60929 are equipped with passive 3MTM End of Service Life Indicators (ESLI). The color change indicator must be readily visible when wearing the respirator without manipulation. If you cannot readily see the ESLI, do not use. Mercury vapor cartridges must be discarded when the ESLI changes color; or within 30 days of opening packaging; or when the ESLI becomes dirty or damaged; or when odors of vapors or gases become noticeable, whichever occurs first. Mercury vapor has no odor.

To assemble 3MTM Dual Airline Combination Breathing Tubes with 3MTM Cartridges/Filters, the facepiece inhalation valves must be removed.

If the facepiece is to be used in air-purifying mode (without using the 3MTM breathing tubes SA-1600 or SA-2600), the inhalation valves must be replaced in the facepiece before use.

3MTM Nose Cup Assembly 6894 must be used in all 3MTM Full Facepiece 6000 Series applications except for the 3MTM Powerflow configuration. Please see the 3M Powerflow product *User Instructions* for more information.

/\ WARNING

Your employer must provide breathing air that meets at least the requirements of the specification for Grade D breathing air, as described in the Compressed Gas Association Commodity Specification G-7.1-1997 in the United States. In Canada, breathing air systems must be supplied with air, which meets at least the requirements of CSA Standard Z180.1. Failure to do so **may result in sickness or death**.

Cartridge and Filter Selection and Approvals

Before using any of these products, the user must read the specific use for, use limitations and warning information or call OH&ESD Technical Service at 1-800-243-4630. In Canada, call Technical Service at 1-800-267-4414. Do not exceed maximum use concentrations established by local regulatory agencies. Cartridges/filters are approved as assemblies for use with 3MTM Facepiece 6000 Series. For NIOSH approval, refer to approval label.

LIST OF PRODUCTS


$3M^{\rm TM}$ Full Facepiece 6000 Series Replacement Parts and Accessories Full Facepiece with Standard Center $3M^{\rm TM}$ Adapter 6864

Number	Description	
6700	Small	
6800	Medium	
6900	Large	

****Automotive After Market Division (AAD)

Number		****AAD part numbers are catalog numbers only. NIOSH approved as OH&ESD part numbers.	Description
1	6864		Center Adapter Assembly (Standard)
1A			Center Adapter Cover*
1B	7583		Exhalation Valve
1C			Center Adapter Base*
1D	6896		Center Adapter Gasket
2	6884		DIN Port Adapter Assembly
2A	6882		DIN Cover
2B	6876		Breathing Tube Gasket
2C	6889		Exhalation Valve
2D	6883		DIN Port Base
2E	6896		Center Adapter Gasket
2F	6881		DIN Air Director
2G	7890		Full Face Plug
4	6880		Bayonet Cap
5	6895	07145	Inhalation Gasket
6	6893	07144	Inhalation Valve
7	6898	37006	Lens Assembly
8	6894	37004	Nose Cup Assembly
9	6899	37007	Frame Assembly w/ Screws
10	6897	37005	Head Harness Assembly

^{*} Not available separately

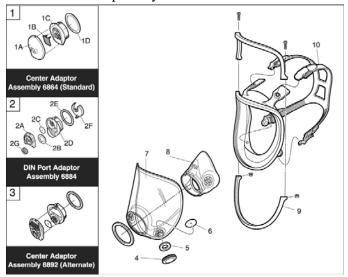

3MTM Accessories and Parts

Number	****AAD part numbers are Catalog numbers only. NIOSH approved as OH & ESD part numbers.	Description
504		Respirator Cleaning Wipes
601		Quantitative Fit Test Adapter
6878	07141	Spectacle Kit
6885	07142	Lens Cover (100 pack)
6886		Tinted Lens Cover (25 pack)
7883		Neck Strap Assembly
7915-5		Shroud, Tychem® QC
7993		Welder's Shroud

CAUTION

Failure to properly dispose of spent cartridges, filters, or respirators contaminated by hazardous materials can result in personal exposures as well as environmental harm. Handling, transportation and disposal of spent cartridges, filters, or respirators must comply with all applicable federal, state, and local laws and regulations.

3MTM Cartridges Number ****AAD De

Number	****AAD	Description	NIOSH Approval for respiratory protection
			against the following contaminants up to ten
			times the permissible exposure limit when
			qualitatively fit tested and up to fifty times
			the permissible exposure limit when
c001	07146		Quantitatively Fit Tested.
6001	07146	Organic Vapor	Certain organic vapors
6002		Acid Gas	Chlorine, hydrogen chloride, and sulfur dioxide or
			chlorine dioxide or hydrogen sulfide (escape only).
6003	07147	Organic Vapor/Acid Gas	Certain organic vapors, chlorine, hydrogen
			chloride, and sulfur dioxide or hydrogen sulfide
			(escape only) or hydrogen fluoride
6004		Ammonia/Methylamine	Ammonia and methylamine
6005		Formaldehyde/Organic vapor	Formaldehyde and certain organic vapors
6006		Multi-Gas/Vapor	Certain organic vapors, chlorine, hydrogen
			chloride, chlorine dioxide, sulfur dioxide, hydrogen
			sulfide (escape only), ammonia/methylamine,
			formaldehyde or hydrogen fluoride
6009		Mercury Vapor/Chlorine Gas	Mercury vapor or chlorine gas
60921		Organic Vapor/P100	Certain organic vapors and particulates
60922		Acid Gas/P100	Chlorine, hydrogen chloride, and sulfur dioxide or
			chlorine dioxide or hydrogen sulfide (escape only)
			and particulates
60923		Organic Vapor/Acid Gas/P100	Certain organic vapors, chlorine, hydrogen
			chloride, and sulfur dioxide or hydrogen sulfide
			(escape only) or hydrogen fluoride and particulates
60924		Ammonia/Methylamine/P100	Ammonia and methylamine and particulates
60925		Formaldehyde/Organic	Formaldehyde and certain organic vapors and
		Vapor/P100	particulates
60926		Multi-Gas/Vapor/P100	Certain organic vapors, chlorine, hydrogen
		•	chloride, chlorine dioxide, sulfur dioxide, hydrogen
			sulfide (escape only), ammonia/methylamine,
			formaldehyde or hydrogen fluoride and particulates
60928		Organic Vapor/Acid Gas/P100	Certain organic vapors, chlorine, hydrogen
			chloride, and sulfur dioxide or hydrogen
			sulfide (escape only) or hydrogen fluoride and
			particulates. 1
60929		Maraury Vapor/Chlorina	•
00929		Mercury Vapor/Chlorine Gas/P100	Mercury vapor or chlorine gas and particulates
		Uas/F100	

¹ 3M recommended for use against methylbromide or radioiodine up to 5 ppm with daily cartridge replacement.

Service Life of Chemical Cartridges and Filters

3MTM Chemical Cartridges 6000 Series must be used before the expiration date on cartridge packaging. The useful service life of these cartridges will depend upon activity of wearer (breathing rate), specific type, volatility and concentration of contaminants and environmental conditions such as humidity, pressure, and temperature. Cartridges must be replaced in accordance with an established change schedule, regulations or earlier if smell, taste or irritation from contaminants is detected.

Filters must be replaced if they become damaged, soiled or if increased breathing resistance occurs. N-series filters should not be used in environments containing oils. R-series filters may be limited to 8 hours of continuous or intermittent use if oil aerosols are present. In environments containing only oil aerosols, P-series filters should be replaced after 40 hours of use or 30 days, whichever is first.

3MTM Filters, Adapters, Retainers

Note: Only 3MTM Filters approved under NIOSH 42 CFR 84 are to be used with the 3MTM Full Facepiece 6000 Series.

Number	****AAD	Description
501	07054	Filter Retainer for Filters 5N11 and 5P71
502		Filter Adapter for Filters 2000 Series and 7093
2071		Particulate Filter, P95
2076HF		Particulate Filter, P95, hydrogen fluoride, with acid gas nuisance relief ¹
2078		Particulate Filter, P95, 3M recommended ozone protection ² , with
		organic vapor/acid gas nuisance relief ¹
2091		Particulate Filter, P100
2096		Particulate Filter, P100, with nuisance level acid gas relief ¹
2097		Particulate Filter, P100, 3M recommended for ozone protection ² , with
		nuisance level organic vapor relief ¹
5N11		Particulate Filter, N95
5P71	07194	Particulate Filter, P95
7093		Particulate Filter, P100

¹ 3M recommended for relief against nuisance levels of acid gas or organic vapors. Nuisance level refers to concentrations not exceeding OSHA PEL or applicable exposure limits, whichever is lower. Do not use for respiratory protection against acid gas/organic vapors.

3M particulate filters must be immediately changed when an increase in breathing resistance is noticed.

² 3M recommended for ozone protection up to 10 times the OSHA PEL or applicable government occupational exposure limits, whichever is lower (not NIOSH approved for use against ozone).

ASSEMBLY INSTRUCTIONS

Note: Make certain 3MTM Inhalation Port Gaskets 6895 are in place on the facepiece bayonet connectors before installing filters, cartridges or breathing tubes.

Cartridge Assembly

- 1. Align the cartridge notch with the small solid bayonet lug on facepiece and push together.
- 2. Turn cartridge clockwise to stop (1/4 turn). Repeat with second cartridge. (Fig. 1)



Fig. 1

3MTM Filter 2000 Series and 7093

Align opening of filter with filter attachment on facepiece. Turn filter clockwise until it is firmly seated and cannot be further turned. Repeat for second filter. (Fig. 2)

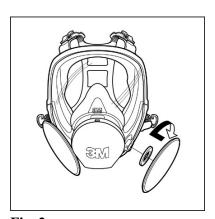


Fig. 2

Filter Assembly (for 3MTM Filters 5N11 and 5P71)

- 1. Place filter into 3MTM Retainer 501 so printed side of filter faces the cartridge.
- 2. Press cartridge into filter retainer. It should snap securely into filter retainer. When correctly installed, filter should completely cover face of cartridge. (Fig. 3)
- 3. To replace filter, remove retainer by lifting on TAB.

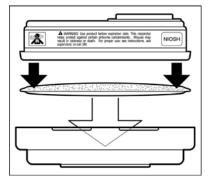


Fig. 3

3MTM Adapter Assembly 502

Align adapter over cartridge. Engage front snap by squeezing front of cartridge and adapter together, placing thumbs of both hands over top of adapter and fingers along bottom sides of cartridge. (Fig. 4)

Engage back snap by squeezing back side of cartridge and adapter together using the same hand positions. An audible click should be heard as each snap is engaged. (Fig. 5) The adapter should not be removed or reused once engaged. It is not designed for reuse. Removal or reuse may result in leakage.



Fig. 4

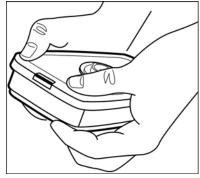


Fig. 5

$3M^{TM}$ Filters 2000 Series and $7093/3M^{TM}$ Adapter Assembly 502

Place filter onto the filter holder so that filter comes into even contact with gasket. Twist clockwise one quarter turn until it is firmly seated and filter cannot be turned further. Repeat for second filter.

Note: The adapter once installed on a $3M^{TM}$ Cartridge 6000 Series, is not to be removed or reused. Removal and reuse may result in leakage.

3MTM Supplied Air Systems

/\ WARNING

Your employer must provide breathing air that meets at least the requirements of the specification for Grade D breathing air, as described in the Compressed Gas Association Commodity Specification G-7.1-1997 in the United States. In Canada, breathing air systems must be supplied with air, which meets at least the requirements of CSA Standard Z180.1. Failure to do so **may result in sickness or death**.

3MTM Dual Airline Respirator Assembly

User must follow Dual Airline Supplied Air Respirator *User Instructions* provided with the 3MTM Dual Airline Supplied Air Respirators.

Assembly of 3MTM Combination Dual Airline Respirator with Cartridges and/or Filters

The 3MTM SA-1600 (front-mounted) and SA-2600 (back-mounted) versions of the 3M dual airline breathing tubes allow use of selected, NIOSH-approved 3MTM Cartridges 6000 Series and Filters 2000 Series. For the listing of approved cartridges and filters, reference the NIOSH approval label included with 3M dual airline adapter kits.

To assemble 3MTM Dual Airline Combination Breathing Tubes with 3MTM Cartridges/Filters, the facepiece, inhalation valves must be removed.

If the facepiece is to be used in air-purifying mode (without using the 3M SA-1600 or SA-2600 breathing tubes), the inhalation valves must be replaced in the facepiece before use.

Using the 3MTM Combination Dual Airline Breathing Tubes without Cartridges and/or Filters To use the 3M combination dual airline breathing tubes (SA-1600 and SA-2600) without cartridges or filters, attach a 3MTM Bayonet Cap 6880 to each outer bayonet mount on the dual airline breathing tube. When used as a straight, Type C, continuous flow supplied air respirator, the Assigned Protection Factor is 1000 times the PEL, OEL or TLV guidelines for full facepiece respirators.

WARNING

The 3MTM Dual Airline is NIOSH approved only with the nose cup 6894 in place. Failure to do so **may** result in sickness or death.

FITTING INSTRUCTIONS

Must be followed each time respirator is worn.

Donning Respirator

- 1. Fully loosen all four head straps, place facepiece on face and pull head harness to back of head. (Fig. 6)
- 2. Pull the ends of the four straps to adjust tightness, starting with the neck straps first, then the forehead straps. Do not overtighten the straps. (Fig. 7)
- 3. Perform a positive and/or negative pressure user seal check each time the respirator is donned.



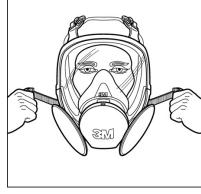


Fig. 6

Fig. 7

User Seal Checks

Always check the seal of the respirator on your face before entering a contaminated area.

Positive Pressure User Seal Check

- 1. Place the palm of your hand over the opening in the exhalation valve cover and exhale gently.
- 2. If facepiece bulges slightly and no air leaks are detected between the face and the facepiece, a proper seal has been obtained. (Fig. 8)
- 3. If faceseal air leakage is detected, reposition the respirator on your face and/or readjust the tension of the straps to eliminate leakage and recheck seal.

If you cannot achieve a proper seal, DO NOT enter the contaminated area. See your supervisor.

Negative Pressure User Seal Check (with 6000 Series Cartridges)

- 1. Place palms of hands to cover face of cartridge or open area of 3MTM Filter Retainer 501and inhale gently. If you feel facepiece collapse slightly and pull closer to your face with no leaks between the face and facepiece, a proper seal has been obtained. (Fig. 9)
- If faceseal air leakage is detected, reposition the respirator on your face and/or readjust the tension of the straps to eliminate leakage and recheck seal.

If you cannot achieve a proper seal, DO NOT enter the contaminated area. See your supervisor.

Note: Use of filter retainer 501 may aid respirator wearer in conducting a negative pressure user seal check.





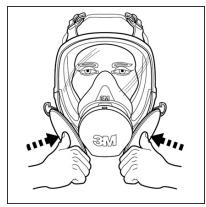


Fig. 10

Negative Pressure User Seal Check with Filters 2000 Series

- 1. Place your thumbs onto the center portion of the filters, restricting airflow through filters and inhale gently. If you feel facepiece collapse slightly and pull closer to your face with no leaks between the face and facepiece, a proper seal has been obtained. (Fig. 10)
- 2. If faceseal air leakage is detected, reposition the respirator on your face and/or readjust the tension of the straps to eliminate the leakage and recheck seal.

If you cannot achieve a proper seal, DO NOT enter the contaminated area. See your supervisor.

Negative Pressure User Seal Check with Filters 7093

- 1. Using hands press filter covers toward facepiece and inhale gently. If you feel facepiece collapse slightly and pull closer to your face with no leaks between the face and facepiece a proper seal has been obtained.
- 2. If faceseal air leakage is detected, reposition the respirator on your face and/or readjust the tension of the straps to eliminate the leakage and recheck seal.

If you cannot achieve a proper seal, DO NOT enter contaminated area. See your supervisor.

Note: Before assigning any respirator to be worn in a contaminated area, a qualitative or quantitative fit test must be performed per the local requirements or OSHA Standard 1910.134, or CSA Standard Z94.4.

FIT TESTING

Note: Fit testing is a requirement of U.S. OSHA and all Canadian jurisdictions. Therefore, either quantitative or qualitative fit testing must be conducted prior to the respirator being issued.

Quantitative Fit Testing (QNFT) can be conducted using a 3MTM Fit Test Adapter 601 and 42 CFR 84 P100 filters such as the 3MTM Particulate Filters 2091 or 7093.

Qualitative Fit Testing (QLFT) with the 3MTM Qualitative Fit Test Apparatus FT-10 or FT-30 can be conducted using any of the NIOSH approved 42 CFR 84 Particulate filters.

Note: For further information concerning fit testing, contact 3M OH&ESD Technical Service at 1-800-243-4630 or a 3M location in your region. In Canada call Technical Service at 1-800-267-4414.

INSPECTION, CLEANING, AND STORAGE

Inspection Procedure

This respirator must be inspected before each use to ensure that it is in good operating condition. The facepiece should be repaired or disposed of if damaged or defective parts are observed. The following inspection procedure is suggested.

- 1. Check facepiece for cracks, tears and dirt. Be certain facepiece, especially faceseal area, is not distorted.
- 2. Examine inhalation valves for signs of distortion, cracking or tearing.
- 3. Make sure that head straps are intact and have good elasticity.
- 4. Examine all plastic parts for signs of cracking or fatiguing. Make sure filter gaskets are properly seated and in good condition.
- 5. Remove exhalation valve cover and examine exhalation valve and valve seat for signs of dirt, distortion, cracking or tearing. Replace exhalation valve cover.
- 6. Inspect lens for any damage that may impair respirator performance or vision.

Cleaning and Storage

Cleaning is recommended after each use.

^WARNING

Do not clean respirator with solvents. Cleaning with solvents may degrade some respirator components and reduce respirator effectiveness. Inspect all respirator components before each use to ensure proper operating condition. **Failure to do so may result in sickness or death.**

- 1. Remove cartridges, filters and/or breathing tubes. The center adapter, lens and faceseal can also be removed if necessary.
- 2. Clean facepiece (excluding filters and cartridges), by immersing in warm cleaning solution, water temperature not to exceed 120°F (49°C), and scrub with soft brush until clean. Add neutral detergent if necessary. Do not use cleaners containing lanolin or other oils.
- 3. Disinfect facepiece by soaking in a solution of quaternary ammonia disinfectant or sodium hypochloride (1oz. [30ML] household bleach in 2 gallons [7.5L] of water), or other disinfectant.
- 4. Rinse in fresh, warm water and air dry in noncontaminated atmosphere.
- 5. Respirator components must be inspected prior to each use. A respirator with any damaged or deteriorated components should be repaired or discarded.
- 6. The cleaned respirator should be stored away from contaminated areas when not in use.

REPLACEMENT PART INSTRUCTIONS

3MTM Facepiece Assemblies for 6700/6800/6900

The facepiece consists of the head harness assembly, nose cup assembly, center adapter assembly, lens assembly, faceseal (small, medium or large), and frame assembly (top, bottom, nuts and screws).

To disassemble lens assembly from faceseal, remove the two Phillips screws from top frame. Then, pull the frame top and frame bottom away from the faceseal. The frame top, frame bottom, faceseal and the lens assembly have vertical line markings that indicate their positions relative to one another. Make certain these markings are aligned for reassembly.

3MTM Center Adapter Assembly 6864 Replacement

The center adapter assembly consists of center adapter base, cover, exhalation valve, and adapter gasket. It is secured to the center port of the lens with a bayonet style twist lock connection, which compresses the sealing gasket.

To remove the center adapter from the facepiece:

- 1. Remove nose cup assembly by pulling away from center adapter inside facepiece. (Fig. 11)
- 2. Grasp center adapter at cover and twist counter-clockwise 1/4 turn to disengage bayonet from facepiece lens.
- 3. Withdraw center adapter from lens center port.



Fig. 11

To install the center adapter into the facepiece:

- 1. Align tabs on center adapter base with notches in center port of facepiece lens.
- 2. Slide adapter into lens port. (Fig. 12)
- 3. Grasp center adapter at cover and twist clockwise 1/4 turn to stop. Be certain center adapter gasket is properly in place and sealed, and that the adapter assembly is fully engaged.
- 4. Replace nose cup assembly.

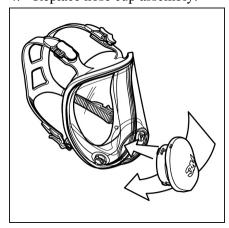


Fig. 12

Converting from the Standard Center Adapter 6864 to the DIN Port Adapter 6884

Any Full Facepiece 6000 Series can be converted to the desired center adapter assembly by following the instructions in 3M Center Adapter Assembly Replacement and installing the 6880 bayonet caps with 6895 Inhalation Port Gaskets or the Full Face plug 7800 with Breathing Tube Gasket 6876 as appropriate.

3MTM Nose Cup Assembly 6894 Replacement

The nose cup assembly replacement 6894 consists of a nose cup and inhalation valves. It is designed to install onto the center adapter and comfortably fit over the respirator wearer's mouth and nose to aid in purging exhaled breath and prevent lens fogging.

- 1. Remove the nose cup assembly by pulling away from center adapter inside facepiece. (Fig. 11)
- 2. To replace, position nose cup assembly onto center adapter aligning arrows. (Fig. 13)

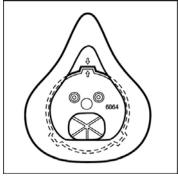


Fig. 13

3MTM Center Adapter Gasket 6896 Replacement

The center adapter gasket replacement is designed to seal the interface between the center adapter and the lens of the Full Facepiece 6000 Series.

- 1. Remove nose cup assembly by pulling away from center adapter inside facepiece. (Fig. 11)
- 2. Grasp center adapter at cover and twist counter-clockwise 1/4 turn to disengage from facepiece lens. Withdraw center adapter from lens center port.
- 3. Remove old gasket 6896 from center adapter and replace with new replacement gasket 6896.
- 4. Re-install center adapter into facepiece lens. (Fig. 12)
- 5. Replace nose cup assembly.

3MTM Inhalation Valve 6893 Replacement

Inhalation valves are located on posts at the inside of the facepiece inhalation ports and inside the nose cup inhalation ports. These valves should be inspected before each respirator use and replaced whenever valves become damaged or lost.

- 1. Remove existing valve(s) by lifting from post(s).
- 2. Install new valve(s) onto post(s). Be certain valve(s) is fully engaged under all three lugs on post(s), lays flat, and moves freely (spins) on post.


3MTM Exhalation Valve 7583 Replacement

- 1. Remove center adapter cover by pulling out from bottom latch.
- 2. Grasp valve and pull each valve stem out from valve seat. (Fig. 14)
- 3. Inspect valve seat making certain it is clean and in good condition.
- 4. Place new exhalation valve replacement over the exhalation port by inserting stems and pulling through from the opposite side until they are both snapped in place. (Fig. 15 and 16)

5. Replace valve cover by aligning and inserting the top opening in the valve cover with the top tab on the center adapter base. Rotate the cover down until it snaps to the center adapter base. An audible click should be heard.

Note: Conduct a negative pressure user seal check to ensure exhalation valve is functioning properly.



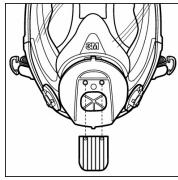

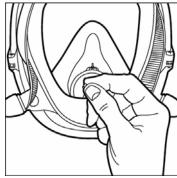


Fig. 14

Fig. 15

Fig. 16

3MTM Inhalation Port Gasket 6895 Replacement

The inhalation port gasket 6895 replacement is designed to seal the interface between the bayonet attachment inhalation ports on the facepiece and filters/cartridges, or dual airline breathing tubes installed on the facepieces. The gaskets should be inspected with each filter/cartridge change and replaced whenever damaged or seal integrity is questionable.

- 1. Remove gaskets from facepiece inhalation port bayonet fittings.
- 2. Install new gaskets onto facepiece inhalation port bayonet fittings. Be certain gaskets are in proper position under all three bayonet lugs. (Fig. 17)

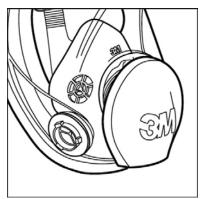


Fig. 17

3MTM Head Harness Replacement 6897

The head harness assembly replacement 6897 consists of the head harness and buckles for the 3M 6000 series full facepiece. To replace the head harness assembly:

- 1. Remove existing harness by pulling attachment buttons out of holes in faceseal tabs.
- 2. Attach new harness by pressing attachment buttons into holes in faceseal tabs with twisting motion. Be certain buttons are fully seated. Head harness should be assembled with 2 short straps to top of respirator and 3M 6897 marking on harness facing away from respirator. (Fig. 18)

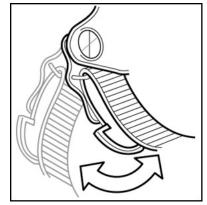


Fig. 18

3MTM Lens Assembly 6898

The lens assembly 6898 consists of a hard-coated polycarbonate lens with installed bayonet attachment inhalation port fittings, inhalation valves, and inhalation port filter/cartridge gaskets. The lens assembly 6898 is replaceable by following these steps:

- 1. Remove nose cup assembly from inside facepiece. (Fig. 11)
- 2. Remove center adapter assembly by turning counter-clockwise 1/4 turn and withdrawing from lens center port.
- 3. Remove the (2) Phillips screws from the lens/faceseal frame. Pull the frame top and frame bottom away from faceseal.
- 4. Remove faceseal from lens.
- 5. Place new lens and faceseal together aligning marks at top and bottom. Position top and bottom frame, again aligning marks top and bottom. Install and securely tighten screws. Make certain alignment marks are properly aligned top and bottom with all components. (Fig. 19)
- 6. Install center adapter assembly. (Fig. 12)
- 7. Replace nose cup assembly. (Fig. 11)

3MTM Frame Kit 6899

The frame kit 6899 includes a frame top, frame bottom, (2) Phillips head screws and (2) hex head nuts. The frame kit secures and seals the 3M full facepiece 6000 series faceseal to the 3M lens assembly 6898.

- 1. After assembling the faceseal onto the lens, matching top and bottom alignment marks, position top frame, over lens and faceseal, aligning center vertical marks, then press in place.
- 2. Position bottom frame, aligning center vertical mark, and press in place. (Fig. 19)
- 3. Insert and tighten Phillips head screws. Make certain parts are properly aligned and sealed together.

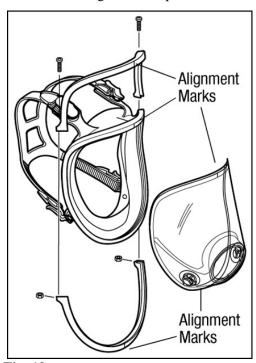


Fig. 19

FOR MORE INFORMATION

In United States, contact:

Internet: www.3M.com/occsafety Technical Assistance: 1-800-243-4630

For other 3M products:

1-800-3M-HELPS or 1-651-737-6501

U.S. PATENTS

5,924,420 Des. 378,610 Des. 379,160 Des.388,872 Des. 490,744

3M Occupational Health and Environmental Safety Division

3M Center, Building 235-02-W-70 St. Paul, MN 55144-1000

Tychem® is a registered trademark of DuPont

©3M 2005

38-9018-9554-0