


READ THIS FIRST BEFORE TURNING ON POWER

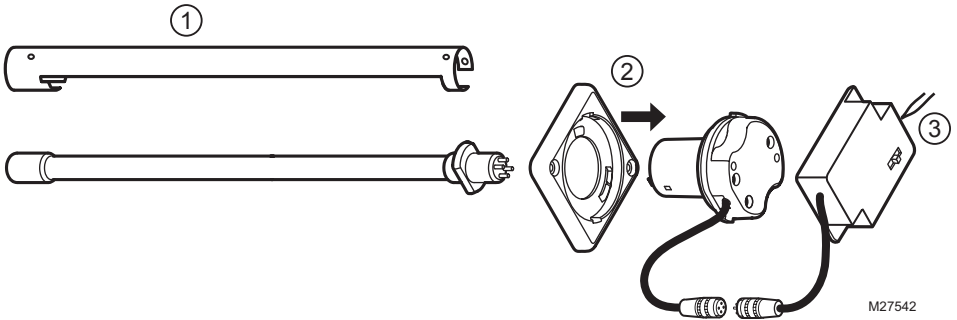

1. Snap in lamp, do not twist.
2. Attach mounting base.
3. Turn ballast to ON or CYCLE.
4. Turn power back on.

IMPORTANT

*15 VA minimum needs to be available if connecting to equipment transformer.
If available VA is not known then Honeywell AT140A1018 or AT140B1206 40VA
transformer can be used.*

Automation and Control Solutions

Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422
customer.honeywell.com

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Toronto, Ontario M1V 4Z9

