

HE300 Fan Mounting Location

ADDENDUM

The following is an update to the Installation Manual (#69-2413) enclosed in this box.

On page 5 of the Installation Manual (#69-2413), the mounting location for the **Fan** style HE300 humidifier indicates either a supply or return mounting location.

UPDATE: The HE300 Fan humidifier should only be installed on the supply duct.

Follow this UPDATE addendum when choosing a mounting location for the HE300 Fan.


This update does not apply to the bypass models.

Whether you purchased a Bypass or Fan humidifier will determine how your humidifier will be installed.

Which humidifier do you have?

Bypass

Bypass humidifiers use the pressure difference between the supply and return to move duct air through the humidifier. Access to both the supply and return are required.

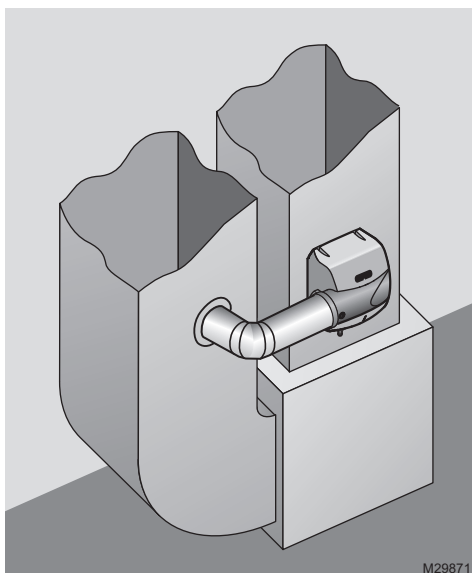

Fan

Fan humidifiers use the fan inside the humidifier to pull duct air through the humidifier. Access to the **supply** is required. Do not mount on the return duct.

