

## AIRETRAK® PRODUCT GUIDE

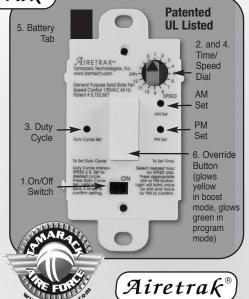

The Airetrak<sup>®</sup> is a microprocessor based timer and fan speed control. The override button provides full speed operation: Press the override button to run the fan at full speed for twenty minutes, or press again to turn it off and resume the program.

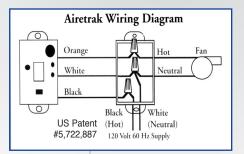



## **Programming the Airetrak®**

- 1. Slide the ON/OFF switch to on.
- 2. Set Time: Determine how many hours each day the Airetrak will operate, either 24 hours or 12 hours. (the default is 24 hours).
  For 24 Hour Operation: Set the Speed Dial to 24 hour (24h) and press either the AM or PM set button, the Override Button will blink once for AM, twice for PM.
- 3. Set Duty Cycle: Determine how many minutes of each hour the Airetrak will operate. Duty cycle is set in 5 minute intervals. 1 equals 5 minutes of operation, 2 equals 10 minutes of operation, etc. Turn the Speed Dial to the desired intervals, then press the Duty Cycle. The Override Button will blink 3 times..
- **4. Set Speed:** Determine the voltage to be sent to the system from the Airetrak. 1 is full line voltage, 2 is reduced 5% etc., 12 is minimum. Turn Speed Dial to desired position to set airflow.

NOTE: Because the Airetrak is used with so many different makes & models of equipment, in so many configurations, we do not publish flow rates. The only reliable way to determine airflow is by direct measurement.

- **5. Remove Battery Tab:** Removing the Battery Tab initiates the battery circuit. This battery circuit will maintain the program you have just installed.
- **6. Test the Override Circuit:** Press the Override Button. The internal LED will glow yellow. Press again and the yellow light will go out.

LIMITED WARRANTY IF, WITHIN THE PERIOD OF ONE YEAR FROM DATE OF PURCHASE THE AIRETRAK® (THE PRODUCT) IS DEFECTIVE OR MALFUNCTIONS IN NORMAL HOME USE, TAMARACK WILL REPAIR OR REPLACE THE PRODUCT AT ITS DISCRETION WITHOUT CHARGE FOR LABOR OR MATERIALS. CUSTOMER IS RESPONSIBLE FOR SHIPPING CHARGES.

CONDITIONS, EXCLUSIONS, AND LIMITATIONS -THIS WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS, EXCLUSIONS AND

CONDITIONS, EXCLUSIONS, AND LIMITATIONS -THIS WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS, EXCLUSIONS AND LIMITATIONS. THIS WARRANTY DOES NOT COVER PROBLEMS RESULTING FROM INSTALLATION, OPERATION OR MAINTENANCE THAT HAS BEEN UNDERTAKEN OTHER THAN IN ACCORDANCE WITH THE INSTRUCTIONS. THIS WARRANTY DOES NOT COVER PROBLEMS RESULTING FROM DEFECTS IN OR CAUSED BY ASSOCIATED EQUIPMENT (FURNACES, SOLARIA, ETC.); FROM REPAIRS OR MODIFICATIONS ATTEMPTED BY PERSONS OTHER THAN TAMARACK.; FROM ABUSE, ACCIDENTAL OR SHIPPING DAMAGE, ACTS OF GOD. THIS WARRANTY DOES NOT APPLY TO THE PRODUCT USED OUTSIDE THE UNITED STATES, ITS TERRITORIAL POSSESSIONS AND CANADA. EXCEPT AS SET FORTH ABOVE, NO EXPRESS OR IMPLIED WARRANTY IS GIVEN OR AUTHORIZED BY TAMARACK. AND ALL OTHER SUCH WARRANTIES ARE EXPRESSLY DISCLAIMED. ANY WARRANTY OR MERCHANTABILITY OF FITNESS FOR ANY PARTICULAR PURPOSE SHALL BE LIMITED TO THE WARRANTY HERE-UNDER. MOREOVER, ANY LIABILITY OF TAMARACK FOR THE PRODUCT SHALL BE LIMITED TO THE REPLACEMENT OF THE PRODUCT. IN NO EVENT SHALL TAMARACK BE LIABLE FOR ANY INCIDENTAL DAMAGES OR FOR ANY CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGES, IRRESPECTIVE OF THE CAUSE THEREOF, OCCURRING EITHER DURING OR AFTER THE WARRANTY PERIOD. INCLUDING WITHOUT LIMITATION ANY DAMAGE TO ANY PART OF A BUILDING OR ITS CONTENTS. NOTE: SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES AND SOME STATES DO NOT ALLOW HE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES AND SOME STATES DO NOT ALLOW FINITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.



P/N ATKPG.1

## AIRETRAK CD® PRODUCT GUIDE

Aire trak CD





## Programming the Airetrak CD®


- 1. Slide the ON/OFF switch to on.
- 2. Set Speed: Determine the voltage to be sent to the system from the Airetrak CD. 1 is full line voltage, 2 is reduced 5% etc., 12 is the minimum. Turn Speed Dial to desired position to set airflow.
  NOTE: Because the Airetrak is used with so many different makes and models of equipment, in so many configurations, we do not publish flow rates. The only reliable way to determine airflow is by direct measurement.
- 3. Test the Override Circuit: Press the Override Button. The internal LED will glow yellow and operate fan at full speed. Press again and the Override Button will glow green and resume constant duty operation.

The Airetrak CD<sup>®</sup> is a Constant Duty fan speed control.

Used with a quiet, energy efficient fan, the Airetrak CD<sup>®</sup>
will provide ventilation 24 hours a day, every day.

The override button provides full speed operation:

Press the override button to run the fan at full speed, or press again to return to the low speed setting.

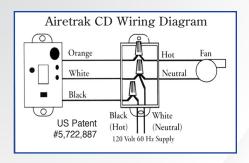

LIMITED WARRANTY IF, WITHIN THE PERIOD OF ONE YEAR FROM DATE OF PURCHASE THE AIRETRAK CD® (THE PRODUCT) IS DEFECTIVE OR MALFUNCTIONS IN NORMAL HOME USE, TAMARACK WILL REPAIR OR REPLACE THE PRODUCT AT ITS DISCRETION WITHOUT CHARGE FOR LABOR OR MATERIALS. CUSTOMER IS RESPONSIBLE FOR SHIPPING CHARGES.

CONDITIONS, EXCLUSIONS, AND LIMITATIONS -THIS WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS, EXCLUSIONS AND

CONDITIONS, EXCLUSIONS, AND LIMITATIONS -THIS WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS, EXCLUSIONS AND LIMITATIONS. THIS WARRANTY DOES NOT COVER PROBLEMS RESULTING FROM INSTALLATION, OPERATION OR MAINTENANCE THAT HAS BEEN UNDERTAKEN OTHER THAN IN ACCORDANCE WITH THE INSTRUCTIONS. THIS WARRANTY DOES NOT COVER PROBLEMS RESULTING FROM DEFECTS IN OR CAUSED BY ASSOCIATED EQUIPMENT (FURNACES, SOLARIA, ETC.); FROM REPAIRS OR MODIFICATIONS ATTEMPTED BY PERSONS OTHER THAN TAMARACK.; FROM ABUSE, ACCIDENTAL OR SHIPPING DAMAGE, ACTS OF GOD. THIS WARRANTY DOES NOT APPLY TO THE PRODUCT USED OUTSIDE THE UNITED STATES, ITS TERRITORIAL POSSESSIONS AND CANADA. EXCEPT AS SET FORTH ABOVE, NO EXPRESS OR IMPLIED WARRANTY IS GIVEN OR AUTHORIZED BY TAMARACK. AND ALL OTHER SUCH WARRANTIES ARE EXPRESSLY DISCLAIMED. ANY WARRANTY OR MERCHANTABILITY OF FITNESS FOR ANY PARTICULAR PURPOSE SHALL BE LIMITED TO THE WARRANTY HERE-UNDER. MOREOVER, ANY LIABILITY OF TAMARACK FOR THE PRODUCT SHALL BE LIMITED TO THE REPLACEMENT OF THE PRODUCT. IN NO EVENT SHALL TAMARACK BE LIABLE FOR ANY INCIDENTAL DAMAGES OR FOR ANY CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGES, IRRESPECTIVE OF THE CAUSE THEREOF, OCCURRING EITHER DURING OR AFTER THE WARRANTY PERIOD. INCLUDING WITHOUT LIMITATION ANY DAMAGE TO ANY PART OF A BUILDING OR ITS CONTENTS. NOTE: SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

