 


Aroma Diffuser User Manual

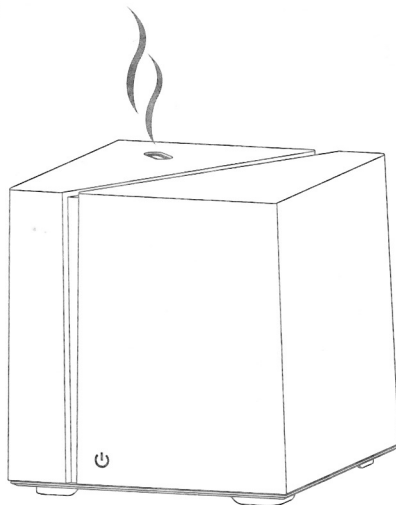



● SPECIFICATION

Product Size	(L)123mm*(W)123mm*(H)126mm
Net Weight	About 0.6 KG
Voltage	AC 100 -240V / DC 24V
Power Output	About 12W
Working Mode	Continuous spray/Intermittent spray (30S ON / 30S OFF)
Capacity	200ml
Mist Amount	20-30ml/h
Material	PP+ABS
Ultrasonic Rate	2.4MHz
Accessories	AC power adaptor, Measuring cup, User manual


This Aroma Diffuser uses the ultrasonic waves to instantly vaporize water and essential oil in the tank, to produce a cool, fresh fragrant mist.

● PRODUCT DIAGRAM

- | | |
|----------------------|-----------------|
| A. Mist Outlet | F. Base |
| B. Upper Cover | G. Water Outlet |
| C. Operation Buttons | H. DC Socket |
| D. Water Tank | I. Air Intake |
| E. Air Outlet | |

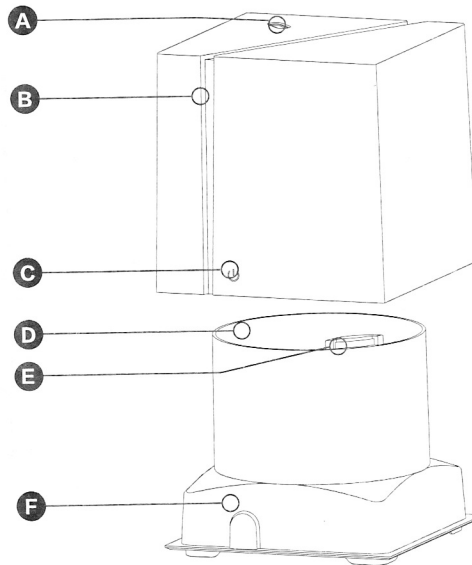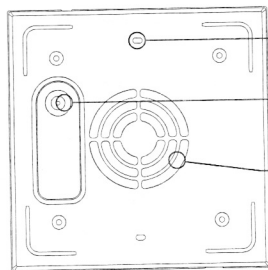  

● OPERATION

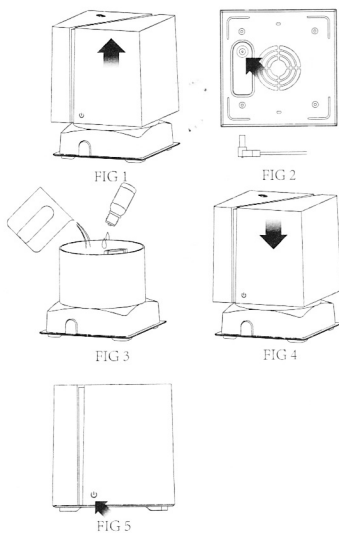 

1. Please put the product upside, remove the upper cover. (FIG 1)
2. Please connect the AC adaptor to the DC jack on the base. (FIG 2)
3. Using the measuring cup, fill the water tank with tap water up to the max water level line. Do not overfill or mist output may be low. Do not use hot water. Please never fill in water during operation. Drop essential oil into water tank vertically. (About 0.1ML-0.15ML per 100ML water) (FIG 3)
4. Replace the upper cover onto the base. (FIG 4)

Attention: You must cover the upper cover when you want to use the product.

5. Connect the AC adaptor with power supply socket.
6. Touch the key 1st time, the machine start working with mist and warm light until waterless;
Touch the key 2nd time, the machine enter into Intermittent Mode: 30 seconds ON and 30 seconds OFF, the light is always ON. It works until waterless;
Touch the key 3rd time, both mist and light will OFF. (FIG 5)
At any time, keep touching this key for 2 seconds to switch mist and light off.

● ATTENTION

If you do not use it for a long time, please drain out the water from tank water, dry and then keep it well.

The diffuser will auto shut off when unit is out of water.

The diffuser will not work without water.

The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault.

Factors that affect this include water type, humidity, temperature, air currents.

We recommend that you clean it every time you change oils.

Oils are corrosive, and over time, they build up on the atomizing plate.

● ACCIDENTAL LEAKAGE

In the event of the unit being knocked over or tipped during usage, please follow the instructions as below:

1. Unplug the unit and remove the cover.
2. Pour out any remaining water out of the water tank.
3. Shake the unit gently to drain any water inside the mechanism, and then allow drying for at least 24 hours.

● MAINTENANCE

After using 5-6 times, or 3-5 days, please clean the product as below.

1. Unplug the unit from power supply and remove the cover.
2. Pour out any remaining water out from the "DRAIN SIDE" of the water tank.
3. Add some warm water into tank and mix with neutral detergent, wash with a cleaning cloth.
4. If you find any dirt in the air outlet, please remove the container cover and clean it.
5. Never use other acids, enzymes or detergents, as this may risk poisonous gas to be created or cause malfunction.

● DISCLAIMER

To avoid any damage to the product, please make sure instructions are as below:

- Not allow the non-technological staffs to transform, disassemble, or repair the product. If the product needs to be repaired, please contact with the sales department.
- Don't stabbed, twisted, or stretched the line of the power. adaptor, don't place the electric wire to the high temperature place.
- Please don't put the heavy pressure on the wire and clipping or repairing wire are also not be allowed.
- If the wire of the adaptor was damaged, or the socket was loose, please stop using.
- If there is abnormal odor, noise, abnormal generation, then the product or the adaptor may have a fault. Please pull the adaptor out of the supply socket, and stop using at the same time.
- It's not allowed to set the adaptor to some wet place, such as bathroom, dressing room, greenhouse, etc.
- To make sure to be healthy, every time after using the product pls drain the water out of the water tank , and use the cloth to wipe it to be clean.
- The essential oil may cause staining, if accidental spill out, you should use the dishcloth to wipe it immediately.
- Don't fill the tap water directly. We should use the measuring cup to add water into the water tank.
- Don't let the spray nozzle spray directly on furniture, clothes or walls.
- Avoid it in direct sun exposure, or be close to the air conditioner, fan or high temperature and some other places.
- Put the unit in plat places, such as carpet and mat. Unflat places are not be allowed.
- Avoid it to be on the appliances such as TV set, audio equipment.
- Don't block the mist outlet. It may cause the body inside full of water and damage it.
- After a long time work, in order to avoid damaging the ultrasonic plate, the product should be closed for 60 minutes after working.
- Only the tap water, purified water is not available.
- It cannot be moved while using.
- Don't touch the product while your hands are wet, in order to avoid electricity leakage.
- The product should be put to the places that the children are out of reach, and teach the children the right using way.
- The product is not suitable for the children and the people who lack of knowledge and experience about it.

● FAULT CAUSES

When the product can not work well, you should consider the following issues first:

If you find the product may has some faults, please confirm the followings before contacting us for repair:	
When you turn on the product, it will power off within 1 second.	<ul style="list-style-type: none">● Please confirm whether the tank has water or not. Or is the water volume enough? -- Please add water into the tank.● Whether the AC adaptor connects right or not? --Please confirm the product is well connected with the adaptor. In order to confirm whether it connects ok, please pull the DC socket out of the product, and connect it again.
Without mist spray or with abnormal mist spray.	<ul style="list-style-type: none">● Whether the water in the tank is less or not? --Please add enough water into the water tank. If the water is over max line, it may also cause fault to the mist spray.● Whether the ultrasonic atomizing sheet is defiled or not? --Please clean the container.(Please refer to the" maintenance")● Whether the bottom of the suction mouth is full of dust or not? --If the base inlet is sticky with dust, the mist volume will decrease greatly, and result in not enough wind to mist spray.
Aroma diffuser leak water.	<ul style="list-style-type: none">● Whether the upper covered is cover well or not? -- Recover it upper cover.● Whether the temperature is too high or too low? --If the temperature is too low or the humidity is high, the mist on the surface may get together easily and form water drops.