

The float assembly has been redesigned for your unit. With the pan in place, open the saddle valve allowing water to begin flowing.

To adjust the water level, loosen (DO NOT REMOVE) the thumb screw and move the float arm UP to increase the level, or DOWN to lower the water level.

Tighten the thumb screw after adjusting.

The water level should be adjusted to make sure the bottom of the media is in the water.

