


INSTALLATION INSTRUCTIONS

IF YOU HAVE A **BLUE** FILTER HOLDER

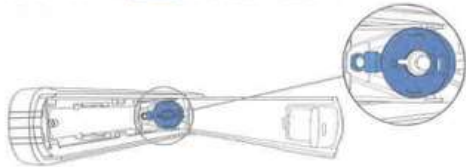

REMOVING THE FILTER CARTRIDGE:


1. Remove the old cartridge by opening the filter door and pulling on the bottom of the cartridge to disengage it from the filter clips. Swing the cartridge outward until you hear the 'click' of the cartridge holder engaging with the bracket.



2. Twist the cartridge one-quarter turn **counter-clockwise**. After twisting, remove the cartridge by pulling it away from the cartridge holder. A small amount of water may drip out.

INSTALLING THE FILTER CARTRIDGE:


3. Align the filter cartridge with the cartridge holder with the word "FRONT" facing the top of the unit. Push the cartridge toward the rear of the unit until it is fully seated. Twist the filter cartridge **clockwise** one-quarter turn, until the word "FRONT" is facing outward.

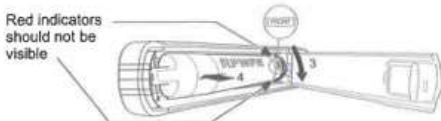

4. While continuing to ensure cartridge is fully seated in the holder, gently swing the filter inward until it is in position. If filter will not swing easily, check to ensure filter is properly aligned and fully seated within the cartridge holder. The RED indicators should not be visible.


IF YOU HAVE A **GREY** FILTER HOLDER DO NOT TWIST CARTRIDGE!

Twisting may damage refrigerator or filter.

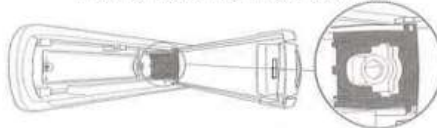

REMOVING THE FILTER CARTRIDGE:

 1. Remove the old cartridge by opening the filter door and pulling on the bottom of the cartridge to allow it to swing outward.




2. When the cartridge can no longer swing, gently pull to unseat from the cartridge holder. A small amount of water may drip out.

DO NOT TWIST CARTRIDGE!


INSTALLING THE FILTER CARTRIDGE:

3. Center the cartridge with cartridge holder with the word **FRONT** facing outward. Push the cartridge inward until it is fully seated. **FRONT** should be centered with the cartridge holder for proper installation. The RED indicators should not be visible.

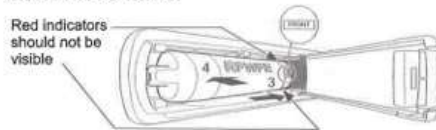

4. While continuing to ensure cartridge is fully seated in the holder, gently swing the filter inward until it is in position. If filter will not swing easily, check to ensure filter is properly aligned and fully seated within the cartridge holder.

IF YOU HAVE A **BLACK** FILTER HOLDER

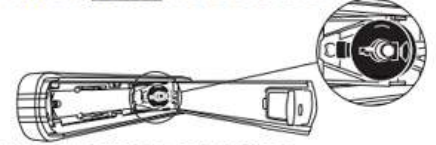

REMOVING THE FILTER CARTRIDGE:


1. Remove the old cartridge by opening the filter door and pulling on the bottom of the cartridge to disengage it from the filter clips. Swing the cartridge outward until you hear the 'click' of the cartridge holder engaging with the bracket.
2. Twist the cartridge one-quarter turn **counter-clockwise**.



After twisting, remove the cartridge by pulling it away from the cartridge holder. A small amount of water may drip out.

INSTALLING THE FILTER CARTRIDGE:

3. Align the filter cartridge with the cartridge holder with the word "FRONT" facing the top of the unit. Push the cartridge toward the rear of the unit until it is fully seated. Twist the filter cartridge **clockwise** one-quarter turn, until the word "FRONT" is facing outward.

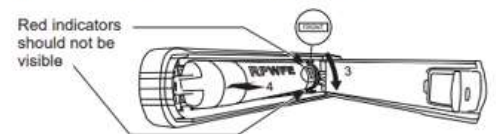

4. While continuing to ensure cartridge is fully seated in the holder, gently swing the filter inward until it is in position. If filter will not swing easily, check to ensure filter is properly aligned and fully seated within the cartridge holder. The RED indicators should not be visible.

BOTH MODEL TYPES

5. Run 2 gallons of water through the cold water dispenser (about 5 minutes) to remove air from the system. A newly installed filter cartridge will cause water to spurt from the dispenser. Use a large pitcher or sports bottle to catch the water spray. **NOTE:** It is normal for water to appear discolored during the initial system flush. Water color will return to normal after the first few minutes of dispensing.

DO NOT use the hot water dispenser or Autofill function until all air is removed from the system.

6. Reset Filter status message (non-touch screen models).