



INSTALLATION INSTRUCTIONS FOR CHARCOAL FILTER JX81B

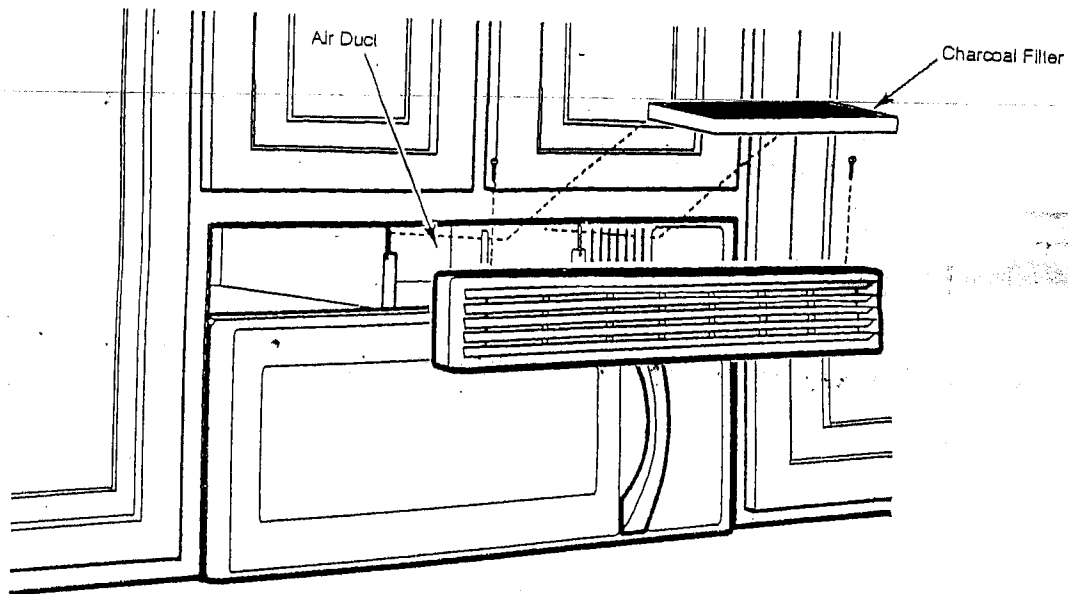

1. Remove and save the two Phillips head screws.
2. Slide the grille/louver to the left and pull the grille/louver away from the unit.

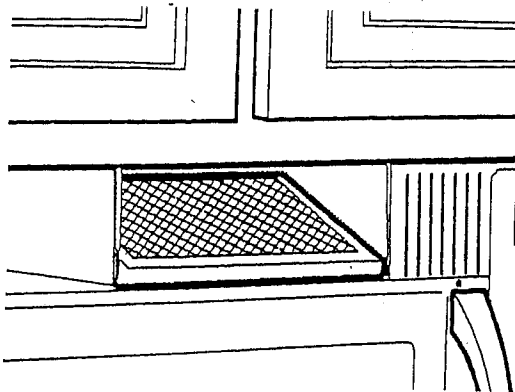

3. Insert filter at top of opening. It will rest at an angle on two side support tabs with the front edge of the filter resting on the bottom front of the air duct opening.
4. Replace grille/louver and secure with two screws.

NOTE: Charcoal filter should be changed every 6 to 12 months depending on use.

Part No. 164D3370P150
Pub. No. 49-40154

12-00 JR

Printed in the United States