


# Honeywell

***TRADELINE®***

# Electronic Thermostat

**OWNER'S GUIDE**

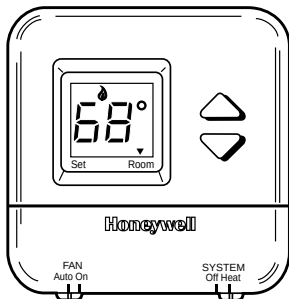

M14750



69-1492

Congratulations on the purchase of your new thermostat! Over 100 years of Honeywell engineering expertise went into the making of this thermostat in an effort to provide you with a more comfortable and convenient living environment.

- *Simple and easy to use.* The ▲ and ▼ keys make it easy for you to change your temperature setting.
- *Large digital display.* You can easily read the current room temperature at a glance.
- *No need for batteries.* Batteries are not required because your temperature settings are held permanently in memory.

# Settings


## Setting FAN and SYSTEM Switches

Fan and system settings are controlled by using FAN and SYSTEM switches located on the bottom of the thermostat case.

**First set the FAN switch (not available on all models):**

**Auto:** Normal setting for most homes. In heating, the fan may start a few minutes after the heating equipment comes on.


**On:** The fan runs continuously. Use for improved air circulation and air quality.

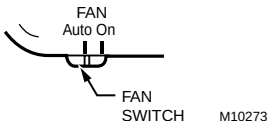

Then set the **SYSTEM** switch:

**Off:** Heating is off.

**Heat:** Normal setting for months when your home needs heating. Digital display shows a flame

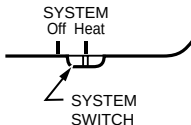


M10975

## Displaying Temperature Setting

NOTE: Your temperature setting can be set anywhere from 40° to 99°F (5° to 37°C).

The temperature setting and the room temperature are shown separately on the digital display. The ▼ indicator points to **Set** when the temperature setting is displayed and to **Room** when the room temperature is displayed.

1. To display the temperature setting on the digital display, press either the ▲ or ▼ key once.

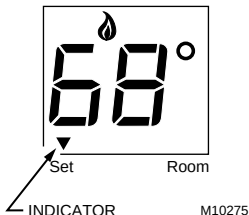

## Changing Temperature Setting

1. To lower the temperature setting, press the ▼ key.




Set

Room

M10276

2. To raise the temperature setting, press the ▲ key.

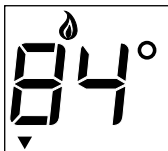

Set

Room

M10982

When in the heating mode, lowering the temperature at night or during the day can lower your energy costs.

# Troubleshooting Guide

Heating does not come on.

 
- Check that the SYSTEM switch on the thermostat is set to Heat.
- Check the system fuse or circuit breaker and replace or reset if necessary.
- Check for air movement at the register.
- Check power to the heating equipment.

Temperature setting is too warm or cool.

- Adjust the temperature by pressing either the ▲ or ▼ key.

If you have questions concerning this thermostat, call Honeywell Customer Assistance at 1-800-468-1502, Monday-Friday, 7:00 am-5:30 pm, Central time.

For service, contact your local heating and cooling contractor:



# Honeywell

---

## **Home and Building Control**

Honeywell

1985 Douglas Drive North

Golden Valley, MN 55422

## **Home and Building Control**

Honeywell Limited - Honeywell Limitée

35 Dynamic Drive

Scarborough, Ontario

M2H 3N7

Copyright © 2000 Honeywell  
All Rights Reserved  
® U.S. Registered Trademark  
69-1492 G.H. 9-00



Printed in U.S.A. on recycled  
paper containing at least 10%  
post-consumer paper fibers.

[www.honeywell.com/yourhome/](http://www.honeywell.com/yourhome/)