

Untitled

If you are having problems - try following these directions:

Step 1: Put the batteries in the stat and make sure its not calling for anything. (heat, cool or fan)

Step 2: Hook up the power to R & C on the receiver.

(make sure dip switches are in the off position)

(make sure jumper between R & RZ1 is in place)

(NO LEDS WILL BE ON YET)

Step 3: Turn dip switch #1 on (zone 1 red LED starts to flash)

Step 4: Push the fan button on the stat to call for fan. (After a few seconds both green comm & Z1 red LEDS will start flashing and then only the green Z1 LED remains on solid)(push the fan button again and after a few seconds the Z1 LED goes off) The stat is now set.