



Installation Quick Start Guide for WSG-3 Important Installation Instructions

- 1 Locate the filter cartridge holder in the back upper right hand corner of the refrigerator. To open the cartridge cover, push in where indicated and the cover will drop down.

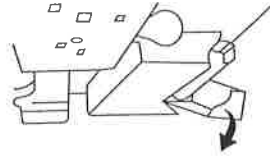

- 2 Remove old filter by slowly rotating it to the left. A small amount of water may drip down.

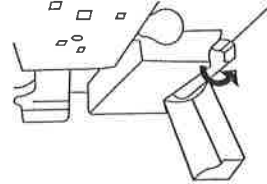


- 3 Carefully remove the plug on top of the new filter (twisting it back and forth eases the plug out). Be careful not to remove the o-ring located under the plug. IF THE O-RING IS MISSING, PLEASE CALL (866) 218-8473 FOR HELP.



- 4 Position the cartridge inside the cartridge holder and slowly rotate the cartridge to the right until it stops. When the cartridge is properly installed, you will feel it "click" as it locks into place. The blade on the end of the cartridge should be positioned vertically. Do not overtighten.



- 5 Close the cartridge cover.

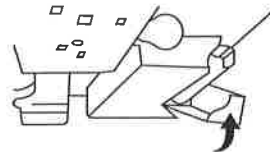

- 6 Run water from the dispenser for 5 minutes at .5 gpm (about 2½ gallons) to clear the system and prevent sputtering.



- 7 Locate the included Water Filter Replacement Calendar, and place dark circle over the month you installed your new filter. The light circle will indicate your next replacement month (May vary with water conditions and usage).

For further questions or assistance please call (866) 218-8473.

Do not use where water is microbiologically unsafe or of unknown quality.

Protect from freezing.

REPLACE FILTER EVERY 6 MONTHS, OR IF BAD TASTE OR ODOR OCCUR

The risk associated with small parts can cause choking if swallowed.
Keep children away from small parts during the replacement of the water filter.