

WaterSentinel®

Installation Instructions for the WSG-1

STEP 1



Locate filter inside the refrigerator. First slowly turn the cartridge 1/4 turn to the left and remove.

STEP 2



Remove all packaging, apply date label if required as a reminder to replace the filter within 6 months and remove the red plug from the top.

STEP 3



Check o-ring is flat in top of filter, fill filter with water. Insert filter into refrigerator and turn 1/4 to 1/2 turn to the right - label in front. Do not overtighten.

STEP 4

Reset Water Filter



Run water for 5 minutes through the dispenser to flush the filter. Reset the light if needed by holding down the reset filter button for 3 seconds.

The filter cartridge should be replaced every 6 months or sooner if the flow of water to the dispenser or ice maker decreases.