CABIN AIR FILTER REPLACEMENT

Recommended Replacement Interval: 15,000 miles under normal operating conditions.

LEXUS LS460 '08-'07 (FRONT)

Installation Time: 10 min

Tools needed: n/a

Location: Under the glove compartment

- 1. With the ignition on, set the air conditioner to "Recirculate" mode (Note, the cabin air filter case cannot be removed in "Outside Air" mode).
- 2. Turn ignition off.
- 3. Open glove compartment and remove divider.
- 4. Remove the filter cover.
- 5. Remove the filter case from the housings.
- 6. Replace old filter with new filter making sure the flow arrow is pointing in the correct direction.
- 7. Reassemble in reverse order.