



# Airiva™ External Frost Control Instructions

## TOOLS NEEDED

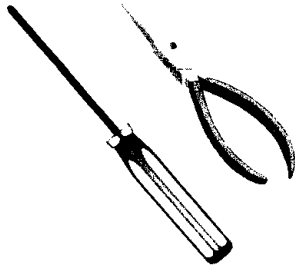


## STEP 1:

Using needle-nose pliers, remove the screw cap

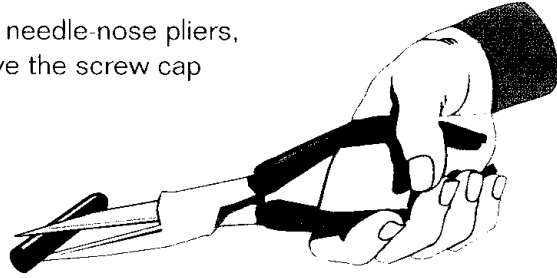


## STEP 2:

Remove pictured screw with Phillips screwdriver

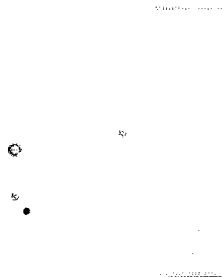


## STEP 3:

If 3 or more days in a month fall into one of the temperature ranges below, use the bracket hole corresponding with that temperature range.

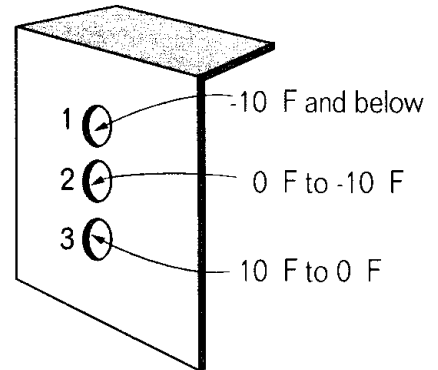

## STEP 4:

Holding back the damper, hook the bracket behind the damper, lining up the correct bracket hole with the screw hole and screw the nut back onto the screw.

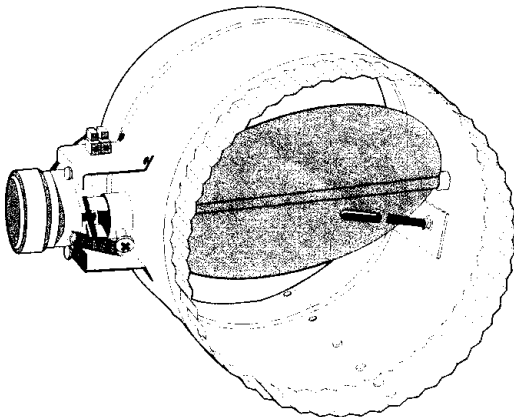

## STEP 5:

Wiring for external frost control

Optional 6" Damper  
Not Included (field supplied)  
**SUNCOURT MODEL ZO106P**

Airiva™  
Control  
Panel

