


DELUXE PROGRAMMABLE **THERMOSTATS** 

# Models 9851i, 9865i and 9870i **Quick Start Installation Manual**



111-340

Mark mounting hole locations on wall.

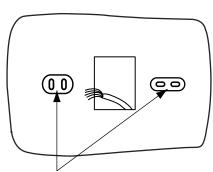

Mark mounting hole locations on wall using unit base as template.

### Installation DOs and DON'Ts

#### DO

- Shut off all power to system before installing.
- Read entire manual before installing.
- Make sure that all wiring conforms to national and local codes.


#### DO NOT

4

- Install on voltages greater than 30 VAC.
- Short jumper across terminals on the gas valve or at the system control.
- Connect ground to any terminal in this unit.
- Install on outside walls or in direct sunlight.


Drill 3/16" holes at marked locations on

wall. Insert plastic anchors into holes.

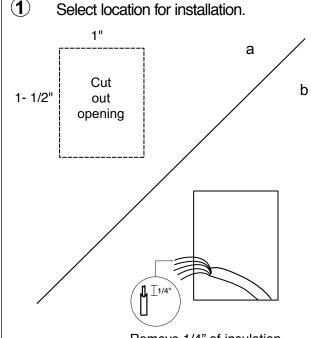


Remove 1/4" of insulation from end of each wire


Open the case with a screwdriver. Place in slot and gently pry forward at all four locations.

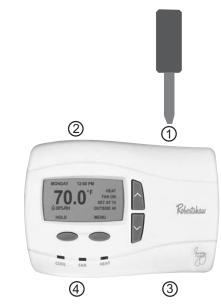

Align unit base over plastic anchors embedded in wall and secure with the screws provided.

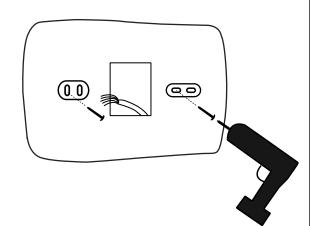

Connect wiring between unit and furnace. For Model 9851i (1H/1C furnace applications):

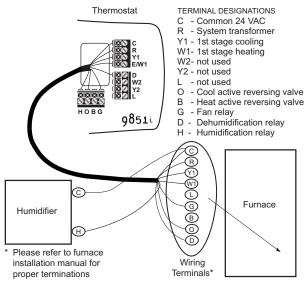


Note: To avoid electrical problems, use the system transformer for both




Drill 3/16" holes


Press anchors into holes until flush.

NOTE: For 9851i single stage heat pump applications, place a jumper between the W1 and Y1 terminals.

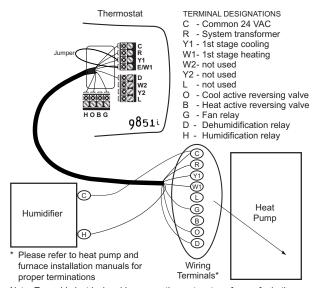


Note: To avoid electrical problems, use the system transformer for both the thermostat and humidifier.

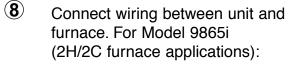

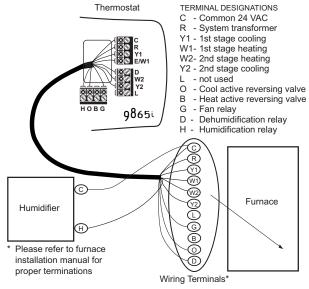


Note: To avoid electrical problems, use the system transformer for both the thermostat and humidifier.


Connect wiring between unit and heat pump. Jumper W2 to E/W1 for control of auxiliary heat in both 2<sup>nd</sup> stage and emergency modes. For Model 9870i (2H/2C heat pump applications):

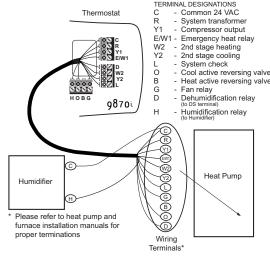

Note: To avoid electrical problems, use the system transformer for both the thermostat and humidifier.

Connect wiring between the thermostat and the indoor sensor (9020i) and the outdoor sensor (9025i), if used. Use twisted pair wiring (22AWG minimum) with a maximum length of 300 feet (or 100m).

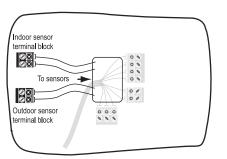

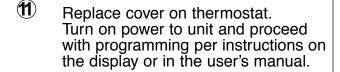




### **Set Your Name**

To set your name and phone number into the thermostat press MENU, select INSTALLER SETTINGS, and CONTACT INFORMATION. The screen at the bottom left should appear.

To enter your name press EDIT.
Use the UP or DOWN button to scroll through the characters.
(DOWN gets you to the letters faster.) After each letter press NEXT.
When you are done entering your name, press ACCEPT.

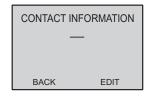

CONTACT INFORMATION
AIR EXPERTS

ACCEPT NEXT

## **13** Set Your Phone Number

Now enter your phone number. Use the UP and DOWN arrow to select the first number. Press NEXT. When you have completed entering your phone number, press ACCEPT.

The screen will return to the INSTALLER SETTINGS. Finish setting the thermostat for the application.



CONTACT INFORMATION

AIR EXPERTS
1-555-555-1212

ACCEPT NEXT

## Recycling Thermostat

If this thermostat REPLACES a thermostat that contains mercury, DO NOT discard the old thermostat in the regular trash. Mercury is harmful to humans and the environment. For this reason, do not open, break, or crush the mercury cell. If mercury leaks from a damaged cell, DO NOT touch or handle mercury with bare hands. Use protective, non-absorbent gloves to place mercury into a sealable container. Fill the container with sand or another absorbent material and seal the container completely.

Return the mercury or mercury products, in a sealed container, to Invensys Climate Controls or a local recycling center for proper disposal. If you have any questions, call Robertshaw technical support at 1-800-445-8299.

Invensys Climate Controls 28C Leigh Fisher Blvd. El Paso, TX 79906 Attn: Mercury Recycling Center

#### invensys.

Climate Controls Americas 515 South Promenade Avenue Corona, CA 92879-1736 United States of America Made in Mexico www.about-i-series .com