



Temp-Limiter™

Installation Instructions

Models TL-70H and TL-73H

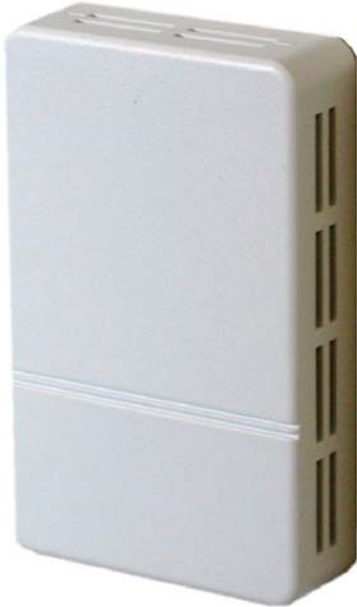


The internal limiter prevents space temperatures from exceeding 73° F (Model TL-73H) or 70° F (Model TL-70H) regardless how high the thermostat is set. Control accuracy is +/- 2° F. Temp-Limiter™ is designed to be wired between the room thermostat and the furnace.

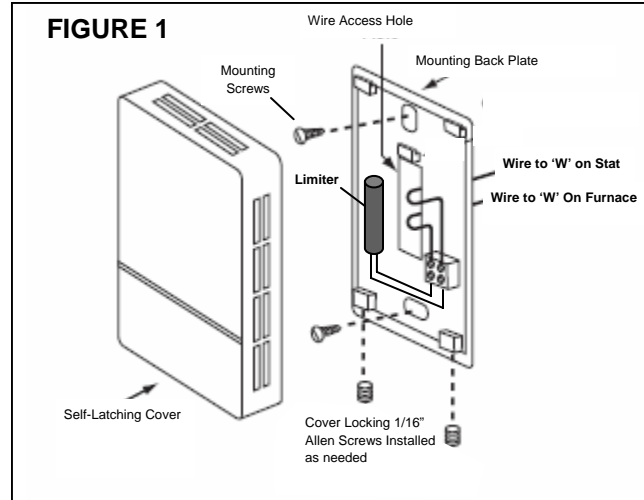

WIRING INSTRUCTIONS

1. Turn off power to furnace.
2. Remove self-latching cover from Temp-Limiter™ and locate mounting plate 4" to 6" away from thermostat. Mark and drill holes for mounting screws and wire access. (see Figure 1)
NOTE: Make sure there is no wall stud between thermostat and Temp-Limiter™.
3. Remove the room thermostat cover to access wiring terminals.
4. Fish a one-foot length of 18-2 thermostat wire between the Temp-Limiter™ and the thermostat. (see Figure 2)
5. Remove the wire from the 'W' terminal on the thermostat and attach it to one of the wires leading to the Temp-Limiter™ with provided wire nut.
6. Attach the other wire from the Temp-Limiter™ to the 'W' terminal.

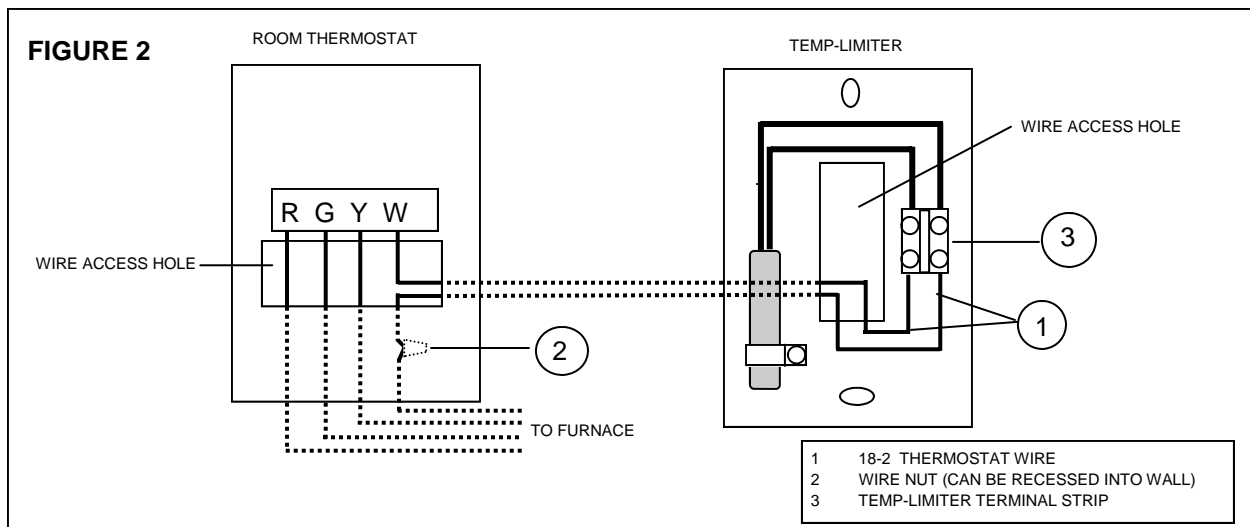

Jackson
SYSTEMS