

VENSTAR®

**COMMERCIAL
THERMOSTAT
T2700**

**DIGITAL
THERMOSTAT**



**NON-
PROGRAMMABLE**

**UP TO 2-HEAT
& 2-COOL**

**HEAT
COOL & HEAT
PUMP**

- Control up to 3 Heat & 2 Cool Stages
- 3 Configurable Outputs
- Backlit Display & Button Legends
- Aux Heat Indicator
Dry Contact Equipped
- Soft Start
- Set Point Limiting
Remote Sensor Ready
- Outdoor Sensor Ready
- Accepts EZ Programmer™
- Accepts Optional Humidity Module: Controls Humidification and Dehumidification
- Accepts Optional IR Remote Control
Accepts Comfort Call
Phone Control Accessory™

• Use with most Air Conditioning & Heating Systems including: 1 or 2 Stage Electric Cooling & 3 Stage Gas Heating, Heat Pump, Electric or Hydronic Heat.



**OWNER'S
MANUAL**

© Venstar Inc. 08/07

VENSTAR®

 **CAUTION**

Follow the Installation Instructions before proceeding.
Set the thermostat mode to "OFF" prior to changing
settings in setup or restoring Factory Defaults.

 **CAUTION**


NEVER PUT MORE THAN ONE
JUMPER ON THE SAME MISC
JUMPER BLOCK!

THIS MAY DAMAGE YOUR
THERMOSTAT AND VOID
YOUR WARRANTY.



NOTE: Due to variations in environmental conditions, it is not
always possible to achieve the desired humidification or
dehumidification setpoint.

This device complies with Part 15 of the FCC Rules. Operation is
subject to the following two conditions: (1) this device may not cause
harmful interference, and (2) this device must accept any interference
received, including interference that may cause undesired operation.



How to Use This Manual

VENSTAR®

The Table of Contents divides the thermostat features into sections making it easier to quickly find information.

The first page of each section contains a more detailed list of the contents within that section, such as the example page shown below.

The diagram shows a page layout for Section 14. At the top, a black header bar contains the text "SECTION 14" and "Timers and Deadbands" on the left, and the "VENSTAR" logo on the right. Below the header, the text "Section 14 Contents:" is followed by a bulleted list of sub-sections with page numbers. A small black tab with the number "14" is positioned to the right of the list. At the bottom left of the page, the text "Page 14.1" is visible. Callout arrows point to various elements: the header bar, the list items, the "14" tab, and the page number.

SECTION 14
Timers and Deadbands **VENSTAR®**

Section 14 Contents:

- *Adjusting the Heat/Cool Differential.....14.2*
- *Adjusting the Cycles Per Hour.....14.3*
- *Adjusting the Deadband.....14.4*
- *Adjusting the Minutes of Run-Time Before the Next Stage.....14.6*
- *Selecting 2nd Stage Turn Off Temperature.....14.7*

14

Page 14.1

Header shows section # and title of section

Section contents

Visible section tab on the side of the page

Section and page #

In addition, this manual also has an Index to help you find any information regarding this thermostat quickly.

Auto-Changeover: A mode in which the thermostat will turn on the heating or cooling based on room temperature demand.

Configurable Output Jumper: Using jumpers on the thermostat you can configure the MISC1, MISC2, and MISC3 terminals to control humidification, dehumidification, and 2nd stage cooling.

Cool Setpoint: The warmest temperature that the space should rise to before cooling is turned on (without regards to deadband).

Deadband: The number of degrees the thermostat will wait, once setpoint has been reached, before energizing heating or cooling.

Dehumidify: To reduce the amount of moisture in the air.

Differential: The forced temperature difference between the *heat setpoint* and the *cool setpoint*.

Heat Setpoint: The coolest temperature that the space should drop to before heating is turned on (without regards to deadband).

Humidify: To increase the amount of moisture in the air.

Icon: The word or symbol that appears on the thermostat display.

Mode: The current operating condition of the thermostat (i.e. Off, Heat, Cool, *Auto*).

Non-Programmable Thermostat: A thermostat that does not have the capability of running the *Time Period Programming*.

Temperature Swing: *Same as Deadband.*

Table of Contents

VENSTAR®

<i>Quick Start</i>	1
<i>Getting to Know Your Thermostat</i>	2
<i>Basic Operation</i>	3
<i>Viewing Temperature and Humidity Sensors</i>	4
<i>Override Operation</i>	5
<i>Programming the Fan Operation</i>	6
<i>Thermostat Display Options</i>	7
<i>Humidification</i>	8
<i>Dehumidification</i>	9
<i>Viewing Equipment Run-Times</i>	10
<i>Electric Heat and Heat Pump Operation</i>	11
<i>Timers and Deadbands</i>	12
<i>Programming Remote Sensor Operation</i>	13
<i>Programming the Dry Contact</i>	14
<i>Programming the Run-Time Alerts</i>	15
<i>Configuring the MISC Outputs</i>	16
<i>Factory Defaults, Calibration, and Sensors</i>	17
<i>Accessories</i>	18
<i>Advanced Setup Table</i>	19


Section 1 Contents:

- **Selecting the Heat or Cool Mode.....1.2**
- **Selecting Your Desired Temperature.....1.3**
- **Using the Fan Button.....1.3**

***Note:** Following the instructions in this section will allow you to operate your thermostat using the factory default settings. These settings are depicted in the illustrations throughout this manual.*

Selecting the Heat or Cool Mode

Select Mode by Pressing the MODE Button

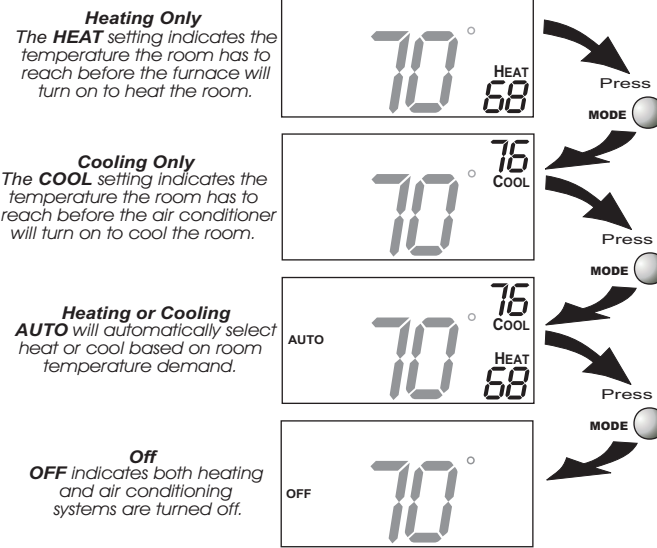

1 *Selecting Your Desired Temperature
(adjusting the setpoints)*

AUTO MODE

Pressing the UP or DOWN buttons in Auto mode will adjust **both** the heat and cool set temperatures simultaneously.



Adjust the desired set temperature with the



buttons.

HEAT OR COOL MODE

Pressing the UP or DOWN buttons in Heat **or** Cool mode will adjust only the heat **or** cool set temperature.



Adjust the desired set temperature with the



buttons.

Using the Fan Button



Press
FAN

Fan On indicates constant fan operation. If Fan On is selected the fan will run continuously at all times, except in Off, **and** will only run if there is a heating or cooling demand in Unoccupied periods. Pressing the FAN button toggles this feature on or off.

SECTION 2
Getting to Know Your Thermostat



VENSTAR® 2

Section 2 Contents:


- *Front Panel Buttons*.....2.2
- *Display Features*.....2.3

Front Panel

2

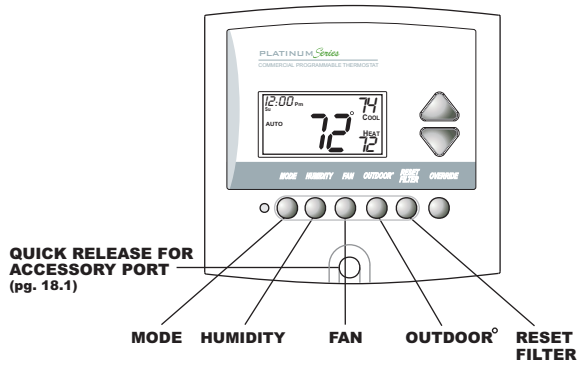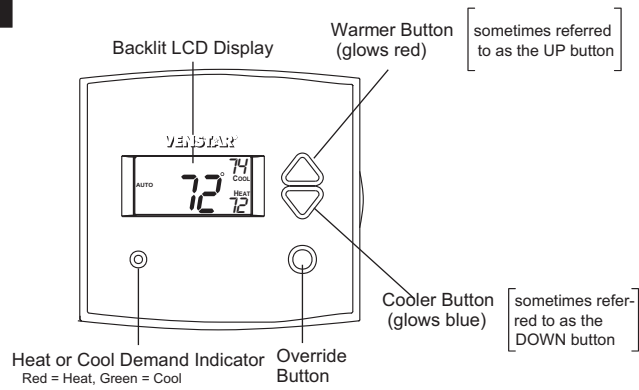


Display Features

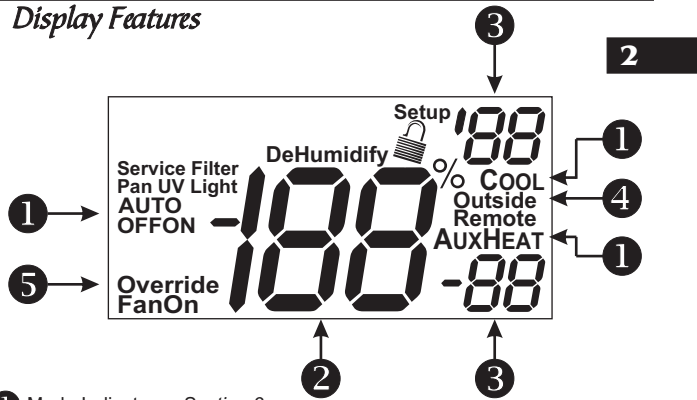


- 1** Mode Indicators - *Section 3*
 Selects the operational mode of the equipment.
HEAT - Indicates the heating mode.
COOL - Indicates the air conditioning mode.
AUTO - Indicates the system will automatically changeover between heat and cool modes as the temperature varies.
OFF - Indicates heating and cooling is turned off.
- 2** Room Temperature Display - *Section 4*
 Indicates the current room temperature and displays the outdoor temperature when selected.
- 3** Desired Set Temperature - *Section 3/4*
 Indicates desired room temperature(s). Also displays the daily maximum and minimum outdoor temperatures.
- 4** **Outside** icon - *Section 4*
 Indicates the temperature displayed is from the optional outdoor sensor.
- 5** **Override** icon - *Section 5*
 Indicates the Unoccupied mode of the thermostat is being overridden for up to 4 hours.

Display Features


2

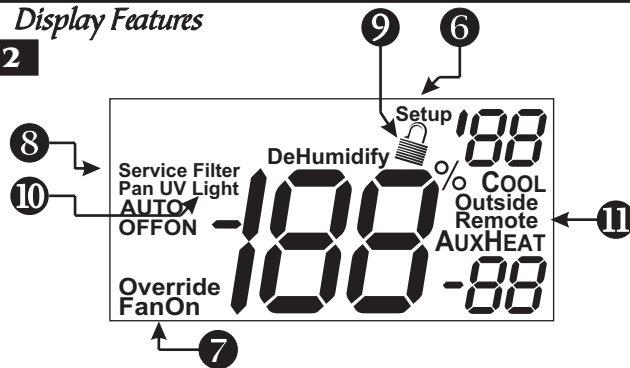

- 6** **Setup** icon - *Sections 6-15*
Indicates the thermostat is in the setup mode.
- 7** **Fan On** icon - *Section 6*
Indicates constant, continuous fan operation. When **Fan On** is not lit - indicates the fan will only operate when necessary to heat or to cool.
- 8** **Service Filter** icon - *Section 15*
Appears when the filter should be serviced under normal conditions. Adjustable from 0 - 1950 hours of blower operation.
- 9**  icon - *Section 7*
Indicates keypad has been locked.
- 10** **UV Light** icon - *Section 10/15*
Appears when the UV bulb should be serviced under normal conditions. Adjustable from 0 - 1950 days of operation.
- 11** **Remote** icon - *Pages 4.2, 13.3 & 17.3*
Indicates the remote sensor reading of the thermostat is being viewed.

Display Features

2

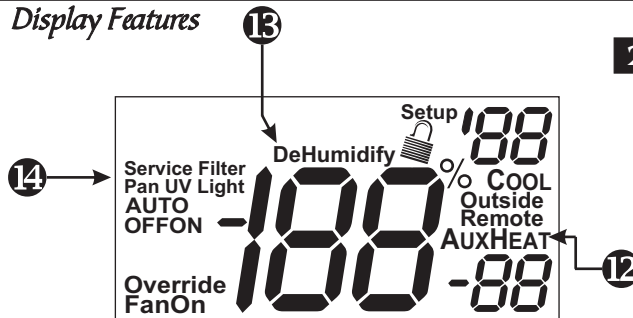

- 12** **AuxHeat icon - Page 12.4**
 Indicates 2nd stage electric strip heat is being used when the thermostat is programmed for Heat Pump operation.
- 13** **Humidify/DeHumidify icon - Sections 8-9**
 Indicates the system is currently humidifying/dehumidifying the air.
- 14** **Service Pan icon - Section 14**
 Indicates that a sensor (accessory) has detected the condensate drain pan is full and the compressor (Y1) has been locked out.

Section 3 Contents:

- *Programming for Auto or Manual Operation.....3.2*
- *Selecting the Proper Operating Mode.....3.3*
- *Selecting Your Desired Temperature.....3.5*




Note: During setup & programming pressing the UP or DOWN buttons will modify the flashing selection.

**Manual or Auto-Changeover
Thermostat**



3

When the very simplest operation is desired, this thermostat may be configured to be a manual heat and cool thermostat. Follow the step below.

The thermostat may be programmed to function as a Heat Only or Cool Only thermostat by selecting 'NO' in the setup screen below. This will lockout the Auto-Changeover screen and only allow the Off, Heat, and Cool screens to be accessed.

- MODE**  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*
- HUMIDITY** 
- MODE**  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

- YES**  Select Yes if you would like the thermostat to be Auto-Changeover or No for a Heat Only and Cool Only Thermostat.
- NO** 



Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Operating Mode when the Thermostat is Configured to be:

3 MANUAL-CHANGEOVER - If the thermostat is configured to be Manual-Changeover, the following screens will be available by pressing the MODE button.

Select the Mode by Pressing the MODE Button


Heating Only
The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.



Cooling Only
The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.



Off
OFF indicates both heating and air conditioning systems are turned off.

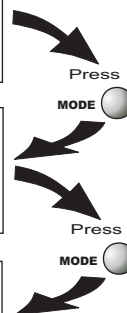

Operating Mode when the Thermostat is Configured to be:

AUTO-CHANGEOVER - If the thermostat is configured to be Auto-Changeover, the following screens will be available by pressing the MODE button.

3

Select the Mode by Pressing the MODE Button

Heating Only
The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.




Cooling Only
The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.



Heating or Cooling
AUTO will automatically select heat or cool based on room temperature demand.



Off
OFF indicates both heating and air conditioning systems are turned off.

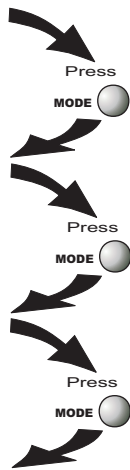

Selecting Your Desired Temperature (adjusting setpoints)

3 **AUTO MODE**

Pressing the UP or DOWN buttons in Auto mode will adjust **both** the heat and cool set temperatures simultaneously. For more information on this see page 12.2.



Adjust the desired set temperature with the



buttons.

HEAT OR COOL MODE

Pressing the UP or DOWN buttons in Heat or Cool modes will adjust only the heat or cool set temperature.



Adjust the desired set temperature with the



buttons.

SECTION 4
Viewing the Temperature and Humidity Sensors

VENSTAR®

4


Section 4 Contents:

- *Viewing the Outdoor
Temperature.....4.2*
- *Viewing the Viewing the Indoor
Humidity.....4.3*

Viewing the Outdoor Temperature

Requires an outdoor sensor (optional accessory) to be installed (see page 13.2 for wiring instructions). To read the temperature from the outdoor sensor, press the OUTDOOR button. The display will then show the current outdoor temperature.

4



Press the OUTDOOR button to view the Outdoor temperature.



The current outdoor temperature will be displayed. This reading is from the sensor connected to RS2.



Current outdoor temperature.


This reading is from the sensor connected to RS1.



Press **MODE**



Press the OUTDOOR button to leave the Outdoor temperature screen.




Note: If no sensors are connected 2 dashes [- -] will appear on the display.

Viewing the Indoor Humidity

Requires the Humidity Module (optional accessory) to be installed. To display the current humidity at the thermostat, press the HUMIDITY button. The display will then show the current indoor humidity along with the humidification setpoint (Section 8).

4

Note: The humidity reading will not appear unless the Humidity Module has been installed. If the Humidity Module has not been installed dashes will appear in place of the humidity reading.

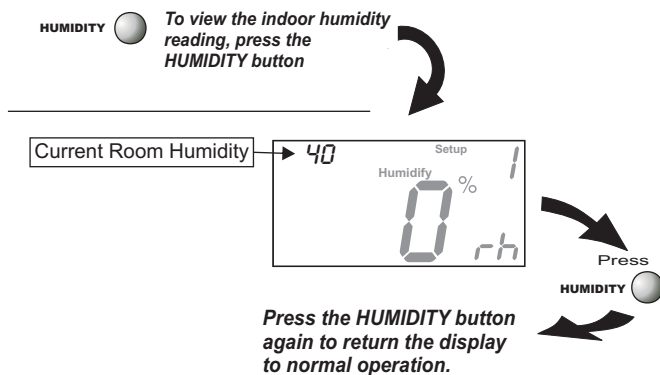

NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

SECTION 5 Override Operation

VENSTAR®


Overriding the Normal Operation

The OVERRIDE button may only be used when the Dry Contact has forced the thermostat into the Unoccupied mode.

Unoccupied Operation - During a Dry Contact forced unoccupied period pressing the OVERRIDE button will temporarily force the thermostat into the mode it was in before the Dry Contact forced it into the Unoccupied mode. For example: If the thermostat was in the Auto mode and the Dry Contact forced the thermostat into the Unoccupied mode, then pressing the OVERRIDE button will force the thermostat back into the Auto mode.

The remaining override time will be displayed in the upper left hand corner of the display. The override timer can be set up to a maximum of four (4:00) hours, in increments of 30 minutes. If the timer has been set for the maximum time, the next press of the OVERRIDE button will reset the timer, returning the thermostat to the Unoccupied mode.

To adjust the setpoints for the Unoccupied mode, see page 15.4.

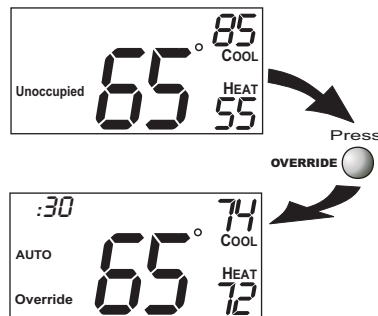

SECTION 6
Programming the Fan Operation

VENSTAR®


Section 6 Contents: **6**

- *Using the Fan Button.....6.2*
- *Smart Fan Operation.....6.2*
- *Setting the Fan-Off Time
Delay.....6.3*

Using the Fan Button

When the fan is set for automatic operation it will energize any time there is a call for heating or cooling, otherwise the fan will remain off. Pressing the FAN button will energize the fan and display the **FanOn** icon on the thermostat display. To operate the fan in the automatic mode, press the FAN button again and the FanOn icon will disappear.

6



Fan On indicates constant fan operation. If Fan On is selected the fan will run continuously at all times, except in Off, **and** will only run if there is a heating or cooling demand in Unoccupied periods. Pressing the FAN button toggles this feature on or off.

Smart Fan Operation


This feature allows the fan to run continuously in Heat, Cool or Auto mode, and automatically de-energize during dry contact initiated Unoccupied periods (see page 14.3), except when necessary to heat or cool. To use this feature, place the thermostat in the Heat, Cool or Auto mode. Next, press the FAN button to display the **FanOn** icon (see below).





Setting the Fan-Off Time Delay

To increase cooling efficiency of your unit, the thermostat may be programmed to continue running the fan after a call for cooling has been satisfied. This delay may be set for 30, 60, or 90 seconds. If the Fan Off Delay is set for zero seconds, the fan will not energize after a call for cooling has been satisfied.


6


MODE  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*


HUMIDITY 

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

 Set the Fan Off Delay to 0, 30, 60, or 90 seconds.

 The diagram shows a rectangular display screen. At the top right, the word "Setup" is displayed. In the center, the time ":00" is shown. At the bottom left, the text "FanOn" is visible. To the right of the screen, a large number "2" is shown, indicating the current setting. An arrow points from the "MODE" button instruction to the top right corner of the screen.


Press 


Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Section 7 Contents:

- *Turning On/Off the*
7 *Backlight.....7.2*
- *Programming the Thermostat*
to Display Temperature in
Fahrenheit or Celsius.....7.2
- *Locking/Unlocking the*
Keypad.....7.3
- *Programming a Security*
Level.....7.4

Turning On/Off the Backlight


MODE  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*




Select backlight operation:
ON - Light continuously.
OFF - Light for 8 seconds after a button press.

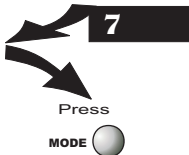

Programming the Thermostat to Display Temperature in Fahrenheit or Celsius




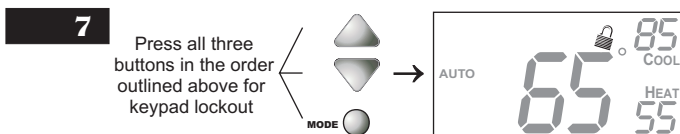
C
 Select thermostat operation in degrees Fahrenheit or Celsius.
F

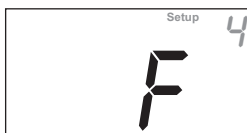


Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Locking/Unlocking the Keypad




To prevent unauthorized use of the thermostat, the front panel buttons may be disabled. To disable, or 'lock' the keypad, press and hold the MODE button. While holding the MODE button, press the UP and DOWN buttons together. The  icon will appear on the display, then release the buttons.



To **unlock** the keypad, press and hold the MODE button. While holding the MODE button, press the UP and DOWN buttons together. The  icon will disappear from the display, then release the buttons.

Programming a Security Level

When a security level has been programmed, the thermostat will allow limited adjustment to the setpoints (*steps # 6 and 7*). In security levels 2 and 3, the thermostat is forced into the Program On mode. To disable the security feature, set the value in step #5 to 0; this will cause steps # 6 and 7 not to appear.

-  **MODE** Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.
 -  **HUMIDITY**
 -  **MODE** Press the **MODE** button repeatedly until this setup screen appears.
- Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.*

7




Select the security level:
 0=No security in effect
 1=Setpoint range limited
 2=1+ locked in current mode.
 3=2 + prohibits setpoint changes


Step #6 appears only if step #5 is not 0.


Adjust the maximum allowable heat setpoint when security is in effect.
 (35° - 99°)


Step #7 appears only if step #5 is not 0.

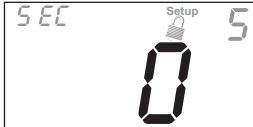
Adjust the minimum allowable cool setpoint when security is in effect.
 (35° - 99°)

Press 

Press 

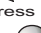Press 

Press 

Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Section 8 Contents:

8

- *Installing the Humidity Module.....8.2*
- *Setting a Thermostat Jumper for Humidity Operation.....8.3*
- *Adjusting the Humidification Setpoint.....8.4*

NOTE: *The humidification functions described in this section will only be available if a Humidity Module has been properly installed.*

Disclaimer:

The manufacturer of this thermostat cannot be liable for misinstallation, improper connection or improper programming of the humidity functions of this thermostat that may result in water damage or mold growth.

Additionally, the manufacturer of this thermostat is not responsible for the fitness of the humidifier and/or installation of said humidifier connected to this thermostat. Furthermore, the maintenance of the humidifier components, including but not limited to, the filters and pads are not the responsibility of the thermostat manufacturer.

The Humidifier Service icon is only a suggestive reminder and should not take the place of the humidifier manufacturer's required maintenance requirements and schedule.

Installing the Humidity Module

To install the Humidity Module the thermostat must be detached from the back plate. Plug the Humidity Module into the Humidity Module connector as shown in Figure 2 below. Follow the detailed instructions included with the Humidity Module accessory. Once the Humidity Module has been installed, you must adjust the Humidity jumper setting to HUM as shown in Figure 1 below. This will allow you to access the humidification and dehumidification setup steps.

For proper humidity operation, this jumper must be set for HUM.

8



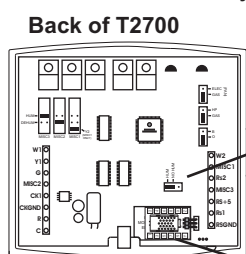


Figure 1

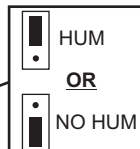

Install the Humidity Module (see Humidity Module Instruction Sheet for more detailed information).


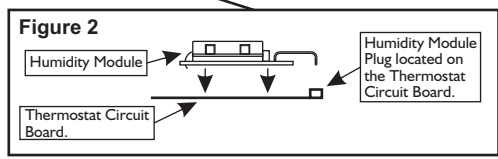


Setting a Thermostat Jumper for Humidity Operation

To control a MISC output for humidification, place the MISC1, MISC2, or MISC3 jumper on the terminal labeled HUM (see diagram below). This will supply 24VAC to the selected MISC terminal based on the humidification programming in the following pages. Only one of the three outputs (MISC1, MISC2, or MISC3) is required to have this jumper. For more information regarding the MISC1, MISC2, and MISC3 outputs, please see Section 16.

8

In the diagram below, the MISC3 jumper has been set for HUM (humidify) operation.

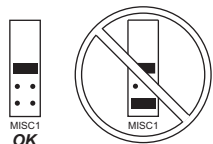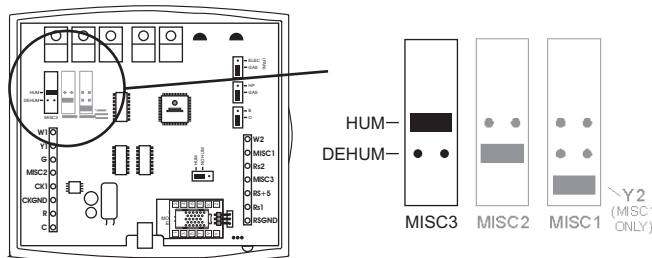

IMPORTANT CAUTION


NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!
THIS MAY DAMAGE THE THERMOSTAT AND VOID YOUR WARRANTY

Adjusting the Humidification Setpoint

If your HVAC unit is equipped with a humidification system and the Humidity Module has been installed, the thermostat will provide power to the appropriate terminal on the backplate of the thermostat when the humidity in the home falls below the setpoint you have chosen. The value for this setpoint ranges from 0% to 60%.

NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

8

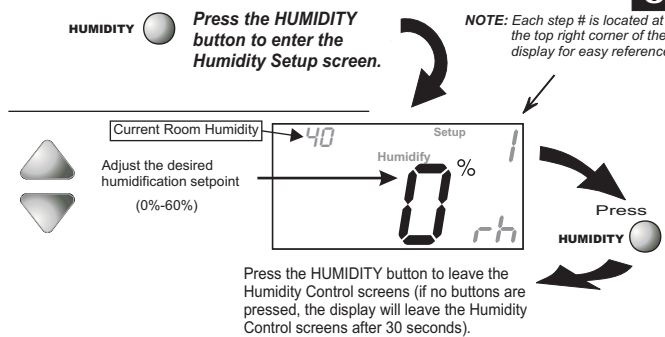

Humidification Notes: Press the  button to set the humidity setpoint to 0% for no humidification operation.

You cannot set the dehumidify setpoint any lower than the humidify setpoint; a 5% differential is forced between the humidify and dehumidify setpoints.

Section 9 Contents:

- *Configuring a Thermostat Output Jumper for Dehumidification Operation.....9.2*
- *Adjusting the Dehumidification Setpoint.....9.3*
- *Using Your Air Conditioner to Dehumidify.....9.4*
- *Using the DEHUM Terminal.....9.5*


NOTE: The dehumidification functions described in this section will only be available if a Humidity Module has been properly installed. For instructions on installing the Humidity Module please see page 8.2.


Setting a Thermostat Jumper for Dehumidification Operation

To control a MISC output for dehumidification, install the Humidity Module and place the Humidity Jumper on HUM (see page 8.2). Then place the MISC1, MISC2, or MISC3 jumper on the terminal labeled DEHUM (see diagram below). This will supply 24VAC to the selected MISC terminal based on the programming in the following pages. Only one of the three outputs (MISC1, MISC2, or MISC3) is required to have a jumper. For more information regarding the MISC1, MISC2, and MISC3 outputs, please see section 16.

9


In the diagram below, the MISC2 jumper has been set for DEHUM (dehumidification) operation.

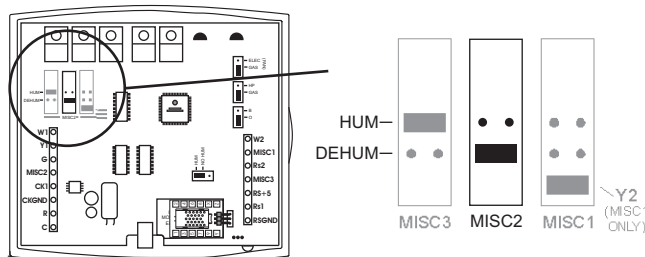

IMPORTANT CAUTION 

NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!

THIS MAY DAMAGE THE THERMOSTAT AND VOID YOUR WARRANTY

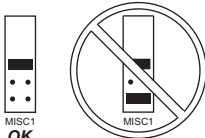

Adjusting the Dehumidification Setpoint


Dehum Terminal: If a MISC terminal selected for DEHUM operation (see page 9.2) then the thermostat will provide power to this terminal when the humidity in the home is above the setpoint you have chosen. See page 9.6 for detailed programming instructions. To utilize this feature your HVAC unit must be equipped with a DEHUM terminal.

Cool to Dehumidify: If the thermostat is programmed for Cool to Dehumidify operation, then the thermostat will energize the cooling system any time the humidity in the home is above the setpoint you have chosen. See page 9.4 for detailed programming instructions.

In each case, when the indoor humidity falls below the setpoint you have selected, Cool to Dehumidify and the MISC terminal will be de-energized. The value for this setpoint ranges from 25% to 99%.

9

NOTE: Due to variations in environmental conditions, it is not always possible to achieve the desired humidification or dehumidification setpoint.

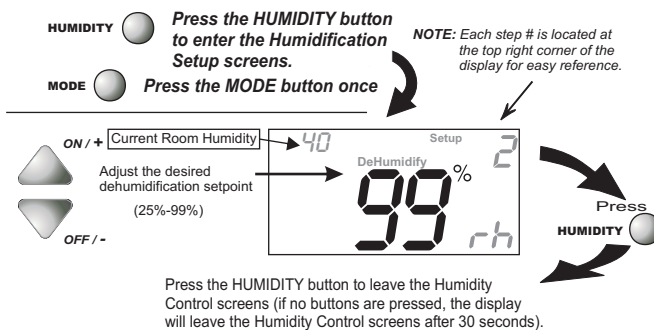


Dehumidification Notes: Press the ▲ button to set the dehumidification setpoint to 99% for no dehumidification operation. This will lockout Advanced Setup steps 8 and 9 (see page 9.4).

You cannot set the dehumidify setpoint any lower than the humidify setpoint; a 5% differential is forced between the humidify and dehumidify setpoints.


Using Your Air Conditioner to Dehumidify

If Cool to Dehumidify is on and the Humidity Module is installed, the thermostat has the ability to initiate a cooling cycle for advanced dehumidification operation. When the thermostat detects the humidity percentage is above the setpoint for dehumidification, and heating or cooling is not on, the thermostat will force the compressor to run with the fan, thus reducing moisture in the air. The green LED will blink once every eight seconds to indicate this is taking place. This feature will also allow you to adjust the cooling overshoot of the setpoint, from 0° to 5° (adjustable in step #9). *For Example: If the cooling overshoot is set for 3°F and the cooling setpoint is set for 74°F, then as long as the room temperature reads between 71°F and 74°F this feature will energize the compressor and fan to dehumidify the air.*



MODE  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.

Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.

9

MODE  Press the **MODE** button repeatedly until this setup screen appears.



Steps 8 and 9 only appear if the Dehumidification setpoint is not 99% (see page 9.3).


On
 Select Cool to Dehumidify feature.
Off




Press **MODE**

Step 9 appears only if step 8 is set to "ON"

Adjust the maximum overshoot of the set temperature in Cool to Dehumidify mode. (0°- 5°)

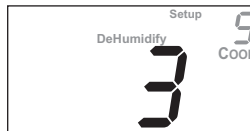



Press **HUMIDITY**

Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Dehumidification Notes: The thermostat must be in the Cool or Auto mode for the Cool to Dehumidify feature to be available.

Using the Dehum Terminal

If you configure a MISC output jumper for DEHUM, it may be programmed to operate in one of two ways:

- 1) **Normally Closed (NC):** The thermostat will de-energize the DEHUM terminal to allow the fan to run in low speed when there is a call for 1st stage cooling and the room humidity is greater than the dehumidification setpoint.
- 2) **Normally Open (NO):** The thermostat will energize the DEHUM terminal to allow the fan to run in low speed when there is a call for 1st stage cooling only and the room humidity is greater than the dehumidification setpoint.

9

MODE *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*


HUMIDITY

MODE *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

NC Normally Closed (NC) = DEHUM de-energized for low speed fan.

NO Normally Open (NO) = DEHUM energized for low speed fan.

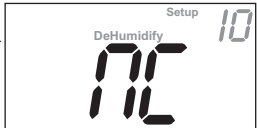

Press HUMIDITY

Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Dehumidification Notes: The DEHUM terminal will “release” and allow the fan to operate normally if there is call for 2nd stage cooling or if the call for Cooling and/or Cool to Dehumidify has been satisfied.

SECTION 10
Viewing Equipment Run-Times




VENSTAR®

Section 10 Contents:

- *Viewing the Override
Run-Time.....10.2*
- *Viewing the Humidifier
Run-Time..... 10.3*
- *Viewing the UV Light* **10**
Run-Time.....10.4


Viewing the Override Operation Run-Time

This display will track the number of hours that your thermostat has been operating in the Override mode (see page 5.1). Press the FAN button to reset the counter.

- MODE**  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.
- HUMIDITY** 
- MODE**  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*

- 10** Press  Counts the number of hours Override has been active. Press **FAN** to reset the Override Run-Time counter.

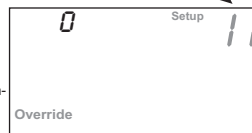



Press 

Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Viewing the Humidification Run-Time


After your humidification system has been operating for the number of days set in step #12 below, the Service Humidify icon will appear. This counter keeps track of the number of days since the Service Humidify icon was reset.

MODE  **Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.**

MODE  **Press the MODE button repeatedly until this setup screen appears.**

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

Press  Counts the number of days the humidifier has been running. Press FAN to reset the Service Humidify counter and remove the icon from the display.

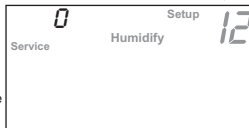

10


Press 


Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Viewing the UV Light Run-Time

After the UV light has been operating for the number of days set in step #13 below, the Service UV Light icon will appear. This counter keeps track of the number of days since the UV light icon was last reset.


10


MODE  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*


HUMIDITY 


MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

Press  Counts the number of days since the UV Light was last reset. Press FAN to reset the Service UV Light counter and remove the icon from the display.

FAN 



Press  **HUMIDITY**

Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

SECTION 11
Electric Heat and Heat Pump Operation

VENSTAR®


Section 11 Contents:


- *Viewing the Heat Pump and Reversing Valve Jumper Setting.....11.2*
- *Viewing the Electric Heat Jumper Setting.....11.3*
- *Using Emergency Heat.....11.4*

11

Viewing the Heat Pump and Reversing Valve Jumper Settings


Steps 14 and 15 are 'Read Only' and may only be set with the jumpers on the circuit board of the thermostat.

MODE  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.

MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*


11




ON = Heat Pump operation
OFF = Gas Electric operation

Setup 14

OFF HP


Press 




Indicates that the thermostat jumper is set for an **O** reversing valve (energize in cooling) or a **b** reversing valve (energize in heating).

Setup 15

0

Press 


Press 


Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Viewing the Electric Heat Jumper Setting

Placing the jumper on ELEC will cause the thermostat to turn on the fan immediately any time there is a heat demand. Since most gas furnaces control the fan, this feature should be off unless it is necessary for the thermostat to energize the fan with first stage heat.

Step 16 is 'Read Only' and may only be set with the jumpers on the circuit board of the thermostat.

MODE  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*

HUMIDITY  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

11




ON indicates that the thermostat jumper is set for Electric Heat operation, or **OFF** for Gas/Electric or Heat Pump operation.



Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Using Emergency Heat

ENTER EMERGENCY HEAT: Only available if you have a Heat Pump installed. To initiate the Emergency Heat feature, press the FAN button. While holding the FAN button press the UP button. The Cool setpoint display will read 'EH' (emergency heat).

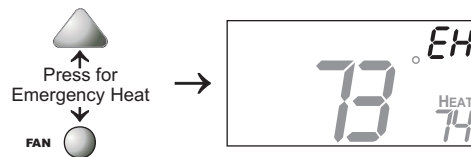

11

OPERATION: During Emergency Heat operation the thermostat will turn on the fan and the 2nd stage of heat when there is a demand for heat. Also during Emergency Heat the 1st stage of heating or cooling will be unavailable.


EXIT EMERGENCY HEAT: Follow the same steps as entering Emergency Heat by pressing the FAN and UP buttons. During Emergency Heat, only OFF and HEAT modes are available by pressing the MODE button.


Section 12 Contents:

- *Adjusting the Heat/Cool
Differential.....12.2*
- *Adjusting the Cycles
Per Hour.....12.3*
- *Adjusting the Deadband.....12.4*
- *Selecting 2nd Stage Turn
Off Temperature.....12.6*

Adjusting the Heat/Cool Differential


The Heat and Cool setpoints will not be allowed to come any closer to each other than the value in this step. This minimum difference is enforced during Auto-Changeover operation.

MODE  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

12




Adjust the minimum difference between cooling & heating setpoints.
(0° - 6°)

d IF Setup 17

2

COOL
HEAT

Press






Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Note: To increase the spread between the heating and cooling setpoints, press the MODE button until only the heat setpoint is displayed. Adjust the desired setpoint. Wait two seconds after adjusting the set point so the thermostat can accept the change. Press the MODE button until only the cool setpoint is displayed. Adjust the desired setpoint. Wait two seconds after adjusting the set point so the thermostat can accept the change. Press the MODE button again to enter the Auto-Changeover mode where both the heat and cool setpoints are displayed.

Adjusting the Cycles Per Hour

The Cycles Per Hour setting may limit the number of times per hour your HVAC unit may energize. For example, at a setting of 6 cycles per hour the HVAC unit will only be allowed to energize once every 10 minutes. The Cycles Per Hour limit may be overridden and reset by pressing the UP or DOWN buttons on the thermostat.

- MODE**  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*
 - HUMIDITY**  *Press the MODE button repeatedly until this setup screen appears.*
- Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.*

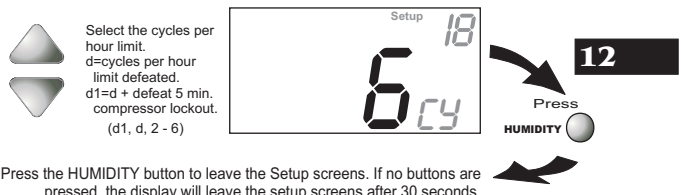

Adjusting the Deadband

MULTI-STAGE OPERATION - Controls up to two Heat and two Cool stages.


The **2nd Stage** of heat or cool is turned on when:

(A) The 1st Stage has been on for the two minutes.

And


(B) The temperature spread from the setpoint is equal to or greater than: *the setpoint plus the 1st stage deadband (step #19, next page), plus two degrees.*


12

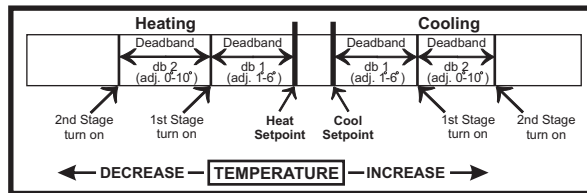


Adjusting the Deadband



For more detailed information, please see the explanation on the previous page.


MODE  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*


HUMIDITY 

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

 Adjust the deadband for the 1st stage.
 (1- 6°)




12
Press 

Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


Selecting 2nd Stage Turn Off Temperature



If ON is selected, the second stage of cooling or heating will remain energized until the thermostat reaches the setpoint on the thermostat display.

If OFF is selected, the second stage of cooling or heating will turn off after reaching the 1st stage deadband (see page 12.4 for more information).

MODE  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*

12 **MODE**  Press the **MODE** button repeatedly until this setup screen appears.

-  On Select On or Off:
On - 2nd stage will remain on until setpoint is reached.
-  Off Off - 2nd stage will turn off after reaching 1st stage deadband.



Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

SECTION 13
Programming Remote Sensor Operation

VENSTAR®

Section 13 Contents:

- *Installing the Remote
Sensors.....13.2*
- *Controlling or Reading the
Remote Temperature (RS1)...13.3*

13

Installing the Remote Sensors

The Remote Sensor measures indoor air temperature and sends this information to the thermostat; it measures temperature with a range of 32° to 99°F.

The Remote Sensor is equipped with an OVERRIDE button which will place the thermostat into the override mode for up to four hours (see page 5.1).

The Remote Sensor should be connected to the thermostat using solid conductor CAT 5, CAT 5e, or CAT 6 type network communication cable. This is an unshielded cable with four twisted pairs of 24 gauge solid wire; *DO NOT use stranded cable*. The cable length should not exceed 250 feet. If less than 75 feet of cable is required to connect the thermostat to the Remote Sensor, a three conductor thermostat cable (18-24 gauge) may be used; this cable is NOT suitable for any length greater than 75 feet.

13

IMPORTANT: Do not use shielded wire. Do not run sensor wiring in the same conduit as the 24VAC thermostat wiring. Electrical interference may cause the sensor to give incorrect temperature readings.


See the Remote Sensor instructions for further details.


Controlling or Reading the Remote Temperature (RS1)


The thermostat may be programmed to only READ the remote sensor, or to CONTROL to the remote sensor. Refer to Advanced Setup step #21, below.

Read Only Sensor (RS1): If step #21 is set to only READ to the remote sensor, this temperature may be viewed by pressing the OUTDOOR[®] button on the thermostat and then pressing the MODE button (see page 4.2).

Control Sensor (RS1): If step #21 is set to CONTROL to the remote sensor, the thermostat will ignore the reading of its internal temperature sensor and only display the temperature reading from the remote sensor. The degree icon on the thermostat will blink once per second to indicate that a remote sensor reading is being displayed.


MODE  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.


HUMIDITY 

MODE  Press the **MODE** button repeatedly until this setup screen appears.

13

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*


YES 


NO 

Optional Remote Sensor:

YES = Control to Remote Sensor RS1.

NO = Read Only Remote Sensor RS1.



Press 

Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

SECTION 14
Programming the Dry Contact

VENSTAR®

Section 14 Contents:


- *Dry Contact Operation..... 14.2*
- *Dry Contact Polarity.....14.2*
- *Dry Contact Programming.....14.3*
- *Override Operation.....14.4*
- *Random Start.....14.5*


14

Dry Contact Operation



If the dry contact is going to be used, select YES in step #22 below; if the dry contact is not going to be used, select NO. in step #22 below.


DRY CONTACT POLARITY - The terminals may be set to be Normally Open (NO) or Normally Closed (NC) in step #23. If NO is selected the dry contact will operate when it is forced closed. If NC is selected, the dry contact will operate until it is forced open.

MODE  *Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.*

MODE  *Press the MODE button repeatedly until this setup screen appears.*

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

-  YES
Set to YES if the dry contact will be used.
-  NO
Set to NO if the dry contact will not be used.

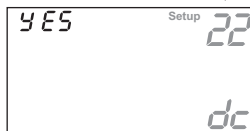


Step 23 appears only if step 22 is "YES".

-  NC
Dry Contact Polarity:
Normally Closed (NC)
-  NO
Normally Open (NO)




Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

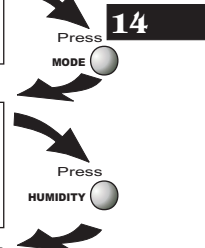

Dry Contact Programming

VERRIDE OR SERVICE THE CONDENSATE DRAIN PAN - If Override is selected in step #24 (below), when the dry contact is energized the thermostat will be forced into or out of Unoccupied setpoints (next page) depending on the polarity of the Dry Contact. If Service Pan is selected, when the dry contact is energized the thermostat will lockout Y1 (compressor) and write Service Pan on the display.



MODE  **Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.**

HUMIDITY 

MODE  **Press the MODE button repeatedly until this setup screen appears.**

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

Step 24 appears only if step 22 is "YES".


-  **Service Pan**
Select Service Pan to lockout Y1 when the dry contact is energized.
-  **Override**
Select Override to enable Override setpoints when the dry contact is energized.

14




Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


NOTE: If Service Pan is selected and the dry contact was closed at least once, the Service Pan icon will remain on the display to alert the user that a problem has occurred. This icon will be cleared once a button is pressed.

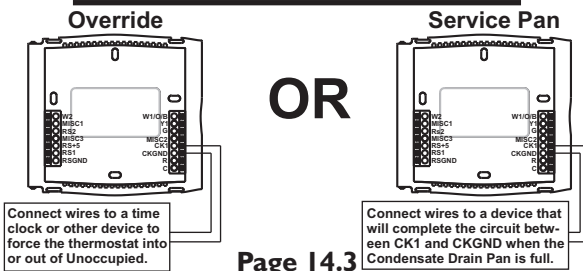


Dry Contact Programming

UNOCCUPIED SETPOINTS - If Override is selected in step #24 (see previous page), when the dry contact is energized the thermostat will be forced into or out of Unoccupied setpoints. To adjust the Unoccupied setpoints follow the setup steps below.


MODE  Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.


MODE  Press the **MODE** button repeatedly until this setup screen appears.

*Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*

 Adjust the cooling setpoint for unoccupied periods.
(35° - 99°, OF)



 Adjust the heating setpoint for Unoccupied periods.
(OF, 35° - 99°)

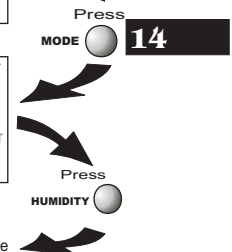

Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.

Random Start Operation

This feature causes a 2 to 30 second delay before energizing the thermostat outputs after any of these events:

Loss of Power to the thermostat: When power to the thermostat is interrupted and then restored, Random Start will lockout the outputs of the thermostat for a random amount of time. This delay helps to keep multiple thermostats from energizing their outputs at the same time after a power outage.

Closure of the Dry Contact to force Heat, Cool or Auto Modes: If step #24 (*page 14.3*) is programmed for Override, then Random Start will lockout all outputs of the thermostat for a random amount of time when a Dry Contact closure occurs (*depending on step #23, page 14.2*). This delay helps to keep multiple thermostats from energizing their outputs each time the Dry Contact is used.

SECTION 15
Programming Run-Time Alerts

VENSTAR®

Section 15 Contents:

- *Setting and Resetting the Service Filter (Fan Run-Time) Alert.....15.2*
- *Setting and Resetting the UV Light Run-Time Alert.....15.3*
- *Setting and Resetting the Humidify Run-Time Alert.....15.4*


15



How to Set and Reset the Service Filter (Fan Run-Time) Alert


This counter keeps track of the number of hours of fan run-time whether the fan is energized in the Heating or Cooling modes, or in stand alone fan operation. The Service Filter icon will appear after the preset number of hours of fan run-time in step #28 (below) has been achieved. Setting this counter to zero in step #28 will prevent the Service Filter icon from ever appearing.

Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.

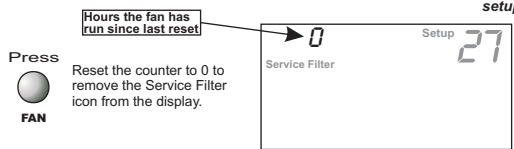RESET FILTER  **Press the RESET FILTER button to enter this setup screen.**



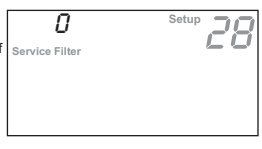


15  Adjust the number of hours, in increments of 50, the fan will run before the Service Filter icon appears on the display. 0 = off.
 (0 - 1950 hours)



Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


How to Set and Reset the UV Light Run-Time Alert

This counter keeps track of the number of days since the UV Light counter has been reset. The UV Light icon will appear after the number of days has been achieved, as shown in step #29 (below). Setting the counter to zero in Step #29 will prevent the Service UV Light icon from ever appearing.


- MODE**  **Press the MODE button. While holding the MODE, press the HUMIDITY button to enter Setup screens.**
 - HUMIDITY** 
 - MODE**  **Press the MODE button repeatedly until this setup screen appears.**
- Note: Press the MODE button momentarily to move through the setup screens. Press and hold the MODE button to move backwards through the setup screens.*

Days since the UV Light icon has been reset → 0

Service UV Light Setup 13


Press FAN  **Reset the counter to 0 to remove the Service UV Light icon from the display.**

15

MODE  **Press the MODE button repeatedly until this setup screen appears.**

Service UV Light Setup 29




Adjust the number of days in increments of 10 before the UV Light icon appears on the display. 0 = off.
(0 - 1990 days)

Press HUMIDITY 


Press the HUMIDITY button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.


How to Set and Reset the Humidifier Run-Time Alert


This counter keeps track of the number of days since the Service Humidify icon was last reset; this icon will appear after the number of days set in step #30 (below) has elapsed. Setting this counter to zero in step #30 will prevent the Service Humidify icon from ever appearing.

-  **MODE** Press the **MODE** button. While holding the **MODE**, press the **HUMIDITY** button to enter Setup screens.
 -  **HUMIDITY**
 -  **MODE** Press the **MODE** button repeatedly until this setup screen appears.
- Note: Press the **MODE** button momentarily to move through the setup screens. Press and hold the **MODE** button to move backwards through the setup screens.*


Days since the last reset of the Service Humidify counter.


Press  **FAN** Reset the counter to 0 to remove the Service Humidify icon from the display.



15  **MODE** Press the **MODE** button repeatedly until this setup screen appears.

Adjust the number of days in increments of 10 before the Service Humidify icon appears.
0 = Off
(0 - 1990 days)

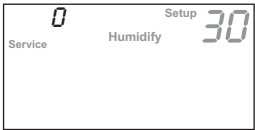

Press  **HUMIDITY**

Press the **HUMIDITY** button to leave the Setup screens. If no buttons are pressed, the display will leave the setup screens after 30 seconds.



The humidifier run-time alert does not take the place of any humidifier manufacturer's recommended maintenance plan; it only serves as a helpful reminder.

SECTION 16
Configuring the MISC Outputs


VENSTAR®

Section 16 Contents:


- *Configuring the Jumpers.....16.2*
- *Explanation of Jumper
Settings.....16.3*

Configuring the Jumpers

For additional flexibility, your thermostat has three configurable outputs. These outputs are designed to have different functions depending on how the jumpers are set (*below*). Each output, labeled MISC1, MISC2, and MISC3 may be set for one of the four choices available. In the diagram below, the MISC3 jumper has been set for HUM* (humidification) operation, the MISC2 jumper has been set for DEHUM* (dehumidification) operation, and the MISC1 jumper has been set for Y2 (second stage cooling) operation.

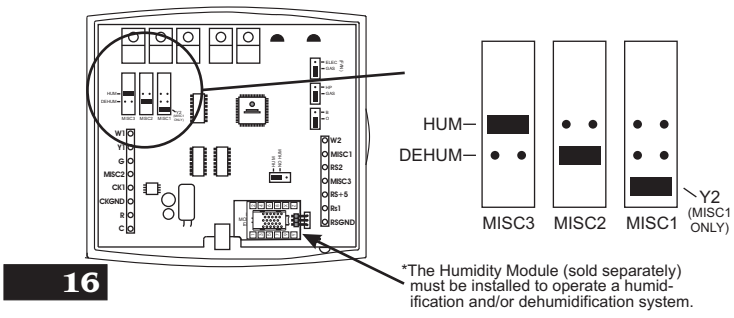

CAUTION
NEVER PUT MORE THAN ONE JUMPER ON THE SAME MISC JUMPER BLOCK!
DOING SO MAY DAMAGE YOUR THERMOSTAT AND VOID THE WARRANTY.

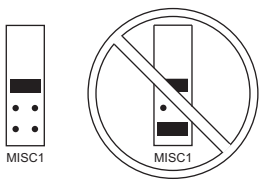

Explanation of Jumper Settings

HUM JUMPER SETTING

If the jumper for MISC1, MISC2, or MISC3 is set to HUM, the corresponding MISC screw terminal on the backplate will control a humidification system.

HUMIDIFICATION OPERATION - SECTION 8

If your HVAC unit is equipped with a humidification system and the Humidity Module (sold separately) has been installed, the thermostat will provide power to the MISC1, MISC2, or MISC3 terminal of the thermostat when the humidity in the home falls below the humidity setpoint you have chosen. The value for this setpoint ranges from 0% to 60%. If no humidity is desired or if a humidification system has not been installed, set the value to 0%.

DEHUM JUMPER SETTING

If the jumper for MISC1, MISC2, or MISC3 is set to DEHUM, the corresponding MISC screw terminal on the backplate will be connected to the dehumidification terminal of a furnace board.
NOTE: *Not all furnaces have a dehumidification terminal.*

DEHUMIDIFICATION OPERATION - SECTION 9

If your HVAC unit is equipped with a dehumidification system the thermostat will operate in one of two ways.

- 1) **Normally Closed (NC):** The thermostat will **de-energize** the MISC1, MISC2, or MISC3 terminal of the thermostat (this MISC terminal is connected to the DEHUM terminal on your furnace) to allow the fan to run in low speed when the humidity in the home is above the dehumidify setpoint you have chosen and there is a call for 1st stage cooling. **16**
- 2) **Normally Open (NO):** The thermostat will **energize** the MISC1, MISC2, or MISC3 terminal of the thermostat (this MISC terminal is connected to the DEHUM terminal on your furnace) to allow the fan to run in low speed when the humidity in the home is above the dehumidify setpoint you have chosen and there is a call for 1st stage cooling.

Explanation of Jumper Settings (continued)

Y2 JUMPER SETTING


If the jumper for MISC1 is set to Y2 the MISC1 screw terminal on the backplate will control a second stage of cooling.

Y2 OPERATION - SECTION 12.4

The **2nd Stage** of heat or cool is turned on when:
(A) The 1st Stage has been on for the two minutes.

And

(B) The temperature spread from the setpoint is equal to or greater than: *the setpoint plus the 1st stage deadband (step #19, page 12.5), plus two degrees.*

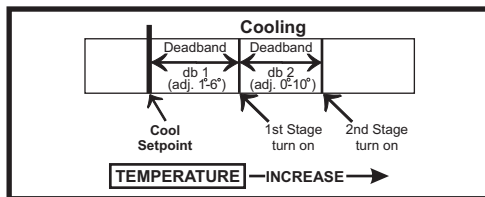

SECTION 17
Factory Defaults, Calibration, and Sensors

VENSTAR®

Section 17 Contents:


- *Resetting the Thermostat to the
Factory Default Settings.....17.2*
- *Calibrating the Temperature
and Humidity Sensors.....17.3*

Resetting the Thermostat to the Factory Default Settings (for default values see page 19.1)

If, for any reason, you desire to return all the stored settings back to the factory default settings, follow the instructions below.


WARNING: This will reset all Advanced Programming to the default settings. Any information entered prior to this reset may be permanently lost.


1


MODE  Place the thermostat in the OFF mode.



2

MODE  Press and hold the MODE button. While holding the MODE button, press and hold the FAN button for 5 seconds. All icons will appear on the display.

FAN 

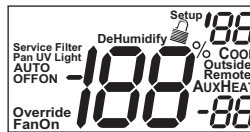


3

17 **FAN** 

After all of the icons appear, release the MODE and FAN buttons. Then press and hold the FAN button for 5 seconds.




4



MODE  After the letters Fd appear on the display (Factory Default), release the FAN button. Press the MODE button **once** to return to normal operation.




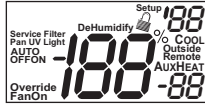


Calibrating the Temperature and Humidity Sensors

Under normal circumstances it will not be necessary to adjust the calibration of the temperature and humidity sensors. If calibration is required, please contact a trained HVAC technician to correctly perform the following procedure.





- 1** **MODE**  Place the thermostat in the OFF mode.






- 2** **MODE**  Press and hold the MODE button. While holding the MODE button, press and hold the FAN button for 5 seconds. All icons will appear on the display.



FAN 


- 3** **PRESS**  **THERMOSTAT SENSOR**
 Press the UP and DOWN buttons at the same time twice. The thermostat temperature will be displayed and may be calibrated using the UP or DOWN buttons.

TWICE



- 4** **MODE**  **REMOTE SENSOR**
 Press the MODE button once. The remote sensor temperature will be displayed and may be calibrated using the UP or DOWN buttons. If a remote sensor is not installed, only dashes will appear.



- 5** **MODE**  **HUMIDITY SENSOR**
 Press the MODE button once. The relative humidity at the thermostat will be displayed and may be calibrated using the UP or DOWN buttons.

After calibration is complete, press the MODE button **once** to return to normal operation.


SECTION 18

Accessories

VENSTAR®

ACCESSORY PORT - The RJ11 Jack is used to connect the T2700 to the IR Receiver (ACC0431) for wireless communication or the EZ Programmer (ACC0432) for easy downloading or uploading of thermostat information.

The Accessory Port is located on the bottom of the thermostat.



IR RECEIVER / REMOTE CONTROL (optional accessory) - When the IR Receiver is connected, the thermostat can be controlled using an IR Remote Control. The thermostat may also interface with other wireless systems in your home. For more information see the manual for the IR Receiver (ACC0431).

EZ PROGRAMMER (optional accessory) - When the EZ Programmer is connected, the thermostat Advanced Setup Programming can be stored into the EZ Programmer's memory. This information can then be uploaded to other T2700 thermostats. For more information see the manual for the (ACC0432).

18

COMFORT CALL (optional accessory) - When Comfort call is connected, the thermostat's Heating and cooling functionality may be accessed and controlled through the phone. For more information see the manual for Comfort Call (ACC0433).

SECTION 19

Advanced Setup Table

VENSTAR®

Step#	Description	Pg#	Range	Df*	Step#	Description	Pg#	Range	Df*
1	Auto-Changeover Thermostat	3.2	Yes/No	Yes	17	Minimum Heat/Cool Differential	12.2	0°- 6°	2*
2	Fan Off Delay	6.3	0, 30, 60, 90	0	18	Cycles Per Hour	12.3	q1, q 2-6	6
3	Thermoglow Backlight	7.2	Auto/On/Off	Auto	19	Deadband/Temp. Swing 1st Stage	12.5	1 - 6°	2*
4	F or C	7.2	F/C	F	20	2nd Stage turn off at setpoint	12.6	On/Off	On
5	Security Level	7.4	0 - 3	0	21	Thermostat control to RS1?	13.3	Yes/No	Yes
6	Max Heat Setpoint	7.4	35°- 99°	80°	22	Dry Contact Operation	14.2	Yes/No	No
7	Min Cool Setpoint	7.4	35°- 99°	55°	23	Dry Contact Polarity	14.2	NO/NC	NO
8	Cool to Dehumidify	9.4	On/Off	Off	24	Dry Contact Programming	14.3	Override/Service Pan	Override
9	Maximum Dehum Overshoot	9.4	0°- 5°	3°	25	Unoccupied Cool	14.4	35 - 99	85
10	DEHUM Terminal Polarity	9.5	NO/NC	NC	26	Unoccupied Heat	14.4	35 - 99	55
11	Override Run-Time	10.2	read only	--	27	Reset Service Filter Icon	15.2	read only	--
12	Reset Service Humidity Icon	10.3	read only	--	28	Service Filter Run Time Set	15.2	0 - 1950	0
13	Reset UV Light Icon	10.5	read only	--	29	UV Light Run-Time Set	15.3	0 - 1990	0
14	Heatpump Jumper Setting	11.2	read only	--	30	Service Humidify Run-Time Set	15.4	0 - 1990	0
15	Reversing Valve Jumper Setting	11.2	read only	--					
16	Electric Heat	11.3	read only	--					

*Df = Factory Default Setting

SECTION 20
VENSTAR *Index*



Accessory Port, 18.1

Alerts

see *Run-Time*

Auto

adjust temperature,

1.4, 3.5

changeover, 3.4,

19.1

differential, see

Differential

fan, 6.2

icon, 2.3

lockout, 3.2

mode, 1.2

AuxHeat icon, 2.4



b reversing valve, 12.2

Buttons

down, 2.2, 7.3,

11.4

fan, 1.3, 2.2, 6.2,

11.4, 17.2

front panel, 2.2

humidity, 2.2, 4.3,

7.3, 8.3

mode, 1.2, 2.2, 7.3,

17.2

outdoor, 2.2, 4.2
 Override, 2.2, 5.1
 Reset Filter, 2.2, 15.2
 up, 1.2, 2.2, 7.3,
 11.4



C, 7.2, 19.1

Calibration, 17.3

Celsius, 7.2

Compressor Lockout,
12.3

Cool

1st stage

deadband, see

Deadband

dehum, 9.5

2nd stage

deadband, see

Deadband

dehum, 9.5

turn off

temperature,

12.6, 19.1

Y2 operation,

16.5

deadband, see

Deadband

droop, see *Deadband*

electric/heat pump,

11.2

icon, 2.3

indicator, 2.2
 mode, 1.2
 run-time, see *Run-Time*
 setpoint, 1.2-1.3
 to dehumidify, see

Dehumidify

Condensate Drain Pan,
2.4, 14.3

Cycles Per Hour, 12.3,
19.1



Deadband

1st stage, 12.4-12.5,

12.6, 16.4, 19.1

2nd stage, 12.4, 12.6

Dehumidify

cool to, 9.3, 19.1

DEHUM jumper,

9.2

icon, 2.4

setpoint, 9.2

Delay

fan-off, see *Fan*

Differential

heat and cool, 12.2,

19.1

humidify and

dehumidify, 8.3,

9.2

Disabled Keypad

see *Keypad Lockout*

SECTION 20
VENSTAR *Index*

Drain Pan Overflow Alarm, see *Dry Contact*
Dry Contact
 override, 14.3, 19.1
 operation, 14.2, 19.1
 polarity, 14.2, 19.1
 random start, 14.5
 service pan, 14.3



EH, 11.4
Electric Heating
 AuxHeat icon, 2.4
 jumper setting, 11.3
 19.1
Emergency Heat, 11.4
EZ Programmer, 18.1



F, 7.2, 19.1
Factory Defaults
 caution, ii
 settings, 17.2
 resetting, 17.2
Fahrenheit, 7.2
Fan,
 button function, see

Buttons
 off time delay, 6.3, 19.1
 on during heat, see *Electric Heat*
 on icon, 1.3, 2.4, 6.2
 run-time, 15.2
 2nd stage heat, see *Emergency Heat*
 speed, see
Dehumidify
 unoccupied, 6.2
Fd, 17.2
Flashing Selection, 1.2



Gas Furnace
 control the fan, 11.3
 jumper, 11.2
Green Indicator, 2.2



Heat
 1st stage
 deadband, see
Deadband
 emergency heat, 11.4
 2nd stage

deadband, see *Deadband*
 emergency heat, 11.4
 electric strip heat, 2.4
 AuxHeat icon, 2.4
 deadband, see *Deadband*
 droop, see *Deadband*
 electric/heat pump, 11.2
 icon, 2.3
 indicator, 2.2
 Mode, 1.2
 run-time, see *Run-Time*
 setpoint, 1.2-1.3
Heat Pump
 AuxHeat, 2.4
 emergency heat, 11.4
 jumper setting, 11.2
Humidify
 icon, 2.4
 service, 10.5, 15.4, 19.1
 setpoint, 8.3
Humidity Module
 connector, 8.2
 installation, 8.2
 jumper setting, 8.2
 required for, 4.3, 8.1, 8.3, 9.1-9.3, 16.4, 17.3



IR Receiver, 18.1
IR Remote Control, 18.1



Jumpers
DEHUM, 16.3
ECON, 16.3
ELEC, 11.3
electric heat, 11.3
gas electric, 11.2
heat pump, 11.2, 19.1
HUM, 8.2, 16.2-16.3
reversing valve, 11.2, 19.1
Y2, 16.2-16.3



Keypad Lockout, 2.4, 7.3



LCD

see *Display*
Locked Indication
see *Keypad Lockout*



Manual
changeover, 3.3
cool, 3.2
heat, 3.2

MISC
jumper, see *Jumpers*
output, 16.2-16.3

Mode icon, 1.2, 2.3
Multi-stage Operation, 12.4



Non-Programmable Thermostat, 3.3-3.4
Normally Open/Closed,
dry contact, 14.2
dehum terminal, 9.5



O Reversing Valve, Page 20.3

12.2
Off Mode, 1.2, 2.3

Outdoor
button, see *Buttons*
icon, 2.3
sensor, 2.3, 4.2, 12.1-12.2, 13.2, 17.3
viewing temperature, 2.3, 4.2, 13.2, 17.3

Override
button, see *Buttons*
icon, 2.3
timer, 5.1
viewing run-time, 10.2, 19.1



Pan, Service
see *Dry Contact*
Polarity, see Dry Contact



Random Start, 14.5
Red Indicator, 2.2
Remote Sensor
calibrate, 17.3
control to, 13.3-

SECTION 20
VENSTAR *Index*

13.4, 17.1
 degree icon blink,
 13.2-13.3
 icon, 2.4
 outdoor temperature,
 see *Outdoor*
 read to, 13.3
 wiring, 13.2

RS1, see *Remote*
Sensor

RS2, see *Outdoor*
Sensor

Run-Time
 resetting, 15.2-15.4
 setting,
 humidifier, 15.4,
 19.1
 service filter, 15.2,
 19.1
 UV light, 15.3, 19.1
 viewing,
 Override, 10.2
 UV light, 10.4



2nd stage turn off
temperature,
 12.6, 19.1

Security
 level, 7.4, 19.1
 setpoints, 7.4, 19.1

Sensor

outdoor, see *Outdoor*
 remote, see *Remote*
 thermostat, see
Thermostat

Service
 filter icon, 15.2
 humidify icon, 15.4
 pan icon, see *Dry*
Contact
 UV light, 15.3

Setpoint
 cool, see *Cool*
 dehumidification,
 8.4,
 9.3, 9.5
 heat, see *Heat*
 humidification, 4.3,
 8.4, 9.3
 security, 7.4
 unoccupied, 5.1

Setup Icon, 2.4

Simplest Operation,
 3.2

Smart Fan, 6.2

Smart Recovery, see
Energy Save



Terminal, MISC, see
MISC

Thermostat Sensor

calibrate, 17.3
Time Delay,
 compressor lockout,
 12.3
 cycles per hour,
 12.3, 19.1



Unoccupied
 icon, 2.3
 operation, 5.1
 override, see
Override
 setpoints, 14.4

UV Light
 icon, 2.4
 resetting, 15.3
 run-time, 15.3
 setting, 15.3



Warranty, 26.1
W3, see *Jumpers*



Y2, see *Jumpers*

Section 21 Warranty

VENSTAR®

One-Year Warranty - This Product is warranted to be free from defects in material and workmanship. If it appears within one year from the date of original installation, whether or not actual use begins on that date, that the product does not meet this warranty, a new or remanufactured part, at the manufacturer's sole option to replace any defective part, will be provided without charge for the part itself provided the defective part is returned to the distributor through a qualified servicing dealer.

THIS WARRANTY DOES NOT INCLUDE LABOR OR OTHER COSTS incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts or replacement parts. Such costs may be covered by a separate warranty provided by the installer.

THIS WARRANTY APPLIES ONLY TO PRODUCTS IN THEIR ORIGINAL INSTALLATION LOCATION AND BECOMES VOID UPON REINSTALLATION.

LIMITATIONS OF WARRANTIES – ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH THE LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON WHATSOEVER.

ALL WORK UNDER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING NORMAL WORKING HOURS. ALL REPLACEMENT PARTS, WHETHER NEW OR REMANUFACTURED, ASSUME AS THEIR WARRANTY PERIOD ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.

THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation and servicing instructions or owner's manual, including filter cleaning and/or replacement and lubrication.
2. Damage or repairs required as a consequence of faulty installation, misapplication, abuse, improper servicing, unauthorized alteration or improper operation.
3. Failure to start due to voltage conditions, blown fuses, open circuit breakers or other damages due to the inadequacy or interruption of electrical service.
4. Damage as a result of floods, winds, fires, lightning, accidents, corrosive environments or other conditions beyond the control of the Manufacturer.
5. Parts not supplied or designated by the Manufacturer, or damages resulting from their use.
6. Manufacturer products installed outside the continental U.S.A., Alaska, Hawaii, and Canada.
7. Electricity or fuel costs or increases in electricity or fuel costs for any reason whatsoever including additional or unusual use of supplemental electric heat.
8. ANY SPECIAL INDIRECT OR CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.