
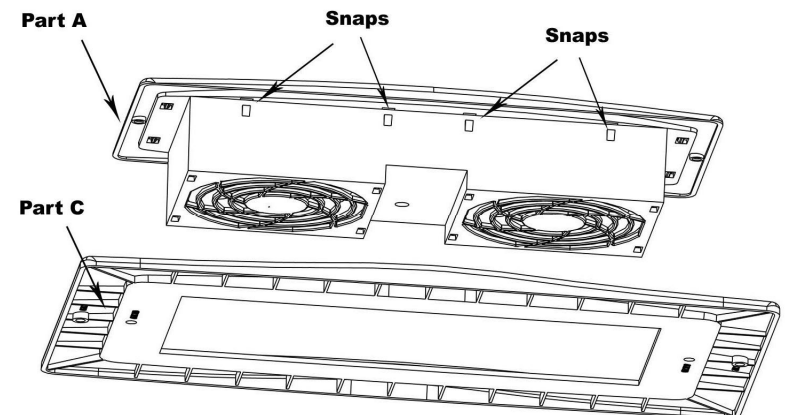


## AirFlow Breeze 6x10/6X12 Assembly Instructions

1. To assemble your AirFlow Breeze 6X10/6x12 you will need:
  - a. Part A
  - b. Part C

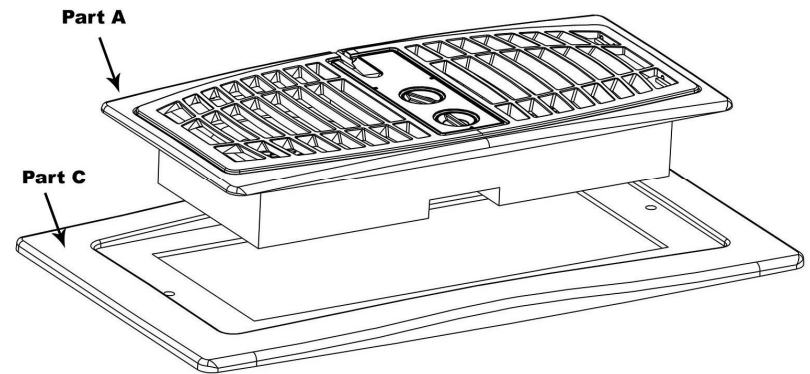

2. Insert Part A into the recessed opening of Part C until all 8 snaps are engaged.
3. You have completed the assembly of the AirFlow Breeze 6X10/6x12.