

Einbauanleitung

Innenraumfilter

Fitting instructions

Cabin air filter

Istruzioni di montaggio

Filtro abitacolo

Notice de montage

Filtre d'habitacle

Instrucciones de montaje

Filtro de habitáculo



Monteringsanvisning

Kupéfilter


micronAir®

1.

3.

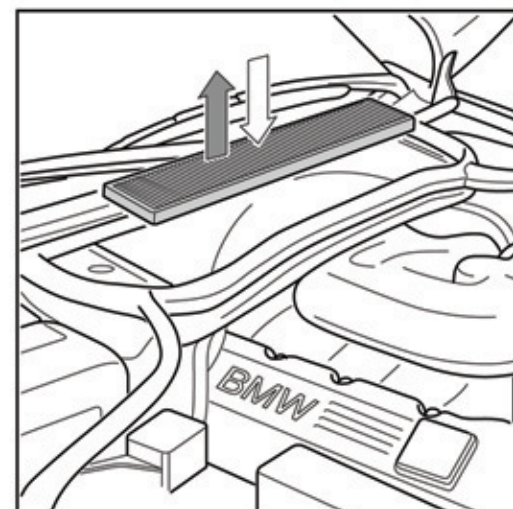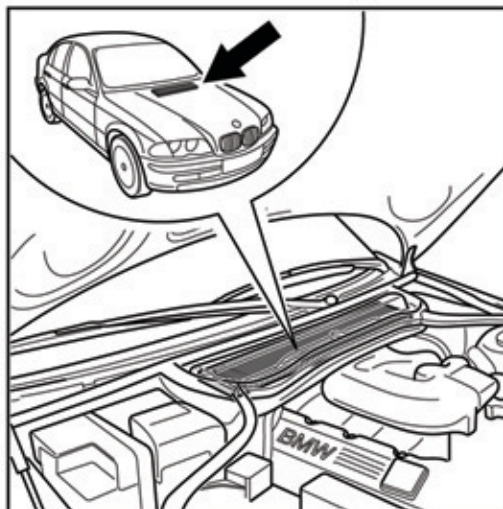

2.

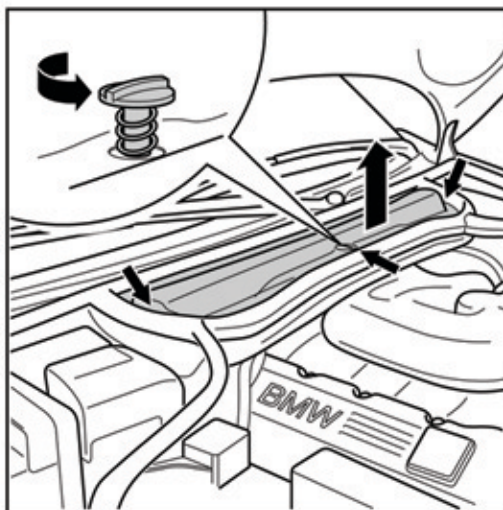

BMW 3er Serie (E46) 1999 →
BM99131P/BM99131C

- Ⓢ Wechselintervall alle 15.000km oder nach einem Jahr
 - Ⓢ Replacement interval 15.000km/10.000miles or after 12 months
 - ① Sostituzione dopo 15.000km o dopo un anno
 - Ⓢ Intervalle de remplacement 15.000km ou une fois par an
 - Ⓢ Intervalo de cambio 15.000km o después de 1 año
 - ③ Bytesintervall 15.0000km eller senast inom 1 år
-
- Ⓢ Weitere Montage erfolgt in umgekehrter Reihenfolge
 - Ⓢ Assembly is the reverse order of operation
 - ① Per il montaggio eseguire le operazioni in senso inverso
 - Ⓢ Le remontage s'effectue dans l'ordre inverse
 - Ⓢ Para concluir la instalación, seguir el orden inverso
 - ③ Ytterligare ihopmontering sker i omvänd ordningsföljd

© by Freudenberg Vliesstoffe KG
micronAir® is a registered trademark of Carl Freudenberg