


1

- Disconnect and isolate the battery ground cable. After disconnecting the battery ground cable wait at least 3 minutes to allow the air bag system backup power capacitor to discharge.
- Remove the stops located at each side of the glove compartment.



2

- Remove the two bolts securing the glove compartment to the instrument panel.
- Using suitable diagonal cutters, cut the plastic cross brace located at the glove compartment opening at each end, then discard the plastic brace.
- Remove the glove compartment frame retaining bolts and screws, then the frame.

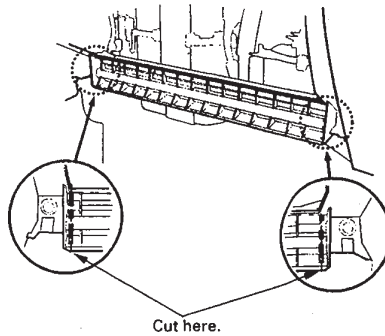

3

- Remove the filter cover from the evaporator housing.
- Remove the cabin filter from the evaporator housing and install a new cabin filter.
- Install the evaporator housing filter cover. Ensure the filter cover is securely seated.
- Position the glove compartment frame, then install the attaching bolts and screws.



4

- Install the stops at each side of the glove compartment.
- Connect the battery ground cable.
- Ensure no air leaks are present at the evaporator cabin filter cover.



This MicronAir® Cabin Air Filter fits: Honda Odyssey, from model year 1999; Acura MDX, model years 2001-2004; and Honda Pilot, from model year 2003.

Get in and breathe easy.

The vehicle manufacturer recommends that the filter be changed every year or 15,000 miles.
Engineered for Original Equipment Manufacturer Specifications.