

## AirFlow Breeze 18" baseboard register booster fan assembly

### Installation instructions:

After removing the existing 18" baseboard register, place the baseboard adapter in the vacant location and mark the two mounting points for either wall mount or floor mount.



**Step 1:** After locating the adapter mounting points, install the screw provided in each location.

**Step 2:** Snap AirFlow Breeze fan unit into the baseboard adapter

**Step 3:** Slide the adapter over the screw as shown

**Step 4:** Slide the adapter so the screw is tight to the smaller slot.

**Step 5:** Plug in Breeze to wall socket and follow set-up instructions provided with the Breeze

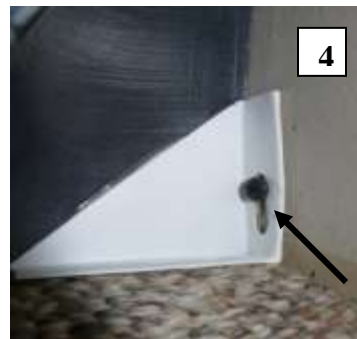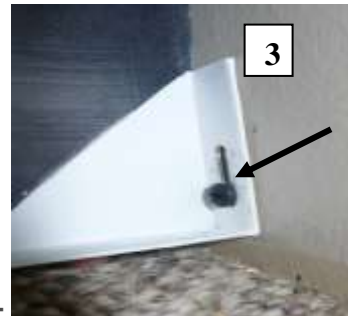

### Mounting screws provided in enclosed envelop



For fastening into wallboard or wood, no pre-drilling is required. Screw in with an ordinary Phillips screwdriver.

Fastening into concrete, hollow or grout filled block, brick and plaster requires a pre-drilled 3/16" hole

