



Cabin Air Filtration Product MicronAir® No. NN05156P

1


- Tools needed:
Phillips head screwdriver

- Remove the plastic gasket along the floor at the passenger door, by pulling straight up to disengage the plastic pins.
- The side panel underneath the glove box pops straight out.




2

- Remove two screws from the bottom of the glove box; and two screws from inside the glove box.
- Pull down on the glove box and it snaps loose. Remove the glove box.

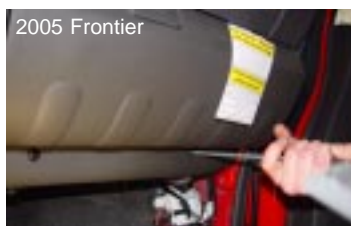


3

- Remove the screw securing the filters in the intake unit. Remove the filters.
- Install the first new micronAir® cabin air filter in the bottom position, and slide it up to the top. Insert the second filter in the bottom position.
- Secure the filter with the screw.

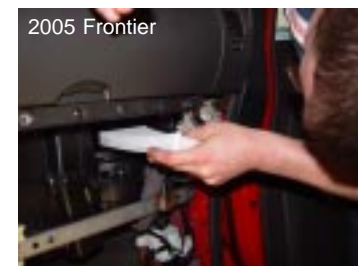

3

- Install the glove box by snapping it back up into place. Replace the four screws.
- Install the side panel beneath the glove box, by snapping it into place.
- Replace the plastic gasket along the floor of the door, by snapping it into place.

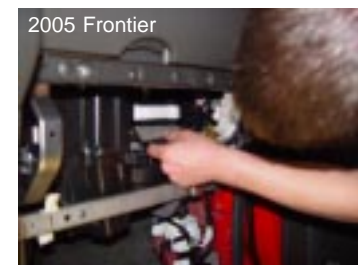

This micronAir® Cabin Air Filter fits: Nissan Pathfinder, Frontier and Xterra; from model year 2005.

Get in and breathe easy.

The vehicle manufacturer recommends that the filter be changed every year or 15,000 miles.
Engineered for Original Equipment Manufacturer Specifications.

www.micronAir.com

910814 REV. NC 118