


# 1


Tools:  
Phillips screw driver

- Set the wipers in the upright position.
- Open the hood.
- Dismantle the cover's right hand clips. Remove the clip on the corner tab to the windscreen corner.

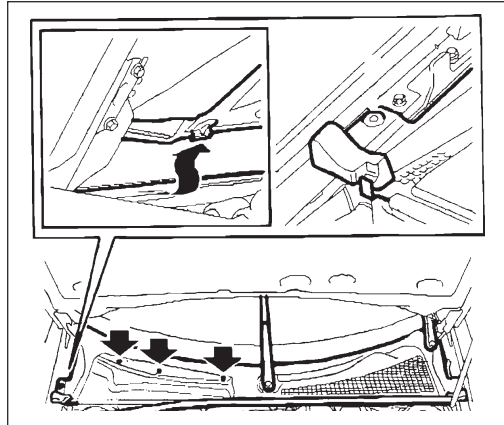


# 2

- Loosen the rear main seal halfway.
- Lift off the foam block and lift up the front edge of the cover so that the hood and clip release on the rear edge. Fold back the corner tab.
- Fold up the cover halfway.

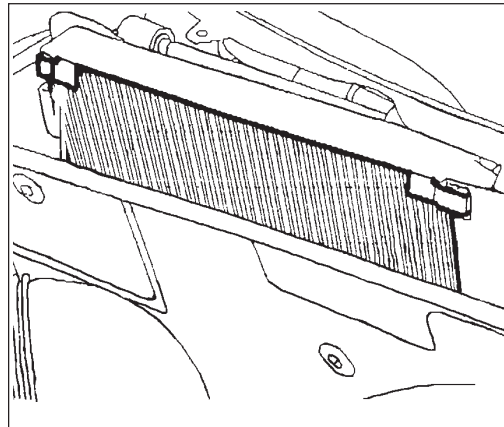

# 3

- Fold up the clips from the filter holder. Remove the cabin air filter.
- Lift up the drainage hose and clean it.
- Fit the drainage hose and insert a new micronAir® cabin air filter. The new filter should be fitted with the arrows directed in towards the car.

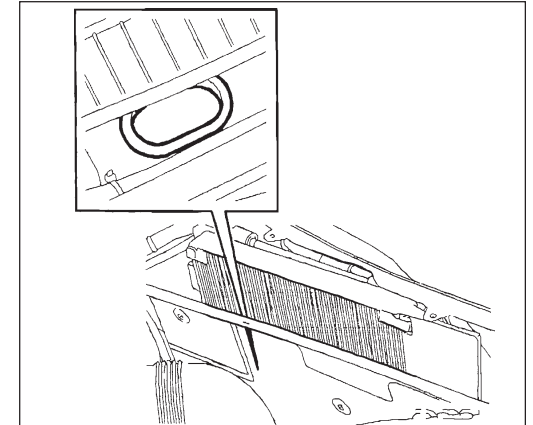

# 4

- Fold back the holder's clips.
- Fold down the cover. Fit the corner tab under the windscreen moulding. Insert the hook under the windscreen and press down the cover so that the clips lock.
- Fit the clip to the corner tab to the windscreen corner.
- Lift up the foam block and fit the clip. Fit the rear main seal. Check the operation of the wipers.
- Close the hood.

This micronAir® Cabin Air Filter fits: Saab 9-3, from model year 2002.

## Get in and breathe easy.

The vehicle manufacturer recommends that the filter be changed every year or 30,000 miles.

Engineered for Original Equipment Manufacturer Specifications.