

## Santa Fe Condensate Pump Installation Instructions

1




The condensate pump kit includes: drain hose, condensate pump, two mounting screws and instructions.

2




Pre-drilled mounting holes are located near the bottom and on the same side of the unit as the drain hose.

3

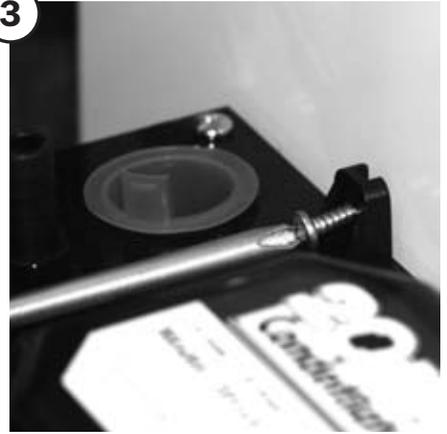


Secure the condensate pump to the unit with the two provided screws.

4

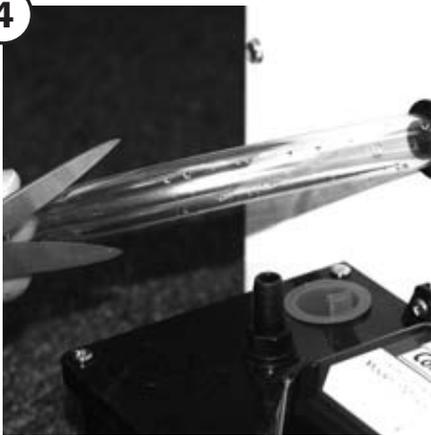


Cut the condensate drain hose at a 45° angle approximately 10 inches from the unit.

5

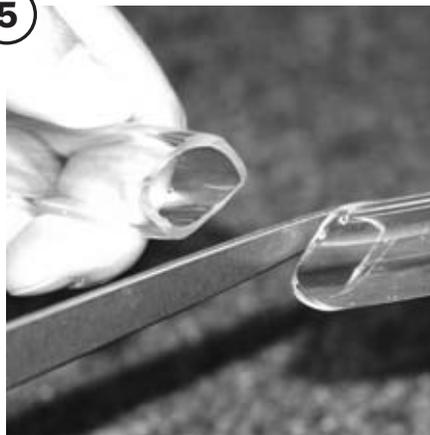


Example of hose cut at a 45° angle. The angle prevents the hose from sealing tight against the bottom of the pump reservoir.

6

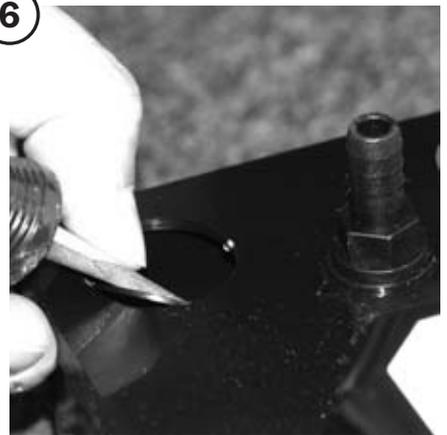


Remove the plug as shown.

7

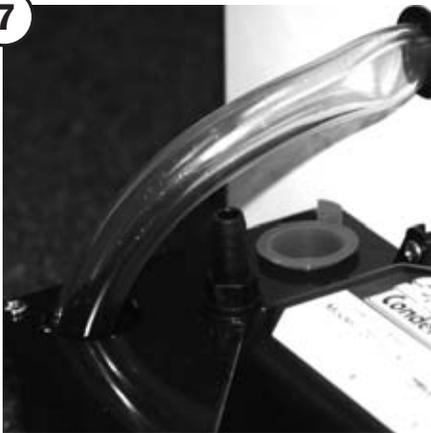

Insert the drain hose into the condensate pump reservoir as shown.

8

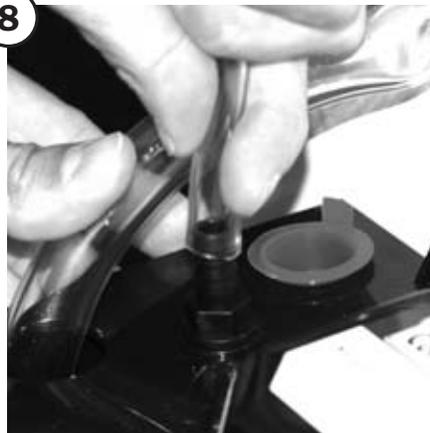

Install the provided drain hose over the condensate pump nipple.

9



Route the condensate pump drain hose to an appropriate drain and plug the condensate pump into a standard 115VAC outlet.