

# QUICK START GUIDE

## T955W QUICK START GUIDE



Please refer to the Installation Manual for more information.

**For your installation ease, the communication link between this T955W and the Base Module has already been established.**

### Follow the steps below for a quick install.

- 1** Wire the base module to the system control board exactly like you would wire a hardwired thermostat.

Note: The base module must be 24V powered.


- 2** Install the T955W thermostat.

Note: The T955W can be battery only powered if remote sensors are NOT used. If a remote sensor is used, the T955W must be hardwired. This can be easily done by installing the T955W where the old thermostat was and then use two of the existing wires for R and C.

- 3** Configure Technician Setup on the T955W for your particular application.

- 4** Install and connect any accessories if needed.

The T955W can use the outdoor temperature sensor (R250W) or indoor temperature sensor (R251W).

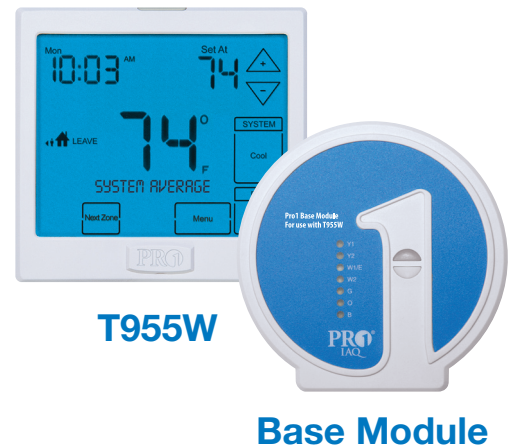

T955W

Base Module

### Accessories



R250W  
Outdoor Sensor

R251W  
Indoor Sensor

#### Pro1 IAQ Inc.

**Toll-free:** 1-888-Pro1iaq (776-1427)

**Toll Number (Outside the USA):** 330-821-3600

**Web:** <http://www.pro1iaq.com>

**Hours of Operation:** Monday - Friday 9 AM - 6 PM Eastern