

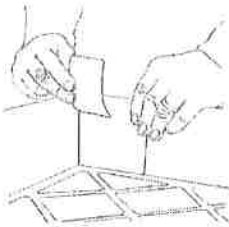



DIY Filter Assembly Instructions

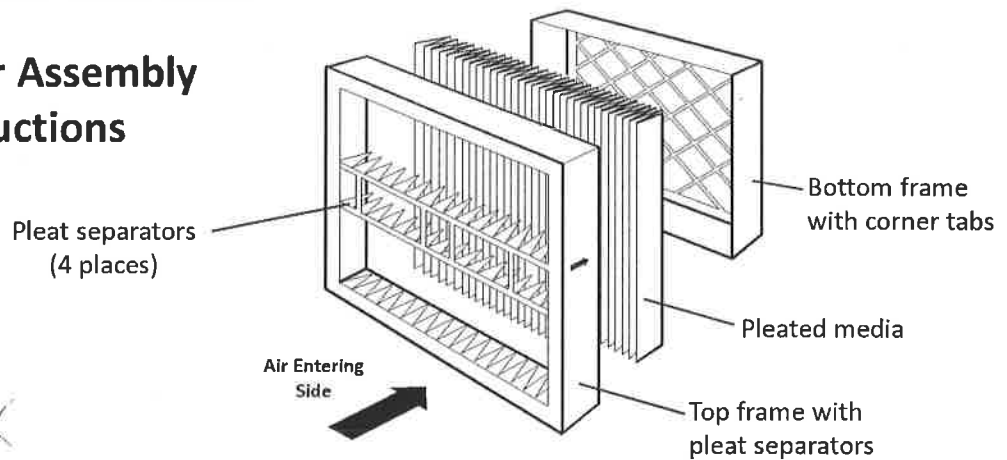


Step 1. Fold four tabbed corners of bottom frame and place tape over each tab to form the bottom box.

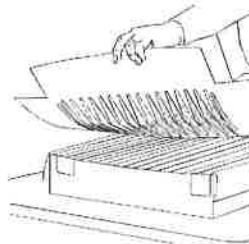


Step 4. Place top frame over bottom frame with pleated pack, making sure the pleat separators are in line with the pleated media.

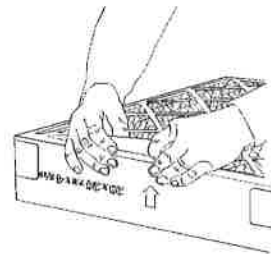


Step 6. Turn filter over and tape the back side of the bottom frame to all four sides of the top frame.

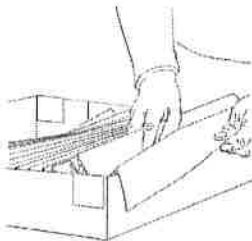

Step 2. Place end flap of pleated media (wire side down) over one end of bottom boxed frame.

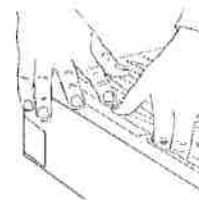

Step 7. Push pleat separators into each appropriate pleated media slot.

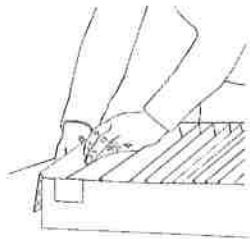

Step 3. Stretch the pleated media pack and place other end flap over opposite end of bottom boxed frame.



Step 5. Fold top frame over bottom boxed frame and tape all four corners to form completed boxed frame with pleated media.



Finished Filter