



TRUE COMFORT IIII

This manual covers the following models:

- T771

Congratulations on purchasing a new thermostat. This thermostat was designed to the highest reliability and ease of use standards. Thank you for choosing Pro1.



Caution:

Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

| Table of Contents | Page |
|----------------------------|------|
| Thermostat Quick Reference | 2 |
| Thermostat Operation | 3 |
| Contact Us | 4 |
| Warranty Registration | 4 |


Need Help?

For assistance with this product please visit <http://www.pro1iaq.com> or call Pro1 Customer Care toll-free at 888-Pro1iaq (776-1427) during normal business hours (Mon-Fri 9 AM - 6 PM Eastern)

Una versión española de este manual puede ser descargada en www.pro1iaq.com


OPERATING MANUAL THERMOSTAT QUICK REFERENCE

Getting to know your thermostat

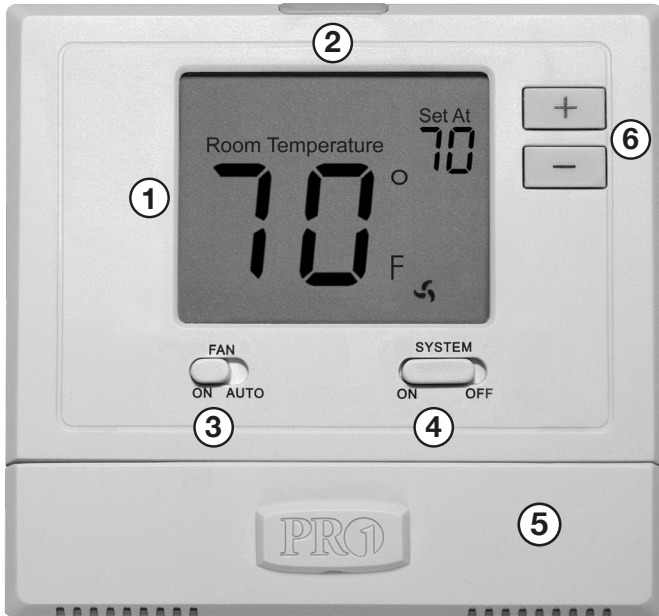

- ② Glow in the Dark Light Button
- ③ Fan Switch
- ④ System Switch
- ⑤ Easy Change Battery Door
- ⑥ Temperature Setpoint Buttons

① LCD

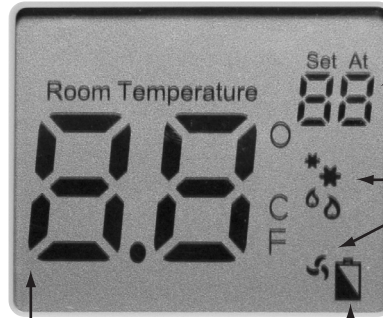

Displays the user selectable setpoint temperature.

System operation indicators:

* * * * *
COOL HEAT FAN

The **COOL**, **HEAT** or **FAN** icon will display when the **COOL**, **HEAT** or **FAN** is on. NOTE: The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.

Low Battery Indicator: Replace batteries when indicator is shown.

Indicates the current room temperature.




Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable.


NOTE: In applications where the thermostat will see temperatures below 40 degrees it is recommended that 1.5V AA lithium batteries be used instead of alkaline for increased battery life. (Extreme temperatures decrease the life of Alkaline batteries.)

Battery door information

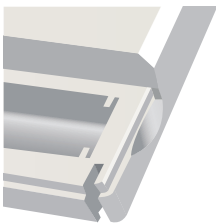


Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.

Replace with 2 AA 1.5v batteries.

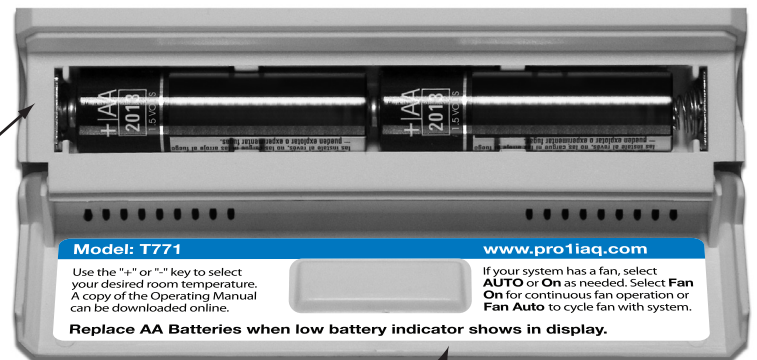


Simple operating instructions are found on the back of the battery door.

Easy to use controls

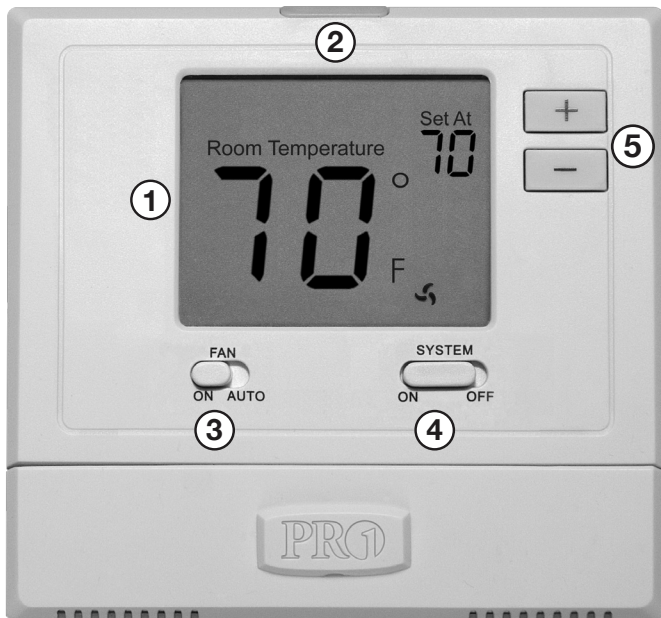

Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- 1 LCD Display:**
See page 2 for details about this display read out.
- 2 Glow in the Dark Light Button:**
The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.
- 3 Fan Switch:**
If your system has a fan, select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.
- 4 System Switch:**
Selects the operation mode of your HVAC system. Selecting **ON** turns on either the heating or cooling. Selecting **OFF** turns off heating or cooling. Your thermostat is configured for either heat or cool.
- 5 Temperature Setpoint Buttons:**
Press the + or - buttons to select the desired room temperature.

Contact Us Information

Pro1 IAQ Inc.

1111 S. Glenstone
Suite 2-100
Springfield, MO 65804

Toll-free: 1-888-Pro1iaq (776-1427)

Toll Number (Outside the USA): 330-821-3600

Web: <http://www.pro1iaq.com>

Hours of Operation: Monday - Friday 9 AM - 6 PM Eastern

Warranty Registration:

Your new Pro1 thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

① Go to www.pro1iaq.com, select warranty registration and fill out a short registration form.

- or -

② Complete the form below and mail it to the address shown.

Pro1 IAQ Warranty Registration:

Name: _____

Thermostat Model: _____

Address: _____

Date Installed: _____

City: _____

Complete form and mail to:

State: _____

Pro1 IAQ Inc.

Zip: _____

1111 S. Glenstone

Suite 2-100

Springfield, MO 65804