

Ventergy Series® fans represent years of engineering development to combine the energy efficiency and sound performance of a forward curved fan, with the durability and pressure characteristics of a backward inclined impeller fan.

General: DSVS distributed supply air ventilators are highly versatile continuous duty rated units for residential applications, and meet ENERGY STAR efficiency criteria for low energy consumption. The DSVS is designed to provide precise amounts of fresh outdoor air to bedrooms and/or living areas.

The DSVS is designed to filter and distribute incoming fresh air, and prevent the introduction of contaminants as a result of unwanted infiltration through leaks in the building's envelope. By slightly pressurizing the structure, the DSVS also reduces the risk of back-drafting heating appliances, water heaters and fireplaces. The DSVS ventilator fan uses a quiet, continuous duty, energy efficient external rotor motor with permanently sealed bearings that provide many years of maintenance free performance.



Construction: The DSVS fan is constructed of heavy gauge galvanized steel to prevent corrosion caused by moisture. The cabinet is internally lined with an acoustic, UL rated, closed-cell foam vapor barrier insulation. This allows installation directly above living spaces, or in unheated plenum spaces without concern for noise or condensation.

Fan and Motor: The fan motor is an energy efficient permanent split capacitor type, with external rotor design. Totally sealed to protect against moisture and contaminants, it incorporates permanently lubricated sealed bearings and automatic reset thermal overload protection. It is designed and certified for continuous duty or intermittent operation.

The fan uses a backward inclined impeller design that minimizes dust collection on blades, effecting airflow performance. Each fan is statically and dynamically balanced at the factory to eliminate vibration and ensure quiet operation.

Fan Controls: The fan can be operated manually, or automatically by a programmable timer, dehumidistat, or other appropriate electronic switch device. The fan may also be operated in conjunction with a variable speed control.

Airflow Controls and Balancing: Each fresh air duct takeoff includes an automatic self-balancing airflow regulator that ensures precise flow rates independent of duct lengths. A passively controlled element in each duct

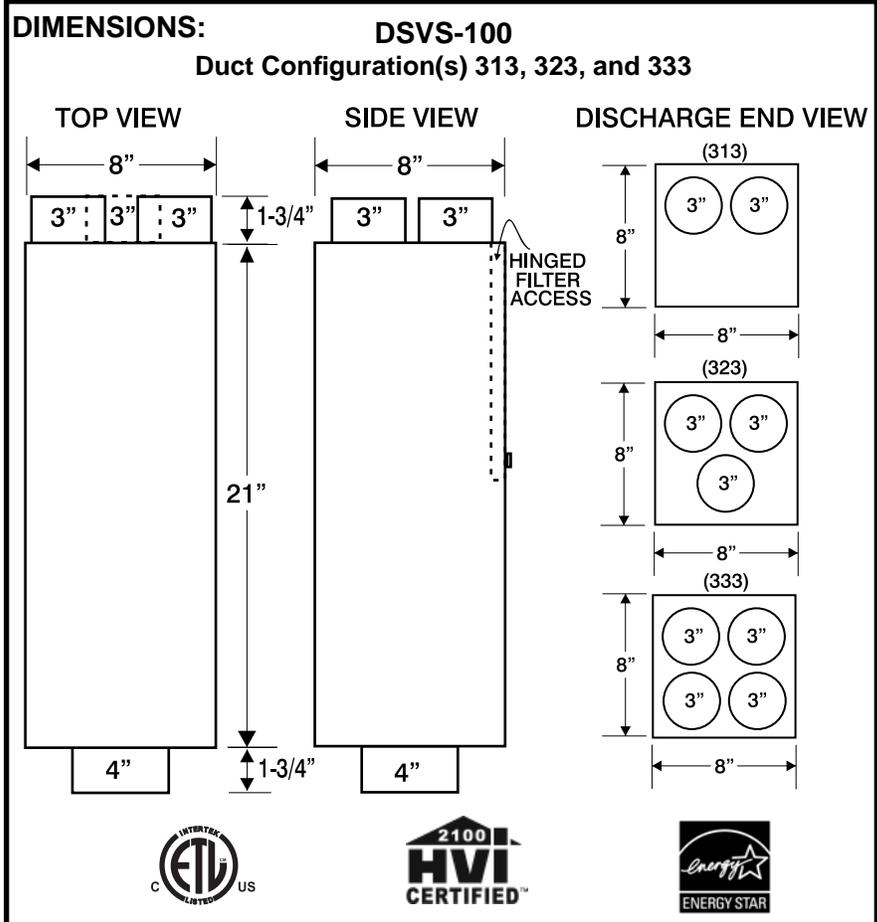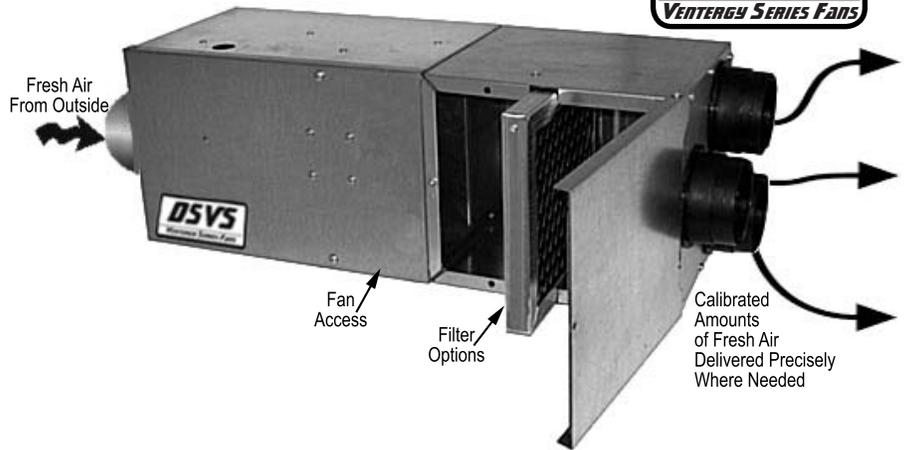

ELECTRICAL AND AIRFLOW PERFORMANCE										
Model	Nominal RPM	HP	Volts	Watts at .2" Ps	MAX. AMPS	CFM vs. Static Pressure*				
						0"	.2"	.4"	.6"	.8"
DSVS-100	3135	0.05	120	37	0.32	130	110	95	74	50

*Certified airflow rating at 0.2" w.g. is derated from actual test results per HVI Certification procedure 920.

run inflates or deflates automatically in response to system pressure to maintain specified airflow rates.

Filters: The DSVS is designed to house several filter options including a MERV 8 pleated disposable type to comply with ASHRAE 62.2 and ENERGY STAR requirements. Other filter options include a permanent washable electrostatic type filter, or a charcoal with MERV 9 arrestance rating.


Serviceability: The entire motor and fan assembly is mounted on a drop-down hinged access panel for service and inspection, and can be removed from the fan housing without disassembly of the ducting connections. The filter/supply air manifold section includes a separate drop-down access panel for filter inspection or removal, and airflow rate adjustments of each supply duct airflow regulator without disconnecting the unit from the duct. Tools are not required for access to filters.

Accessories: To ensure specified performance, each DSVS is supplied with compatible supply grilles, corresponding rough-in boots, back-draft dampers, and fresh air intake weather hood. Accessory packages are available to accommodate applications ranging from a single bedroom apartment to a four bedroom house.

Locating and Installing the Fan: The compact dimensions and versatile mounting options permit installation above drop ceilings, between ceiling joists, or within a small soffit location. They can be installed either horizontally or vertically.

Performance: Fan airflow and energy performance are tested in accordance with HVI standards.

MOUNTING BRACKET LOCATIONS

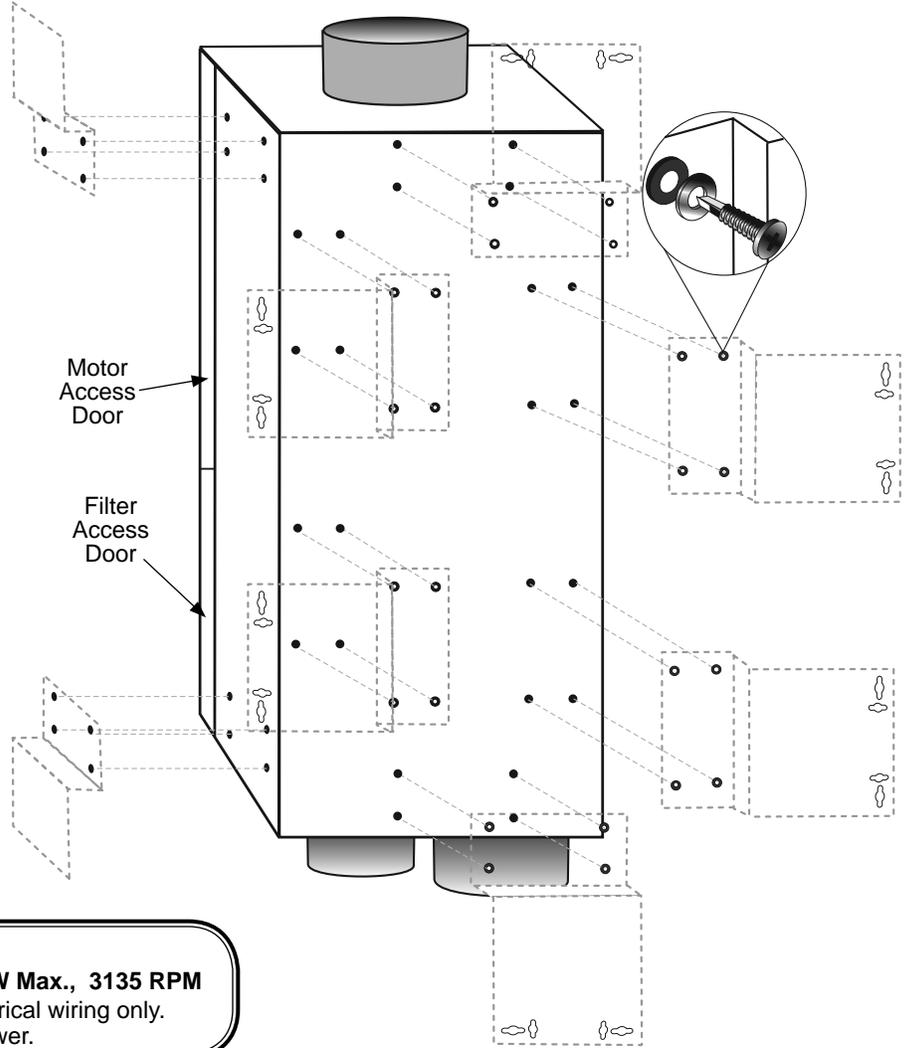

ELECTRICAL DATA

DSVS-100: 120 V, 60 Hz., 0.32 Amp, 37 W Max., 3135 RPM
 Above ratings are intended for sizing electrical wiring only.
 Actual consumption will be lower.

TABLE OF AIRFLOWS AND DUCT LENGTHS*

AIRFLOW CFM	3" SUPPLY DUCT TO FAN Recommended Max. Duct Length from Grille to Fan (ft.)		TOTAL SUPPLY RATE CFM	FAN INTAKE DUCT Assumes low pressure drop vent cap		FOR EACH ELBOW DEDUCT
	SMOOTH	FLEXIBLE		4" SMOOTH	4" FLEXIBLE	
10	225	180	60	40 ft	20 ft	3" Diameter = 3 Feet
20	65	50	75	25 ft	15 ft	
30	30	25	90	18 ft	12 ft	
40**	20	15	100	15 ft	9 ft	
50**	10	10	120	11 ft	8 ft	
			135	8 ft	6 ft	

*This table should only be used as a general guide. Actual duct length allowances may be longer on some models. Contact the factory for assistance. **CAR Flow Regulators not available over 35 cfm. NOTE: If longer duct runs are required than permitted in the table above, use smooth ducting and/or increase the diameter.

AMERICAN
aldes
 VENTILATION CORPORATION

4521 19th Street Court E., Suite 104, Bradenton, FL 34203 USA
 P: 941-351-3441 - F: 941-351-3442
 www.americanaldes.com ~ E: info@aldes-us.com

IAQ
 VENTILATION
 HOTLINE
 800-255-7749

dsvs_distributed_supply_fan_iom_0510

READ AND SAVE THESE INSTRUCTIONS

For The Following Base Models:

RDF 8-8IP, RDF 8-8MAX, RDF 12-8IP, RDF 12-8

(See supplemental instructions for derived models, with duct adapters, manifolds, etc., as appropriate for your particular model.)

CAUTION

For General Ventilating Use Only. Do Not Use to Exhaust Hazardous or Explosive Materials and Vapors.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- A. Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- B. Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.

In addition to the following manufacturer's instructions, it is necessary to comply with federal, state, and local government codes. Your purchase of this American ALDES ventilation system represents an investment in the health and comfort of the occupants, as well as an investment in the protection of the building from the damaging effects of excessive indoor humidity.

This model of centrifugal fan is designed for multiple purposes. It may be used as an in-line rectangular duct fan (Model RDF) or a manifolded, multi-port fan for multiple exhaust or supply points. It may be installed in a remote location such as an attic space, mechanical room or above a drop ceiling, in a closet or laundry room, to provide quiet exhaust of stale, humid, or otherwise polluted air from bathrooms, the kitchen, laundry, or storage rooms, via exhaust grilles and ducting to the centrally located fan, which is ducted to the outdoors. With small return grilles in bedrooms and other areas, and one duct connection

to the outdoors, as the BVS models, it may also be used as a supply ventilator or recirculating central ventilator for the introduction of outdoor air, raising the temperature of the fresh air by mixing with recirculated indoor air. When used with adjustable balancing grilles or ALDES CAR, Constant Airflow Regulators, and compatible roof/wall caps, ducting, etc., the fan is the heart of a complete pre-engineered ventilation system.

SYSTEM DESIGN:

Satisfactory performance of a central ventilation system requires the proper integration of all the components:

- Fan selection for airflow, pressure and acoustic properties, vibration characteristics and mounting method, and mode of operation (continuous, manually or automatically controlled)
- Proper duct design for friction losses, with compatible supply or exhaust grilles (airflow and acoustic properties of the supply/exhaust grilles, and compatible wall/roof caps)
- Method of balancing airflows of multi-point ventilation systems
- Consideration for the potential of condensation in the ducting or fan housing (installation in an unheated space)

Upon receipt, inspect the carton to insure the fan has not been damaged in transit. If damaged, it is the responsibility of the recipient to file a damage claim with the carrier. American ALDES Ventilation Corporation is not responsible for damage incurred during shipment.

Handle the unit with care to prevent damage to the housing and other components. Store the unit indoors if possible. If outdoor storage is required, protection against moisture and dirt is necessary.

Unpack the unit, taking care to look for any loose components among the packing material. Make certain that the fan housing and the blower is free of any loose packing material or small parts. If not removed before startup, damage and injury may result from solid objects discharged by the blower. Inspect for damage, loose or missing parts.

Install the unit in its final location. The fan may be installed in a mechanical room, crawl space or attic. It is designed to be placed on a flat surface, against a wall or trusses, or suspended from above. If set on a flat surface, vibration isolation pads are recommended. Mounting brackets with rubber grommets are supplied to permit installation against a vertical surface or from a ceiling above. Alternatively, it may be suspended using threaded rods or chains. At least 12 inches clearance is needed from the access panel to permit servicing the motor.


MOUNTING INSTRUCTIONS

(Differences in bracket type and configuration may exist on some derived models. Refer to supplement where appropriate). Orient the fan so that the access door can be opened for service.

Tools Required:

**Power screwdriver with
No. 2 Philips bit.**

Mounting brackets are supplied with the fan. The brackets may be mounted to the fan using the self-drilling screws and rubber grommets provided, at the locations indicated by dimple marks on the side and bottom panels of the fan. Pan head number 10 screws are provided to attach the mounting bracket to the building framing members. It may be necessary to add additional framing members to span wall studs. It is not recommended to use drywall anchors to support the fan. If installed against a concrete or masonry wall, concrete

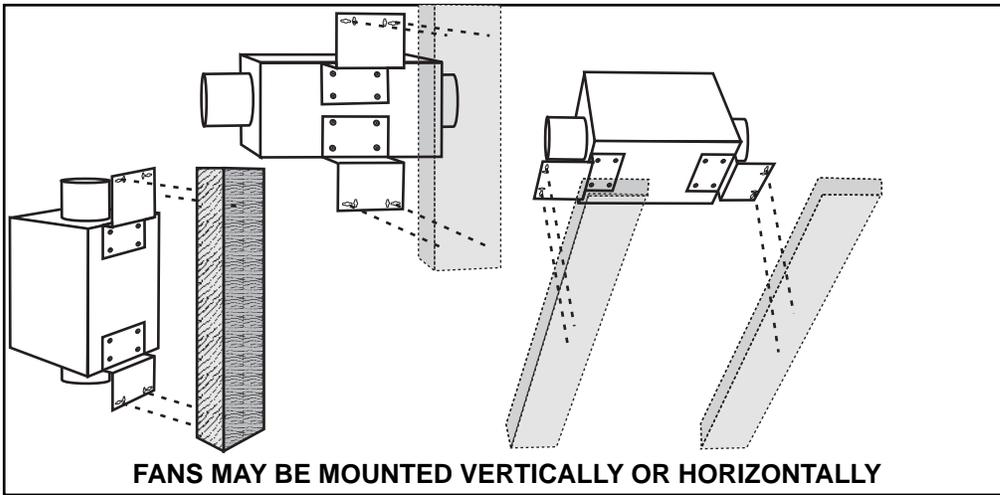

FANS MAY BE MOUNTED VERTICALLY OR HORIZONTALLY

anchors are recommended. The rubber grommets provide vibration isolation.

The brackets should be attached to the fan first. Then install the wood screws at the keyhole locations and install the fan.

The fan may also be mounted on a foam rubber pad on a flat surface, such as an attic floor.

COLD CLIMATE PRECAUTIONS

If installed in an unheated space, in cold climates, there is a possibility

of condensation forming in the fan housing or ducting components. A backdraft damper installed at each grille is very effective in reducing the potential for condensation when the fan is cycled on and off. Insulated ducting must be used where exposed to cold attic or crawl space temperatures, to avoid condensation in the ducting. Condensation can also be avoided by continuous operation of the fan.

DUCT CONNECTIONS

Ducting may be flexible or rigid,

depending on local codes. If permitted by code, insulated flexible ducting is recommended for at least several feet on each duct connection, to limit fan noise at the outlet grilles. Ducting should conform to NFPA 90A and meet the requirements of Underwriters Laboratory as a Class O or Class 1 duct to specification UL 181, Standard for Factory-Made Air Ducts and Duct Connectors. Metal ducting must be sealed on both the end joints and longitudinal seams to avoid duct leakage and assure proper airflows at the grilles.

MAINTENANCE

Monthly:

Inspect and clean the exhaust grilles and filters, if so equipped.

Annually:

To ensure the maximum efficiency of the fan unit, is recommended to clean the inside of the fan box as well as the blower wheel.

CAUTION:

Automatically operated device—to reduce risk of injury disconnect from the power supply before servicing.

DISASSEMBLY

Turn off all power to the unit. The blower

WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- A. Installation Work and Electrical Wiring Must Be Done By Qualified Person(s) In Accordance With All Applicable Codes And Standards, Including Fire-Rated Construction.
- B. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- C. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- D. When used as exhaust fans, ducted fans must always be vented to the outdoors.

E. If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) - protected branch circuit.

F. NEVER place a switch where it can be reached from a tub or shower.

ELECTRICAL


Provide disconnect switch in vicinity of fan, to permit servicing fan, in accordance with NEC and local codes.

Depending on the desired mode of operation, switches may be simple on-off switches, motor speed controls, timer switches, time delay, time of day cycle timers, dehumidistats,


occupancy sensing controls, controllers, etc., provided they are rated for motor duty and meet the nameplate electrical ratings of the motor. (Additional application wiring diagrams are available illustrating a variety of controls for use with RDF fans by calling the factory at 1-800-255-7749.)

ELECTRICAL DATA

Base Model	Volts	Max Amps	Max Watts	RPM
RDF 8-8IP	115	0.19	21	2500
RDF 8-8MAX	115	0.29	34	3135
RDF 12-8IP	115	0.34	41	2200
RDF 12-8	115	0.53	59	2960

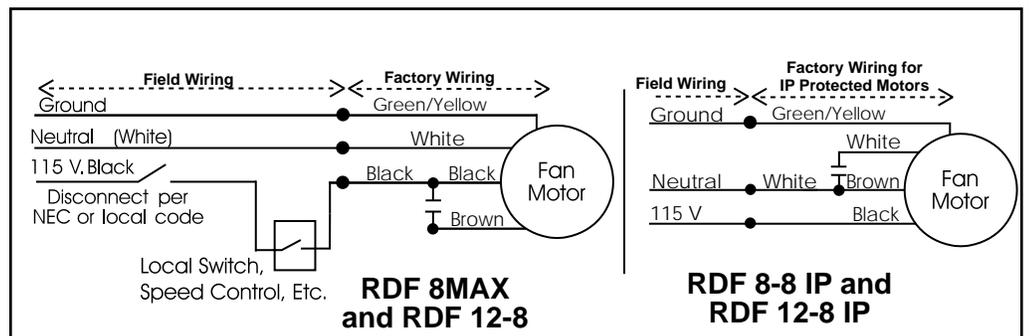

For installations in which the fan is connected to a range hood, or if an exhaust grille connected to the fan is located near the cooking surface as shown below, be sure to observe the following safety warnings:

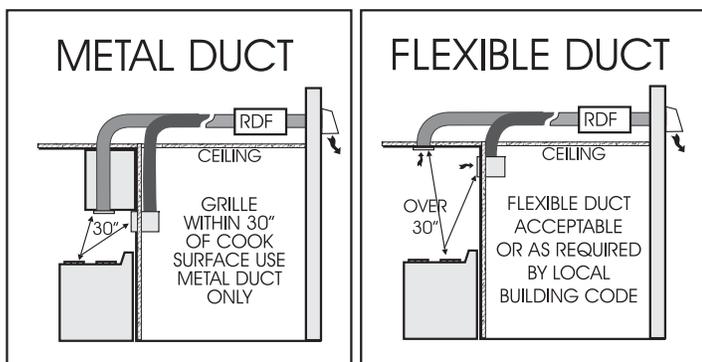

WARNING
TO REDUCE THE RISK OF FIRE, USE ONLY GALVANIZED STEEL DUCTWORK WHERE REQUIRED TO USE METAL DUCT.

(Note: If the fan is not connected to a range hood or a grille in the vicinity of the cooking surface, other approved ducting may be used as described in "Ducting" section of basic instructions.)

WARNING

TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

- A. Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- B. Always turn hood ON when cooking at high heat or flambeing food (i.e. Crepe Suzette, Cherries Jubilee, Peppercorn Beef Flambe).
- C. Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
- D. Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING:

- A. SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately EVACUATE AND CALL THE FIRE DEPARTMENT.
- B. NEVER PICK UP A FLAMING PAN - You may be burned.
- C. DO NOT USE WATER, including wet dishcloths or towels - a violent steam explosion could result.
- D. Use an extinguisher ONLY if:
 1. You know you have a Class ABC extinguisher, and you already know how to operate it.
 2. The fire is small and contained in the area where it started.
 3. The fire department is being called.
 4. You can fight the fire with your back to an exit.

*Based on "Kitchen Firesafety Tips" published by NFPA.

may be inspected and cleaned by removing the two screws from the hinged access panel. The blower assembly can now be swung open for cleaning the wheel.

DISCLAIMER:

IT IS THE RESPONSIBILITY OF THE CONTRACTOR/INSTALLER TO DETERMINE THE SUITABILITY OF THIS EQUIPMENT WITH RESPECT TO THE POTENTIAL FOR BACK DRAFTING NATURALLY VENTED FLUE DEVICES AND/OR AFFECTING RADON ENTRY.

IMPACT OF EXHAUST FANS:

In especially tight homes heated with naturally vented appliances, such as gas, oil or wood-fired furnaces, boilers, stoves or fireplaces, the exhaust system may produce sufficient negative pressure indoors to induce the backdrafting of flue gases. This is a common, though intermittent occurrence, with conventional exhaust systems, such as vented kitchen range hoods, clothes dryers, bath fans, etc. In the case of continuous exhaust,

BACKDRAFTING AND VENTILATION EQUIPMENT

even though often at lower flow rates, the potential for backdrafting the flue of these appliances does exist, and represents a dangerous situation.

The International Fuel Gas Code, Appendix D, - (http://www2.iccsafe.org/states/Seattle/seattle_fuelgas/PDFs_fuelgas/Appendix%20D.pdf) provides a Recommended Procedure for Safety Inspection of an Existing Appliance Installation.

This procedure should be followed to determine the presence of adequate combustion air, while all exhaust fans are operating at maximum speed, and all doors and windows are closed.

In the event that backdrafting occurs, steps must be taken to provide sufficient combustion air to the furnace or boiler, following the guidelines of the National Fuel Gas Code and all state and local codes.

MECHANICAL SUPPLY FANS:

Mechanical supply of outdoor air tends to reduce the potential and frequency of

backdraft by reducing the contributing negative pressures. However, because of a multitude of factors, including the wide range of exhausting appliances that may be present, effects of wind and building shape, presence of multiple chimneys, building leakage and use of operable windows, no one can assure elimination of backdraft conditions so long as atmospherically vented combustion equipment is present in the home.

American ALDES Ventilation Corporation accepts no liability for backdraft conditions resulting from negative pressures. Nor does American ALDES make representation that blending supply ventilators are adequate to prevent such occurrences.

SEE THE THREE (3) YEAR WARRANTY INFORMATION EXPLAINED ON THE BACK PAGE.

NOTE: THIS WARRANTY SUPERSEDES ALL PRIOR WARRANTIES

REPLACEMENT PARTS LIST (BASE MODELS)

Model	Motor Part No	Impeller Dimensions (mm)	Capacitor Part No. Cap	
RDF 8-8IP*	86 561	133 x 42	86 172	4uF
RDF 8-8 MAX	86 561	133 x 45	86 172	4uF
RDF 12-8IP*	86 562	180 x 35	86 174	10uF
RDF 12-8	86 562	180 x 35	86 170	5uF

*Designates Impedance Protection, with alternate wiring of capacitor across aux. winding of motor.

THREE (3) YEAR WARRANTY

THIS WARRANTY SUPERSEDES ALL PRIOR WARRANTIES

FOR FACTORY RETURN YOU MUST:

- 1) Have a Return Materials Authorization (RMA) number. This number may be obtained by calling:

AMERICAN ALDES VENTILATION CORPORATION
PHONE: 1-800 255-7749.

Please have the Bill of Sale available.

- 2) The RMA number must be clearly displayed on the outside of the carton, or delivery will be refused.
- 3) All product being returned must be shipped prepaid and be accompanied with a copy of the Bill of Sale.
- 4) Product will be replaced/repared and shipped back to buyer. No credits will be issued.

DURING THE FIRST THIRTY (30) DAYS:

AMERICAN ALDES VENTILATION CORPORATION will replace any product which has a factory defect in workmanship or material. Product may be returned to either the point of purchase or the AMERICAN ALDES factory, together with Bill of Sale, for an immediate replacement.

DURING THE FIRST THREE (3) YEARS (excluding the above 30 day period):

AMERICAN ALDES VENTILATION CORPORATION will replace any product which has a factory defect in workmanship or material. Product must be returned to the AMERICAN ALDES factory, together with the Bill of Sale, and identified with an RMA number.

WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damages from shipping, either concealed or visible. Claim must be filed with the carrier.
- Damages resulting from improper wiring or installation.
- Damages caused by acts of nature, or resulting from improper consumer procedures such as:
 - Improper Maintenance
 - Misuse, abuse, abnormal use, or accident
 - Incorrect electrical voltage or current
 - Removal or alterations made on the AMERICAN ALDES VENTILATION CORPORATION label control number or date of manufacture
- Any other warranty, expressed, written or implied, and to any consequential or incidental damages, loss of property, revenues, or profit, or costs of removal, installation or reinstallation, for any breach of warranty.

WARRANTY VALIDATION

The end user must keep a copy of the Bill of Sale to verify purchase date.

LIMITATIONS OF WARRANTY AND LIABILITY

This warranty does not apply to any AMERICAN ALDES product or part which has failed as a result of faulty installation or abuse, incorrect electrical connections or alterations made by others, or use under abnormal operating conditions or misapplication of the product or parts. We will not approve for payment any repair not made by us or our authorized agent without prior written consent. The foregoing shall constitute our sole and exclusive warranty and our sole and exclusive liability, and is in lieu of any other warranties, whether written, oral, implied or statutory. There are no warranties which extend beyond the description on the page hereof. In no event, whether as a result of breach of contract, or warranty or alleged negligence, defect, incorrect advice or other causes, shall AMERICAN ALDES be liable for special or consequential damages, including but not limited to, loss of profits or revenue, loss of use of equipment or any other associated equipment, cost of substitute equipment, facilities or services, downtime costs, or claims of customers of purchases for such damages. AMERICAN ALDES neither assumes or authorizes any person to assume for it any other liability in connection with the sale of its products or parts. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.



4521 19th Street Court E., Suite 104, Bradenton, FL 34203 USA
 P: 941-351- 3441 - F: 941-351- 3442
 www.americandaldes.com ~ E: info@aldes-us.com

