EV9618-02 OCS² Filter Cartridge Delivers premium quality water for office coffee applications BENEFITS New and improved Micro-Pure II media with AgION^{\rm TM} antimicrobial protection inhibits any potential bacterial growth Provides clear, fresh, premium quality ingredient water for consistently great tasting coffee and beverages OCS Everpure's unique filter blend using activated carbon reduces chlorine taste and odor and other offensive contaminants Saves energy by reducing scale build-up. Proportioned scale inhibitor feed dramatically prevents limescale from forming in brewing equipment Precoat submicron technology reduces dirt and particles as small as 1/2 micron in size OCS² Replacement Cartridge: EV9618-02 Reduces health contaminants such as asbestos micro-pure II fibers and Cryptosporidium and Giardia cysts Sanitary cartridge replacement is simple, quick and clean. Internal filter parts are never exposed to handling or contamination NSF Certified under NSF/ANSI Standards 42

INSTALLATION TIPS

OPERATION TIPS

Never use saddle valve for connection

Use 3/8" water line

Install vertically with cartridge hanging down

Allow 2-1/2" clearance below the cartridge for easy cartridge replacement

Flush OCS cartridge by running water through filter for three minutes at full flow

Change cartridges on a regular 6 month preventative maintenance program

A P P L I C A T I O N / S I Z I N G

Rated Capacity: 1,500 gallons (5,678L) or 3,000

For coffee service applications

pots

For low flow, low volume brewers

Change cartridges when capacity is reached or when pressure falls below to psi

Service flow rate must not exceed 0.5 gpm

Always flush the filter cartridge at time of installation and cartridge change

OCS² Filter Cartridge

S P E C I F I C A T I O N S

Overall Dimensions: 10.25"H x 3.25"Diameter

Service Flow Rate: Maximum 0.5 gpm (1.9 Lpm)


Rated Capacity: 1,500 gallons

Pressure Requirements: 10 - 125 psi (0.7 - 8.6 bar), non-shock

Maximum Temperature: 35 - 100°F (2 - 38°C)

No electrical connection required

The contaminants or other substances removed or reduced by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.

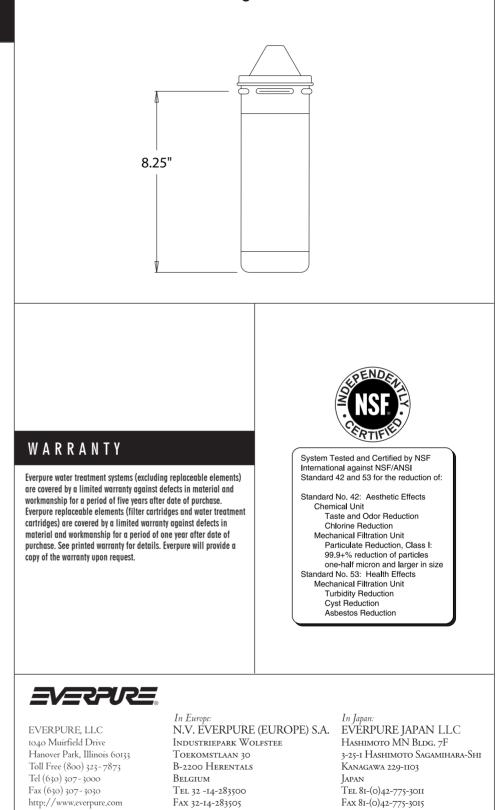

Everpure, LLC 1040 Muirfield Drive Hanover Park, IL 60133 Ph: 630-307-3000 Fax: 630-307-3030