

OpenAir™

GMA Series Spring Return Rotary Electronic Damper Actuators



Description

The OpenAir direct-coupled spring return electronic actuator is designed for modulating, two-position, and three-position control of building HVAC dampers.

Features

- Brushless DC motor technology with stall protection
- Bi-directional fail-safe spring return
- Models available with dual, independently adjustable auxiliary switches
- Unique self-centering shaft coupling
- Manual override
- Available in 62 lb-in torque
- 5° preload as shipped from factory
- Mechanical range adjustment capabilities
- UL and cUL listed, CE certified
- 24 Vac/dc compatible

Application

Used in constant or variable air volume installations for the control of return air, mixed air, exhaust, and face and bypass dampers requiring up to 62 lb-in (7 Nm) torque.



Designed for applications that require the damper to return to a fail-safe position when there is a power failure.

Product Numbers

Table 1.

Product Number	Operating Voltage		Control				Cables		Built-In Control Options				
	24 Vac $\pm 20\%$ 24 Vdc $\pm 15\%$	120 Vac $\pm 10\%$	Modulating 0 to 10 Vdc	Modulating 2 to 10 Vdc	3-position	2-position	Standard	Plenum	Position Feedback	Dual Auxiliary Switches	Offset 0 to 5 Vdc Span 2 to 30 Vdc	Input Signal Inversion (Direct or Inverse Acting)	Feedback Signal Inversion
GMA121.1U	•					•	•						
GMA121.1P	•					•		•					
GMA121.1P/B	•					•		•					
GMA126.1U	•					•	•			•			
GMA126.1P	•					•		•		•			
GMA221.1U		•				•	•						
GMA226.1U		•				•	•			•			
GMA131.1U	•				•		•						
GMA131.1P	•				•			•					
GMA132.1U	•				•		•		•				
GMA136.1U	•				•		•			•			
GMA151.1U	•			•			•		•			•	•
GMA151.1P	•			•				•	•			•	•
GMA156.1U	•			•			•		•	•		•	•
GMA156.1P	•			•				•	•	•		•	•
GMA161.1U	•		•				•		•				
GMA161.1P	•		•					•	•				
GMA163.1U	•		•				•		•		•		
GMA163.1P	•		•					•	•		•		
GMA164.1U	•		•				•		•	•	•		
GMA166.1U	•		•				•		•	•			
GMA166.1P	•		•					•	•	•			

Warning/Caution Notations

WARNING:		Personal injury/loss of life may occur if you do not perform a procedure as specified.
CAUTION:		Equipment damage may occur if you do not follow procedure as specified.

Specifications Power Supply 24 Vac/24 Vdc	Operating voltage	24 Vac \pm 20%; 24 Vdc \pm 15%
	Frequency	50/60 Hz
	Power consumption	
	running (GMA 12x, 13x, 15x, 16x)	5 VA/3.5W
	holding (GMA 12x, 13x, 15x, 16x)	4 VA/3W
	Equipment rating	Class 2, in accordance with UL/CSA Class III per EN 60730
Power Supply 120 Vac	Operating voltage	120 Vac \pm 10%
	Frequency	50/60 Hz
	Power consumption	
	running and holding (GMA 22x)	7 VA/5W
Control Signal	Input signal (wires 8–2)	
	voltage input signal GMA16x	0 to 10 Vdc (max. 35 Vdc)
	voltage input signal GMA15x	2 to 10 Vdc (max. 35 Vdc)
	input resistance	>100K ohms
Feedback Signal	Position output signal (wires 9–2)	
	voltage output signal GMA16x	0 to 10 Vdc
	voltage output signal GMA15x	2 to 10 Vdc
	maximum output current	+1 mA, -0.5 mA
Function	Running/spring return torque	62 lb-in (7 Nm)
	Maximum torque	186 lb-in (21 Nm)
	Runtime for 90°	
	operating with motor	90 seconds
	closing (on power loss) with spring return	15 seconds typical (60 seconds max. at -25°F (-32°C))
Mounting	Nominal angle of rotation	90°
	Maximum angular rotation	95°
	Shaft size	1/4 to 3/4-inch (6.4 to 20.5 mm) dia. 1/4 to 1/2-inch (6.4 to 13 mm) square
	Minimum shaft length	3/4-inch (20 mm)
Housing	Enclosure	NEMA 1 IP54 according to EN 60 529 (limited positions, see <i>Installation Instructions</i> 129-307)
	Material	Die cast aluminum alloy
	Gear lubrication	Silicone free
Ambient Conditions	Ambient temperature	
	operation	-25°F to 130°F (-32°C to 55°C)
	storage and transport	-40°F to 158°F (-40°C to 70°C)
	Ambient humidity (non-condensing)	95% rh
Agency Certification		UL listed to UL60730 (to replace UL873) cUL certified to Canadian Standard C22.2 No. 24-93 Australian Electromagnetic Compatibility (EMC) per AS/NZS 4251.1/2:1999 (C-tick)

Agency Certification, continued	Low voltage directive (LVD)	73/23/EEC EN 60 730-2-14 (Type 1)
	Electromagnetic compatibility (EMC)	89/336/EEC
CE Conformity	Immunity for all models, except GMA132.xx	EN 61 000-6-2
	Immunity for GMA132.xx	EN 50 082-1
	Emissions for all models	EN 50 081-1
Auxiliary Features	Control signal adjustment	
	Offset (start point)	Between 0 to 5 Vdc
	Span	Between 2 to 30 Vdc
	Dual auxiliary switches	
	AC rating (standard cable)	24 to 250 Vac AC 6A resistive AC 2A general purpose
	AC rating (Plenum cable)	24 Vac AC 4A resistive AC 2A general purpose
	DC rating (Standard/Plenum cable)	12 to 30 Vdc DC 2A
	Switch Range	
	Switch A	0° to 90° with 5° intervals
	Recommended range usage	0° to 45°
	Factory setting	5°
	Switch B	0° to 90° with 5° intervals
	Recommended range usage	45° to 90°
	Factory setting	85°
	Switching hysteresis	2°



WARNING:

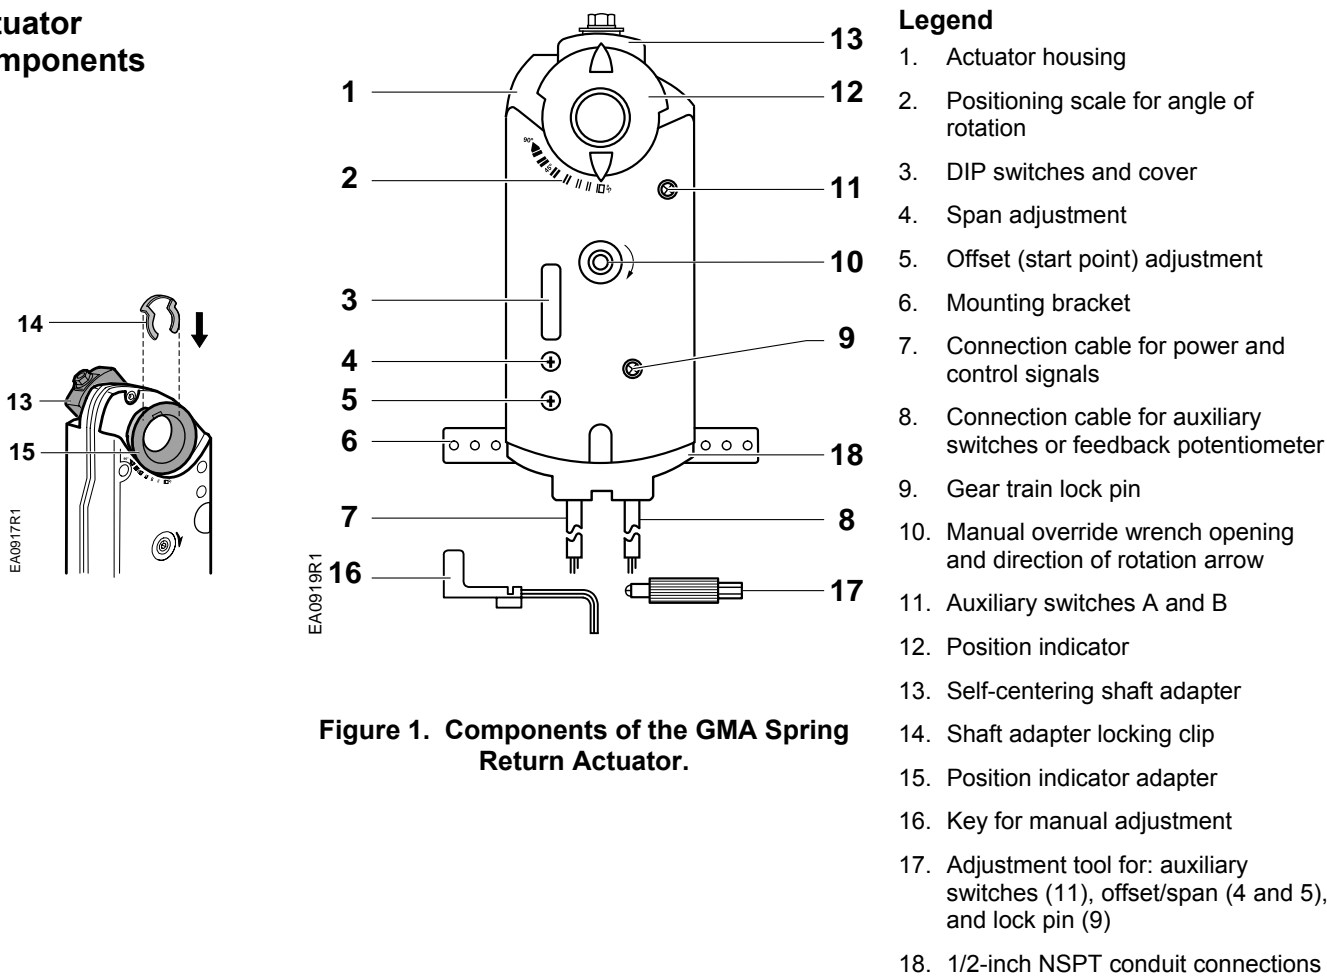
Apply only AC-line voltage from the same phase or only UL-Class 2 voltage (SELV for CE conformance) to the switching outputs of both auxiliary switches A and B. Mixed operation is not permissible.

NOTE:

With plenum cables, only UL-Class 2 voltage (SELV for CE) is permitted.

Specifications, continued	Feedback potentiometer (GMA 132.1U)	
	Sliding contact (P2) Load Voltage	0 to 1000 ohm <10 mA <1W UL-Class 2 (SELV/PELV for CE) <24 Vac/dc
Miscellaneous	Pre-cabled connection	18 AWG (0.75 mm ²)
	Cable length	3 feet (0.9 m) length
	Noise level	40 dBA
	Life cycle	Designed for over 60,000 full stroke cycles and a minimum of 1.5 million repositions at rated torque and temperature
	Dimensions	8-3/8-in. H × 3-1/4-in. W × 2-2/3-in. D (212 mm H × 83 mm W × 68 mm D)
	Weight	2.9 lbs (1.3 kg)

**Actuator
Components**



**Figure 1. Components of the GMA Spring
Return Actuator.**

Accessories

NOTE: The auxiliary switches, control signal adjustment, and feedback potentiometer cannot be added in the field. Order the product number that includes the option(s).

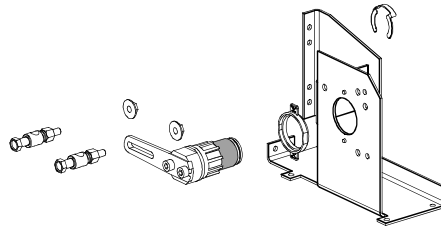


Figure 2. Floor/Frame Mount Kit.

ASK71.11

For in-the-air stream applications; anywhere a foot-mounted actuator can be mounted. Can also be directly mounted to a damper frame with louvers and vents and in applications where use of the floor mount is not possible.

Kit contains:

- Crank arm to change the angular rotation into a linear stroke.
- Support bearing ring to minimize side loading on the actuator's output bearing.
- Mounting bracket, and required mounting fasteners.

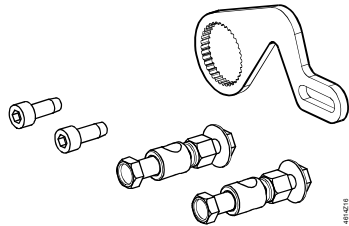


Figure 3. Rotary to Linear Crank Arm Kit.

ASK71.13

Allows a direct-coupled actuator to provide an auxiliary linear drive. Can be used to simultaneously drive a set of opposing or adjacent dampers with a single actuator. Kit contains:

- Crank arm to attach to the splined hub of the shaft adapter.
- Mounting fasteners.

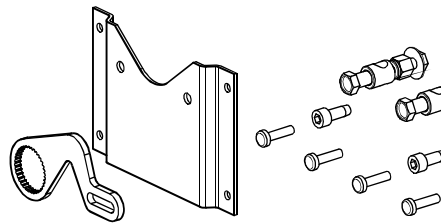


Figure 4. Rotary to Linear Crank Arm Kit with Mounting Bracket.

ASK71.14

Allows economical mounting of an OpenAir actuator to a variety of surfaces. Should be used in applications where the actuator can be rigid-surface mounted and a linear stroke output is required.

Kit contains:

- Crank arm to attach to the splined hub of the shaft adapter.
- Mounting bracket, and other required mounting fasteners.

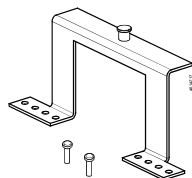
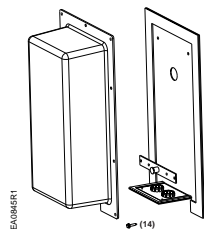


Figure 5. Tandem Mount Bracket.

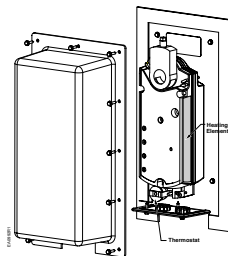
ASK73.3

Bracket provides an extended anti-rotation pin allowing two actuators to directly drive a single damper shaft (tandem operation).

NOTE: GMA16x and GMA15x must not be tandem mounted.

**Accessories,
continued****Figure 6. Weather Shield.**

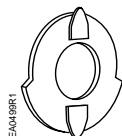
ASK75.3U GMA actuators are UL listed to meet NEMA 3R requirements (a degree of protection against rain, sleet, and damage from external ice formation) when installed with ASK75.3U Weather Shield and outdoor-rated conduit fittings in the vertical position. See Figure 20 for dimensions.

**Figure 7. Heater/Weather Shield Assembly.**

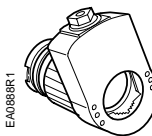
985-108: Provides protection for 24 Vac/dc OpenAir GMA1xx actuators down to temperatures of -58°F (-50°C).

Assembly includes:


- Weather Shield
- Heater Kit

Service Parts**985-094P10**


Position indicators (10/pkg.)

**985-093**

Standard shaft adapter

**985-098**

Adjustment Tool

**985-092**

Anti-rotation (mounting) bracket

**985-124**

499-ohm resistor assembly kit for 4 to 20 mA applications.

Figure 8. GMA Series Service Parts.**Operation****GMA16x, GMA15x**

Apply a continuous 0 to 10 Vdc, or 2 to 10 Vdc control signal between wire 8 (Y) and wire 2 (G0) to operate the damper actuator. The angle of rotation is proportional to the control signal.

A 0 to 10 Vdc or 2 to 10 Vdc position feedback output signal is available between wire 9 (U) and wire 2 (G0) to monitor the position of the damper motor.

In the event of a power failure or when the operating voltage is shut off, the actuator returns to the "0" position.

GMA12x and GMA 22x

When power is applied, the actuator coupling moves toward the open position "90°". In the event of a power failure or when the operating voltage is shut off, the actuator returns to the "0" position.

Operation, continued

GMA13x

A floating control signal controls the damper actuator. The actuator's angle of rotation is proportional to the length of time the signal is applied. A 24 Vac/dc control signal to wire 6 (Y1) causes the actuator coupling to rotate clockwise. A 24 Vac/dc control signal to wire 7 (Y2) causes the actuator coupling to rotate counterclockwise.

With no control voltage, the damper actuator holds its position. In the event of a power failure, the actuator spring returns to the "0" position.

Overload Protection

In the event of a blockage in the damper, the actuator is overload protected over the full range to prevent damage to the actuator.

Life Expectancy

An improperly tuned loop will cause excessive repositioning that will shorten the life of the actuator.

Sizing

The type of actuator required depends on several factors:

1. Obtain damper torque ratings (lb-in/ft² or Nm/m²) from the damper manufacturer.
2. Determine the area of the damper.
3. Calculate the total torque required to move the damper:

$$\text{Total Torque} = \frac{\text{Torque Rating} \times \text{Damper Area}}{\text{SF}^1}$$

4. Select a spring return actuator using Table 2.

¹Safety Factor: When calculating the total torque required, a safety factor should be included for unaccountable variables such as slight misalignments, aging of the damper, etc. A suggested safety factor is 0.80.

NOTE: Mechanically coupled actuators must be of the exact same type except for the dual auxiliary switches and feedback potentiometer options. Use the correct mounting bracket. See Table 2..























































Table 2.

DC Power (24 Vdc)		AC Power (24 Vac, 120 Vac)	
Total Torque	Actuator	Total Torque	Actuator
<62 lb-in (7 Nm)	GMA1xx	<62 lb-in (7 Nm)	GMA
>62 lb-in <106 lb-in (>7 Nm <12 Nm)	GCA12x, GCA13x, GCA15x*	>62 lb-in <142 lb-in (>7 Nm <16 Nm)	GCA
>106 lb-in <212 lb-in (>12 Nm <24 Nm)	Use tandem mounting bracket ASK73.1 with any combination of: • GCA12x actuators • GCA13x actuators Use tandem mounting bracket ASK73.2U with any combination of GCA151 and GCA156 actuators. *	>142 lb-in <284 lb-in (>16 Nm <32 Nm)	Use tandem mounting bracket ASK73.1 with any combination of: • GCA12x actuators • GCA22x actuators • GCA13x actuators • Master/Slave actuators (See <i>Technical Instructions 155-543P25</i>) Use tandem mounting bracket ASK73.2U with any combination of: • GCA151 and GCA156 actuators* • GCA161 and GCA166 actuators

Mounting and Installation

Flip the actuator to select either clockwise or counterclockwise fail-safe rotation of the damper shaft. Follow steps 1, 2, and 3 of Table 3 to determine the correct actuator mounting orientation.

Table 3. Actuator Mounting Orientation and Damper Control.

EA1056R1	Determining the Actuator Mounting Orientation		① Damper Type				
			② Power Fail Spring Return Position	 Close	 Open	 Close	 Open
			③ Actuator Mounting Orientation				
EA1056R1	2-Position	GMA12x	Power On	 Open		 Open	
		GMA22x		 Open		 Open	
EA1057R1	3-Position	GMA13x	Y1 	 Open		 Open	
			Y2 	 Open		 Open	
		GMA13x	Y1 				
			Y2 				
EA1056R1	Modulating Control	GMA15x	Y = 10V 	 Open		 Open	
			Y = 2V 				
		GMA16x	Y = 10V (or Y = U ₀ + ΔU)	 Open		 Open	
			Y = 2V 				
		GMA15x	Y = 10V 				
		GMA16x	Y = 0V (or Y = U ₀)				

- The shaft adapter and the position indicator can be mounted on either side of the actuator. The actuator mounting orientation and shaft length determine how they will be mounted on the actuator.
- The minimum damper drive shaft length is 3/4-inch (20 mm).
- See *Specifications* for the minimum and maximum damper shaft dimensions.
- The actuator is shipped from the factory with a 5° preload enabling tight close off of the damper in power-fail-close applications.
- A mounting bracket is included with the actuator.
- The shaft adapter and mounting parts are shipped in a separate container with the actuator.
- See the detailed mounting instructions included with each actuator.

Manual Override

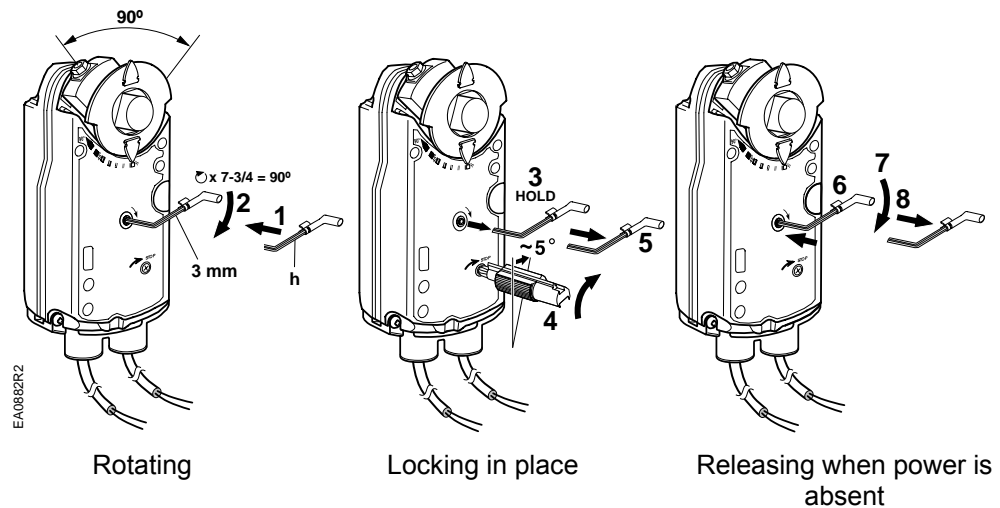


Figure 9. Manual Override.

NOTE: Always turn the key in the direction of the arrow.



CAUTION:

When engaging the gear train lock pin, carefully turn only about 5 degrees until you meet slight resistance. Turning too far will strip the lock pin.

To Release Manual Override

Do one of the following:

- Restore power and send a control signal.
- When power is absent, do the following:
 1. Insert the 3 mm hex key in the override opening.
 2. Turn the key in the direction of the arrow.
 3. Remove the key.

Mechanical Range Adjustment

The angular rotation is adjustable between 0° and 90° at 5-degree intervals.

To limit the range of shaft movement:

1. Remove the locking clip and self-adjusting shaft adapter.
2. Rotate the damper blade shaft to its failed position.
3. Rotate the shaft coupling to the desired position.
4. Insert the shaft adapter into the actuator and fasten it with the locking clip. See Figure 10.

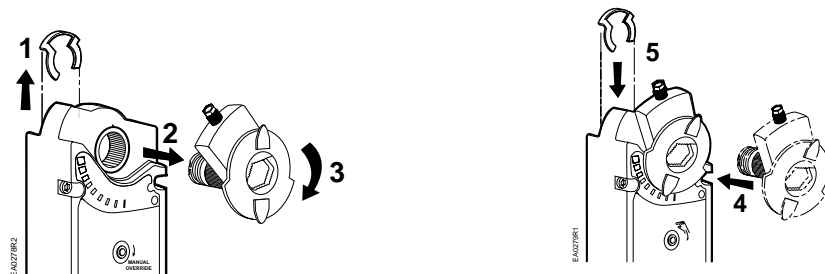


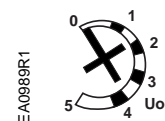
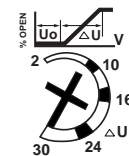
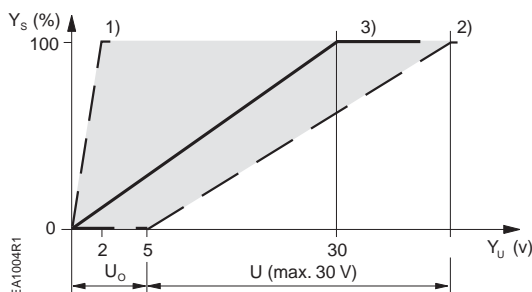
Figure 10. Mechanical Range Adjustment.

Control Signal Adjustment

(Offset and Span)

GMA163**GMA164**

The offset (start point) and span of the control signal can be adjusted. The offset, U_o , can be adjusted between 0 to 5 Vdc. The span, ΔU , can be adjusted between 2 to 30 Vdc.



- Y_s Mechanical positioning range (100% = angle of rotation 90°)
 Y_u Control signal
 U_o Offset (start point)
 ΔU Span

Factory Setting
of 30V span
0 offset

1. $U_o = 0V$, $\Delta U = 2V$ The minimum working range for $Y_s = 100\%$
2. $U_o = 5V$, $\Delta U = 30V$ The maximum working range for $Y_s = 100\%$
3. $U_o = 0V$, $\Delta U \approx 30V$ Factory setting

Figure 11. The Minimum and Maximum Control Signal Adjustment.

Example:

Open the actuator from 0 to 50% (45°) using a control signal of:

$U_{min} = 2V$ to $U_{max} = 10V$

Calculating the value of ΔU :

$$\Delta U = \frac{100 [\%] (U_{max} - U_{min})}{\text{Working angle of rotation in } \%} = \frac{100 \times (10 - 2)}{50} = 16V$$

Settings

$U_o = 2V$; $\Delta U = 16V$

U_{min} = minimum control signal
 U_{max} = maximum control signal

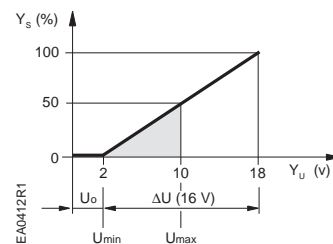
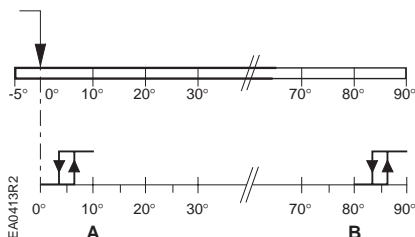


Figure 12. Example.

Dual Auxiliary Switch

GMA126
GMA226
GMA136
GMA156
GMA164
GMA166



Actuator rotary range with the shaft adapter mounted at position "0".

Setting range for switches A and B
Setting interval: 5°
Switching hysteresis: 2°

To change the settings of A and B:

- Make sure the actuator is in the "0", fail safe position. The scale is valid only in the "0" position.
- Use the adjustment tool provided with the actuator to turn the switch adjustment dials to the desired setting at which a signal is to be given.

Factory setting:

Switch A = 5°

Switch B = 85°

NOTE: Use the long arm of the "†" to point to the position of switch A. Use the narrower tab on the red ring to point to the position of switch B.

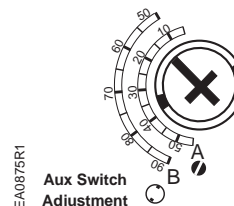


Figure 13. Adjustable Switching Values for the Dual Auxiliary Switches.

DIP Switch Functionality

GMA 151
GMA 156

Description	Label	Description	Function
Inverse Acting		Direct-Acting	Input Signal Inversion
Inverse-Acting Feedback		Direct-Acting feedback	Feedback Signal inversion
			Not In Use

Figure 14. DIP Switches.

Input Signal Inversion




Allows inverting the control input signal

The arrow direction indicates opening or closing (closing or opening) when operating an actuator with a given control signal.

= Direct acting (Factory setting)
Input signal 2 Vdc ► fail safe position

= Inverse acting
Input signal 10 Vdc ► fail safe position

Feedback Signal Inversion



Allows inverting the position feedback output signal

= Direct acting feedback (Factory setting)
Fail safe position ► Output signal 2 Vdc

= Inverse acting feedback,
Fail safe position ► Output signal 10 Vdc

Wiring

All wiring must conform to NEC and local codes and regulations.

Use earth ground isolating step-down Class 2 transformers. Do not use autotransformers.

The maximum rating for a Class 2 step-down transformer is 100 VA. Determine the supply transformer rating by summing the VA ratings of all actuators and all other components used. It is recommended that one transformer power no more than 10 actuators (or 80% of its VA).



WARNING:

Mixed switch operation is not permitted to the switching outputs of both auxiliary switches (A and B).

Either AC line voltage from the same phase must be applied to all six outputs of the dual auxiliary switches, or UL-Class 2 voltage (SELV for CE conformance) must be applied to all six outputs.

NOTE: With Plenum cables only UL-Class 2 voltage (SELV for CE conformance) is permitted.



WARNING:

Installations requiring **CE** Conformance:

- Except for the auxiliary switches (See *Warning* above) all wiring for 24 Vac/dc actuators must only be safety extra-low voltage (SELV) or protective extra-low voltage (PELV) per HD384.
- Use safety transformers per EN61558 with double isolation, designed for 100% duty-cycle for supplying SELV or PELV circuits.
- Over-current protection for supply lines is maximum 10A.

Wire Designations

Each wire has the standard symbol printed on it. See Table 4.

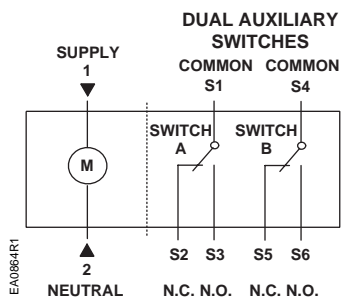
Table 4. Wire Designations.

Applicable Actuator	Standard Symbol	Function	Terminal Designations	Color
24 Vac/dc	1	Supply (SP)	G	Red
	2	Neutral (SN)	G0	Black
	6	Control signal clockwise	Y1	Violet
	7	Control signal counterclockwise	Y2	Orange
	8	Input signal: 0 to 10 Vdc (GMA16x) or 2 to 10 Vdc (GMA15x)	Y	Gray
	9	Position output: 0 to 10 Vdc (GMA16x) or 2 to 10 Vdc (GMA15x)	U	Pink
120 Vac	3	Line	L	Black
	4	Neutral	N	White
Auxiliary Switches	S1	Switch A – Common	Q11	Gray/red
	S2	Switch A – N.C.	Q12	Gray/blue
	S3	Switch A – N.O.	Q14	Gray/pink
	S4	Switch B – Common	Q21	Black/red
	S5	Switch B – N.C.	Q22	Black/blue
	S6	Switch B – N.O.	Q24	Black/pink
Position Feedback	P1	Feedback Potentiometer 0 to 100% P1 - P2	a	White/red
	P2	Feedback Potentiometer Common	b	White/blue
	P3	Feedback Potentiometer 100 to 0% P3 – P2	c	White/pink

Wiring Diagrams

GMA12x

24 Vac/dc
2-Position Control



Class 2

Figure 15.

GMA22x

120 Vac
2-Position Control

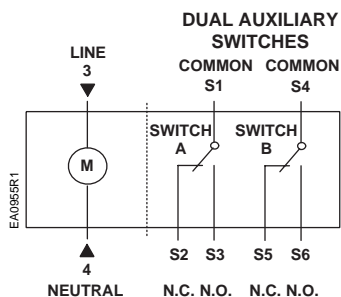
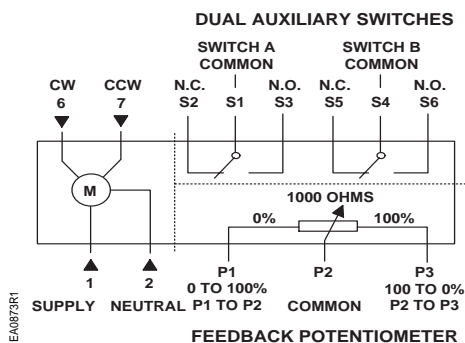


Figure 16.

GMA13x

24 Vac/dc
3-Position Control



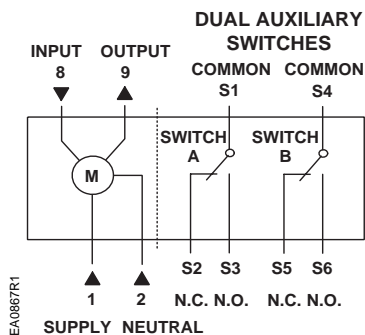
Class 2

Figure 17.

GMA15x

GMA16x

24 Vac/dc
Modulating control



Class 2

Figure 18.

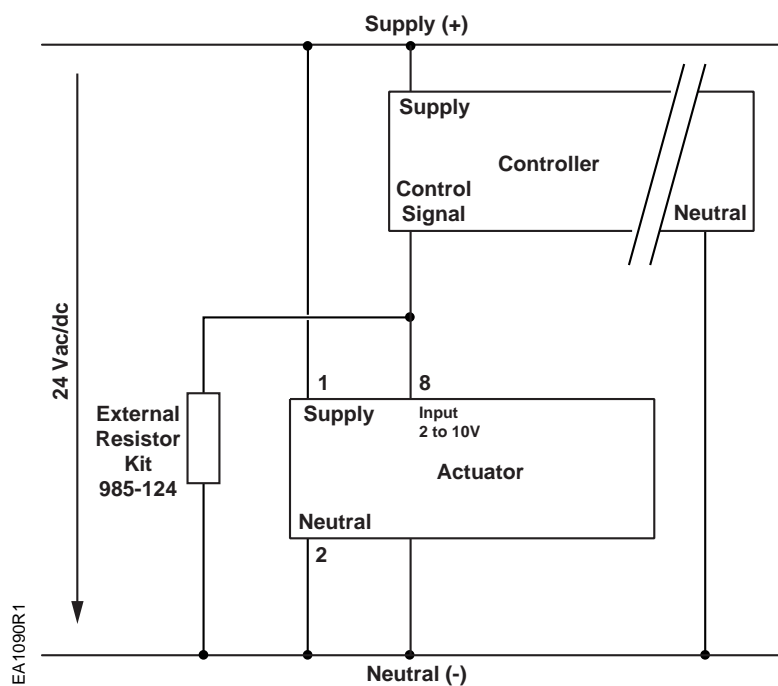
Special Applications**4 to 20 mA**
GMA15x

Figure 19. GMA 151 and GMA156, 4 to 20 mA Applications.

Start-Up/ Commissioning

GMA16x, GMA15x

Spring Return Modulating Control 24 Vac/dc

1. Check Operation:
 - a. Connect wires 1 (red) and 2 (black) to the 24 Vac/dc power supply.
NOTE: With no input signal present, the GMA15x actuator with input signal inversion switch set to Inverse Acting will start driving towards 90°.
 - b. Use a Digital Multimeter (DDM) and set the dial to Vdc for the actuator input signal.
 - c. Connect wires 2 (black) and 8 (gray) to the DMM.
 - d. Apply to input signal wire 8 (gray):
 $Y = 10 \text{ Vdc}$ or $Y = U_o + \Delta U$ (GMA16x)
 $Y = 10 \text{ Vdc}$ (GMA15x with input signal inversion switch set to Direct Acting)
 $Y = 2 \text{ Vdc}$ (GMA15x with input signal inversion switch set to Inverse Acting)
Allow the actuator shaft coupling to rotate from 0° to 90°.
 - e. Apply to input signal wire 8 (gray):
 $Y = 0 \text{ Vdc}$ or $Y = U_o$ (GMA16x)
 $Y = 2 \text{ Vdc}$ (GMA15x with input signal inversion switch set to Direct Acting)
 $Y = 10 \text{ Vdc}$ (GMA15x with input signal inversion switch set to Inverse Acting)
The shaft coupling returns to the "0" position.
 2. Check Spring Return:
 - a. Set the DMM dial to Vdc.
 - b. Connect wires 2 (black) and 8 (gray) to the DMM.
 - c. Apply to input signal wire 8 (gray):
 $Y = 5 \text{ Vdc}$ or $Y = U_o + 1/2 \Delta U$ (GMA16x)
 $Y = 6 \text{ Vdc}$ (GMA15x)
Allow the actuator shaft coupling to rotate halfway.
 - d. Disconnect wire 1 (red).
The spring returns the actuator shaft coupling to the fail "0" position.
 - e. Connect wire 1 (red) and the actuator moves.
 3. Check Feedback:
 - a. Set the DMM dial to Vdc.
 - b. Attach wires 2 (black) and 9 (pink) to the DMM.
 - c. Apply the input signal as in *Step 1d*, to wire 8 (gray).
The reading at the DMM should increase (decrease for GMA15x with output signal inversion switch set to Inverse Acting Feedback).
 - d. Apply the input signal as in *Step 1f*, to wire 8 (gray).
The reading at the DMM should decrease (increase for GMA 15x with output signal inversion switch set to Inverse Acting Feedback) and the actuator shaft coupling returns to the fail "0" position.
 4. Check the Auxiliary Switch A:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S1 and S3 to the DMM. The DMM should indicate open circuit or no resistance.
 - c. Apply the input signal as in *Step 1d*, to wire 8 (gray).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
 - d. Connect wires S1 and S2 to the DMM. The DMM should indicate open circuit or no resistance.
 - e. Apply the input signal as in *Step 1f*, to wire 8 (gray).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
-

**Start-Up/
Commissioning,
continued**

5. Check the Auxiliary Switch B:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S4 and S6 to the DMM. The DMM should indicate open circuit or no resistance.
 - c. Apply the input signal as in *Step 1d*, to wire 8 (gray).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.
 - d. Connect wires S4 and S5 to the DMM. The DMM should indicate open circuit or no resistance.
 - e. Apply the input signal as in *Step 1f*, to wire 8 (gray).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.

GMA12x**Spring Return
2-Position
24 Vac/dc**

1. Check Operation:
 - a. Connect wires 1 (red) and 2 (black) to 24 Vac/dc power supply.
Allow the actuator shaft coupling to rotate from 0° to 90°.
 - b. Disconnect wire 1 (red) and the actuator shaft coupling returns to the "0" position.
2. Check Spring Return:
 - a. Connect wire 1 (red).
Allow the actuator shaft coupling to rotate halfway.
 - b. Disconnect wire 1 (red).
The spring returns the actuator shaft coupling to the fail "0" position.
3. Check the Auxiliary Switch A:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S1 and S3 to the DMM.
The DMM should indicate open circuit or no resistance.
 - c. Connect wire 1 (red).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
 - d. Connect wires S1 and S2 to the DMM.
The DMM should indicate open circuit or no resistance.
 - e. Disconnect wire 1 (red).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
4. Check the Auxiliary Switch B:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S4 and S6 to the DMM.
The DMM should indicate open circuit or no resistance.
 - c. Connect wire 1 (red).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.
 - d. Connect wires S4 and S5 to the DMM.
The DMM should indicate open circuit or no resistance.
 - e. Disconnect wire 1 (red).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.

**Start-Up/
Commissioning,
continued**

GMA22x

**Spring Return
2-Position
120 Vac**



WARNING: Switch off 120 Vac power before connecting wires 3 (black) and 4 (white).

1. Check Operation:
 - a. Switch on 120 Vac power.
Allow the actuator shaft coupling to rotate from 0 to 90°.
 - b. Switch off 120 Vac power
The actuator shaft coupling will return to the fail "0" position.

2. Check Spring Return:
 - a. Switch on 120 Vac power.
Allow the actuator shaft coupling to rotate halfway.
 - b. Switch off 120 Vac power.
The spring returns the actuator shaft coupling to the fail "0" position.

3. Check the Auxiliary Switch A:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S1 and S3 to the DMM.
The DMM should indicate an open circuit or no resistance.
 - c. Switch on 120 Vac power.
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
 - d. Connect wires S1 and S2 to the DMM.
The DMM should indicate open circuit or no resistance.
 - e. Switch off 120 Vac power.
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.

4. Check the Auxiliary Switch B:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S4 and S6 to the DMM.
The DMM should indicate open circuit or no resistance.
 - c. Switch on 120 Vac power.
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.
 - d. Connect wires S4 and S5 to the DMM.
The DMM should indicate open circuit or no resistance.
 - e. Switch off 120 Vac power.
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.

**Start-Up/
Commissioning,
continued****GMA13x
Spring Return
3-Position
24 Vac/dc**

-
1. Check Operation:
 - a. Connect wires 1 (red) and 2 (black) to a 24 Vac/dc power supply.
 - b. Apply a control signal (24 Vac/dc) to wire 6 (violet).
Allow the actuator shaft coupling to rotate from 0 to 90°.
 - c. Stop the control signal to wire 6 (violet).
 - d. Apply a control signal (24 Vac/dc) to wire 7 (orange).
Allow the actuator shaft coupling to rotate from 90° to 0°.
-
2. Check Spring Return:
 - a. Apply a control signal (24 Vac/dc) to wire 6 (violet).
Allow the actuator shaft coupling to rotate half way.
 - b. Disconnect wire 1 (red).
The spring returns the actuator shaft coupling to the fail "0" position.
 - c. Connect wire 1 (red).
The actuator shaft coupling begins to move.
-
3. Check Feedback:
 - a. Set the DMM dial to ohms.
 - b. Connect wires P1 and P2 to the DMM.
The DMM should indicate a resistive value.
 - c. Apply a control signal (24 Vac/dc) to wire 6 (violet).
The reading of the DMM should increase.
 - d. Stop the control signal to wire 6 (violet).
 - e. Connect wires P2 and P3 to the DMM.
The DMM should indicate a resistive value.
 - f. Apply a control signal (24 Vac/dc) to wire 7 (orange).
The reading of the DMM should increase.
-
4. Check the Auxiliary Switch A:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S1 and S3 to the DMM.
The DMM should indicate an open circuit or no resistance.
 - c. Apply a control signal (24 Vac/dc) to wire 6 (violet).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
 - d. Stop the control signal to wire 6 (violet).
 - e. Connect wires S1 and S2 to the DMM.
The DMM should indicate an open circuit or no resistance.
 - f. Apply a control signal (24 Vac/dc) to wire 7 (orange).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch A.
-

Start-Up/ Commissioning, continued

GMA13x, continued

5. Check the Auxiliary Switch B:
 - a. Set the DMM dial to ohms (resistance) or continuity check.
 - b. Connect wires S4 and S6 to the DMM.
The DMM should indicate an open circuit or no resistance.
 - c. Apply a control signal (24 Vac/dc) to wire 6 (violet).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.
 - d. Stop the control signal to wire 6 (violet).
 - e. Connect wires S4 and S5 to the DMM.
The DMM should indicate an open circuit or no resistance.
 - f. Apply a control signal (24 Vac/dc) to wire 7 (orange).
The DMM should indicate contact closure as the actuator shaft coupling reaches the setting of switch B.

Service



WARNING:

Do not open the actuator.
If the actuator is inoperative, replace the unit.

Troubleshooting



WARNING:

To avoid injury or loss of life, pay attention to any hazardous voltage
(For example, 120 Vac) when performing checks.

- Check that the wires are connected correctly.
- Check that span/offset (start point) and Dip switches are set correctly, if used.
- Use a Digital Multimeter (DMM) to verify that the operating voltage is within range.
- If the actuator is not working, check the damper for blockage. If blocked, remove the obstacle and cycle the actuator power off and on. The actuator should resume normal operating mode.

Dimensions

Inches (mm)

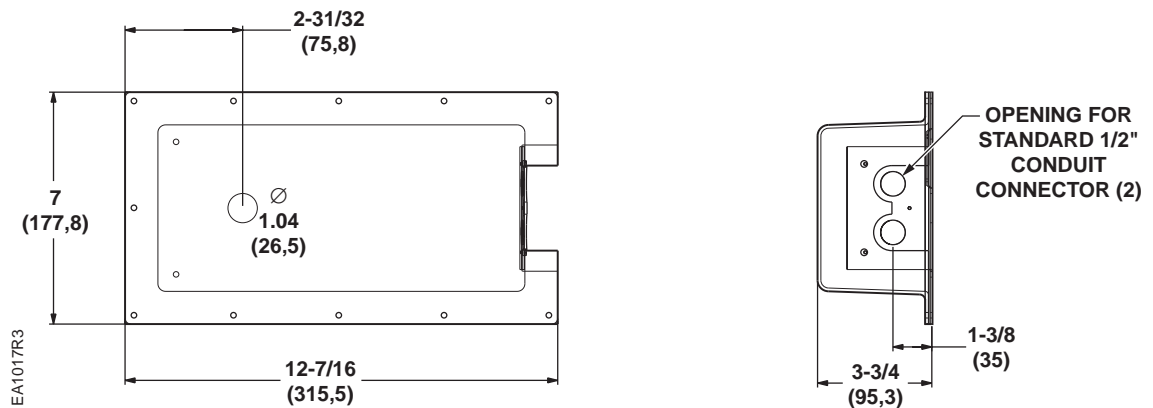
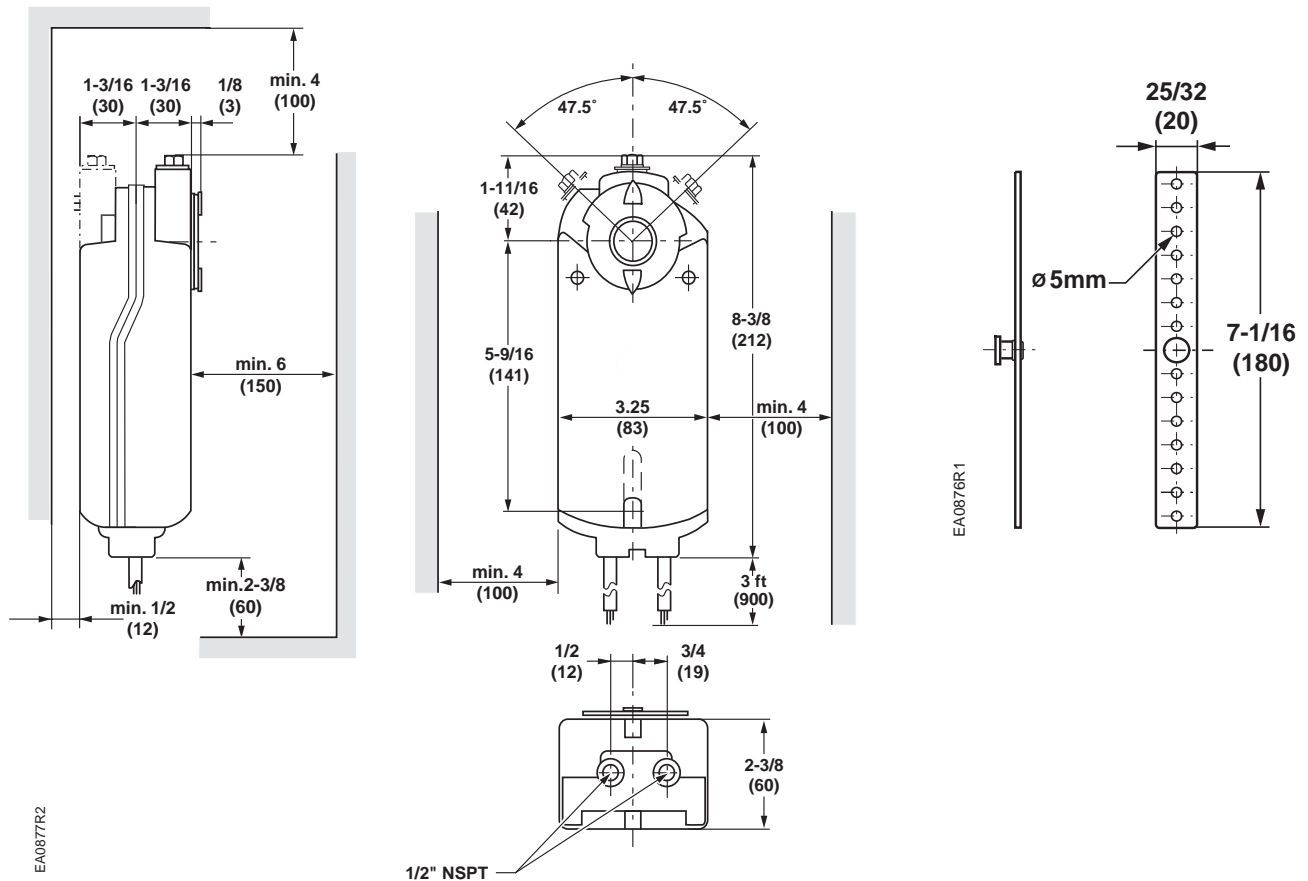


Figure 20. ASK75.3U Weather Shield Dimensions.

Dimensions, continued

Inches (mm)

**Figure 21. GMA Actuator and Mounting Bracket Dimensions.**

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. OpenAir is a trademark of Siemens Building Technologies, Inc. Other product or company names mentioned herein may be the trademarks of their respective owners. © 2005 Siemens Building Technologies, Inc.