


Instruction Sheet

SR506 Switching Relay

102-085

SUPERSEDES: 102-085 December 1, 1999



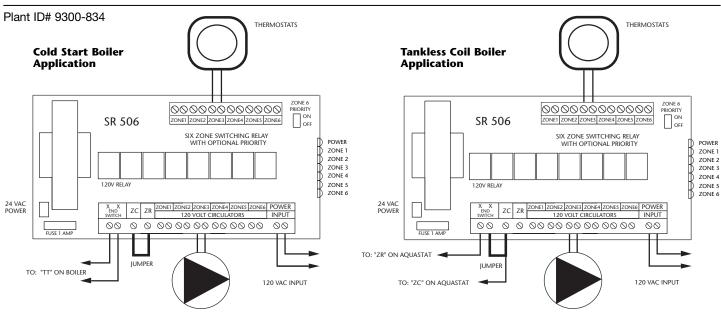

Warning: When using Alternative Wiring diagram, wiring instructions must be followed so power originates from the boiler aquastat. Failure to follow these wiring instructions may result in a secondary source of power being connected to the boiler that may activate it under certain circumstances, causing injury or death.

Operation: When any thermostat calls for heat, the appropriate circulator is energized and the isolated end switch (X and X) will start the boiler.

Priority Operation: When zone 6 is switched to the priority setting and is actuated, all other zones will stop operation until zone 6 is satisfied. When zone 6 is not switched to priority, all zones will operate independently.

Jumper Placement: The jumper should be placed between terminals ZC and ZR. Connect the isolated end switch to the aquastat control on the boiler.

Power Input: Connect 120 volt ac power input to terminals N and H. Neutral wire to terminal N. Hot wire to terminal H.

The Taco Connection:

Combine the reliability of the Taco Zone Valves, Priority Zoning Circulators, Thermostats, and the "00" family of circulators with the advanced features of the Taco Zone Controls to achieve total system integration. No matter the application, Taco now provides the products to maximize system performance while simplifying both installation and service.

External Diagnostics:

Externally visible lights show full functionality of the switching relay. The green light should always be on, indicating that power is connected. When the thermostat calls for heat, both the appropriate circulator and red indicating light is energized.

Specifications:

PRODUCT	NUMBER	TRANSFORMER	MAXIMUM	DIMENSIONS OF ENCLOSURE		
NUMBER	OF ZONES	VOLTAGE	COMBINED LOAD	WIDTH	HEIGHT	DEPTH
SR506	6 with Priority	120 VAC Input	20 amps	11 3/4"	7 1/2"	3"

All Switching Relays are relay type DPST, have a thermostat current of .18, and have a single phase motor rating per zone of 1/3 hp (7.2A) @ 120 VAC.

Do it Once. Do it Right.®

Operation: When any thermostat calls for heat, the boiler and appropriate circulator are energized when the boiler temperature is above the set low limit.

Priority Operation: When zone 6 is switched to the priority setting and is actuated, all other zones will stop operation until zone 6 is satisfied. When zone 6 is not switched to priority, all zones will operate independently.

Jumper Placement: <u>MOVE</u> the jumper between terminals ZC and ZR to end switch X and ZC. Connect terminal ZC to ZC terminal on the aquastat control. Connect the other end switch X to ZR terminal on the aquastat control. Confirm polarity is consistent between boiler aquastat and switching relay.

Power Input: Connect 120 volt ac power input to terminals N and H. Neutral wire to terminal N. Hot wire to terminal H.

Features:	External Indicator Lights		
	Switchable Priority		
	Simplified Wiring		
	Fully Enclosed Snap-Out Relays		
	Compact Design		
	Fuse Protected		
	100% Factory Tested		
	Isolated End Switch		
	Contractor Friendly PC Board Layout		
	Universal Thermostat Compatibility		
	UL Approved		
	24 volt Power Input or Output Terminal		
	Extended 3 Year Warranty		
	Made in the USA		

Warning: Wiring connections must be made in accordance with all applicable electrical codes and these instructions. Use copper wire only. Failure to follow this instruction can result in personal injury or death and/or property damage. 10-18 gauge wire recommended for 120 VAC connections with 9 in.lbs. max torque, 12-22 gauge wire for thermostat connections with 9 in.lbs. max torque, and 12-22 gauge wire for 24 VAC source with 5 in.lbs. max torque.

TACO, INC., 1160 Cranston Street, Cranston, RI 02920 Telephone: (401) 942-8000 FAX: (401) 942-2360. TACO (Canada), Ltd., 6180 Ordan Drive, Mississauga, Ontario L5T 2B3. Telephone: 905/564-9422. FAX: 905/564-9436. Printed in USA Copyright 2005 TACO. Inc.

Visit our web site at: http://www.taco-hvac.com