

READ AND SAVE THESE INSTRUCTIONS

Before beginning installation, please thoroughly read and become familiar with these instructions. Installation and service must be completed by a qualified installer. Failure to properly install this product may void the warranty.

Installer: Please leave these installation instructions with the homeowner.
Owner: Please keep these installation instructions for local electrical inspector's use for future reference.

WARNINGS: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS OBSERVE THE FOLLOWING:

- A) Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- B) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.
- C) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- D) Sufficient air is needed for proper combustion and exhausting of gasses through the flue (chimney) or fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA) and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities.
- E) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- F) Duct fans must always be vented to the outdoors.

CAUTION: For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.

WARNINGS: TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

- A) Never leave surface units unattended at high settings. Boil-overs may cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- B) Always turn hood ON when cooking at high heat or when cooking flaming foods.
- C) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
- D) Use proper pan size. Always use cookware appropriate for the size of the surface element.


WARNING: TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING:

- A) **SMOTHER FLAMES** with a close-fitting lid, cookie sheet or metal tray, then turn off the burner. **BE CAREFUL TO PREVENT BURNS.** If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**
- B) **NEVER PICK UP A FLAMING PAN!** You may be burned.
- C) **DO NOT USE WATER**, including wet dishcloths or towels - a violent steam explosion will result.
- D) Use an extinguisher **ONLY** if:
 1. You know you have a Class ABC extinguisher, and you already know how to operate it.
 2. The fire is small and contained in the area where it started.
 3. The fire department is being called.
 4. You can fight the fire with your back to an exit.

PART 1 Planning the Installation

CAUTION:

1. To reduce the risk of fire and to properly exhaust air, the liner must be exhausted to the outside. Never exhaust into a wall, an attic or a concealed area in the building. This can create a potential hazard.
2. Consult a licensed ventilation contractor or qualified technician for proper installation of exhaust ducting.
3. Locate the cooking area for minimum cross drafts -- away from doors and windows, when possible.
4. Ducts must be of adequate size and duct runs should be as short as possible. When turns are necessary, keep turning radius as large and as smooth as possible.
5. The ducting must be air tight. Use a minimum of 2 sheet metal screws at every duct joint. Then, seal the duct joints with high quality duct tape.
6. Only use ductwork constructed of materials deemed acceptable by state, municipal and local codes.

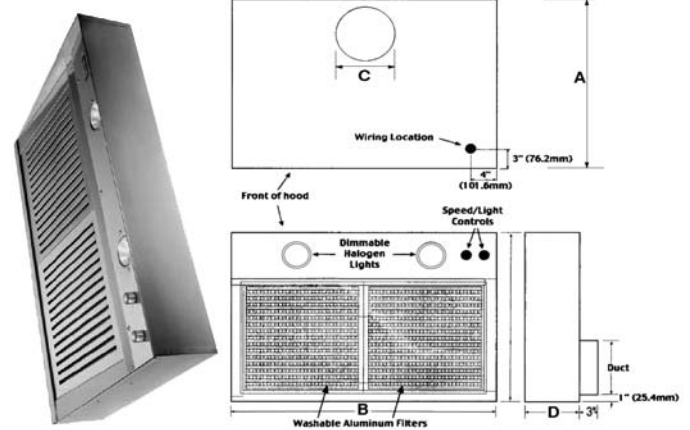

MODEL	UPC#	DUCT*	A	B	C	D
HLS-30	71 130	6	18	28-1/2	6	4
HLS-36	71 131	8	18	34-1/2	8	4
HLP-36	71 125	8	22	34-1/2	8	6
HLP-42	71 126	10	22	40-1/2	10	6
HLP-48	71 127	10	22	46-1/2	10	6

Dimensional information shown in inches.
*Duct connections are 1/8" smaller than duct size.

NOTES:

- The hood liner is designed to install inside a custom hood enclosure and operates with a remotely mounted blower (purchased separately). See Fig. below for hood dimensions. See chart for ALDES exhaust fans recommended for use with this unit.
 - A qualified person must complete the installation of this appliance.
 - Plan the installation so that all minimum clearances are met or exceeded.
 - **IMPORTANT:** You must provide support framing and backing in the areas in which you are securing the liner to in your custom canopy. Failure to do so could damage the liner and void the warranty.
 - All dimensional tolerances are 0" to 1/16" unless otherwise stated.
- NOTES:**
1. The hood liner uses 120 VAC, 60 Hz power. Supply wires should be installed by a qualified person(s) and must meet all electrical codes. The HLS-30 and HLS-36 Hood Liner are designed for use with 6" duct. The HLP-36 is designed for use with 8" diameter round duct and the HLP-42 and HLP-48 Hood Liner are designed for use with 10" diameter duct. Use only rigid metal duct.
 2. "Duct Silencers" are available from American ALDES. When planning for installation using a Duct Silencer, please refer to the installation instructions provided with the unit.
 3. A quality cap with built in backdraft damper or an in-line damper is recommended to minimize cold air return through the duct when the product is not in use.
 4. Always install ventilation products with an approved wall or roof cap.
 5. Duct performance is improved by using round, smooth metal duct work instead of rectangular.
 6. If multiple elbows must be used, ensure that there is a minimum of 24" of straight duct between any two elbows.
 7. Avoid "S" or back to back configurations caused by adjacent elbows.
 8. Route ducting to terminate at the hood liner.

WARNINGS: Following Are Manufacturer's Suggestions. Always Observe Local Building Codes.

1. Liners installed in custom canopies constructed of combustible materials, should be installed with the combustible material structure a minimum of 36" above the surface of the heating element.
2. Liners installed in custom canopies constructed of noncombustible materials, should be installed with the noncombustible material structure a minimum of 30" above the surface of the heating element.
3. Follow all instructions regarding minimum safe clearances and installation location. Failure to do so may result in a safety hazard or fire.
4. To reduce the risk of fire, use only metal ductwork.

CHOOSING THE RIGHT REMOTE MOUNT BLOWER

Below is a chart of the recommended ALDES fans that can be used with the HLS and HLP Series range hood liners. Some models are for mounting remotely in the attic. Other models are used when installation requires a roof mount or wall mount fan.

HLS 30 and HLS 36

Model	Location	Mounting	Airflow @ 0"	Typical Airflow
A-6	Interior	In-Line	257	190
A-6HP	Interior	In-Line	392	275
XMV-A6 HP	Exterior	Wall	381	330
RMV-A6	Exterior	Roof	227	205

HLP 36

Model	Location	Mounting	Airflow @ 0"	Typical Airflow
A-8	Interior	In-Line	521	450
AD-8HP	Interior	In-Line	836	650
XMV-A8 HP	Exterior	Wall	435	370
RMV-A8 HP	Exterior	Roof/Wall	401	350

HLP 42 and HLP 48

Model	Location	Mounting	Airflow @ 0"	Typical Airflow
A-10	Interior	In-Line	590	525
AD-10HP	Interior	In-Line	1266	1020
RMV-A10 HP	Exterior	Roof/Wall	753	721
RMV-A10 HPT	Exterior	Roof/Wall	1008	919

†Typical airflow is an estimate based on a system with 20-feet of duct, two 90 degree elbows, backdraft damper, roof cap and filter.

*Representative of full-speed operation @ .375 s.p. in a typical installation.

NOTE: Due to the large volume of air that these remote blowers move, it is important that a source of sufficient makeup air is available to avoid backdrafting in the house.

PART 2 Electrical Connection


WARNINGS:

1. Ensure that the power supply is disconnected before proceeding.
 2. Verify that the power supply matches the ratings found on the appliance data label before proceeding.
 3. The complete appliance must be properly grounded at all times when electrical power is applied.
 4. Do not ground the appliance with the neutral (white) house supply wire. A separate ground wire must be utilized.
 5. Failure to complete electrical connections properly may result in damaged or nonfunctional systems. Follow instructions carefully to ensure proper installation.
- It is the owner's responsibility to ensure that a qualified electrician performs the electrical connection of this appliance. The electrical installation, including minimum supply wire size, must comply with the National Electric Code ANSI/NFPA 70-1990 (or latest revision) and local codes and ordinances.
 - A copy of this standard may be obtained from National Fire Protection Association, 1 Batterymarch Park Quincy, Massachusetts 02269-9101

INSTRUCTIONS:

1. A 15 to 20 amp electrical service is recommended for proper electrical supply. Before determining, calculate amp ratings based on the product label found on the liner and the ventilator. (Always observe local building codes).
2. Always use a dedicated circuit.
3. Line load is calculated by adding the amperage of the halogen lights to the rated amperage of the ventilator (either in-line or roof top). If the ventilator is rated in watts rather than amps, divide the watts by 120 and this will give you the amperage rating.
4. The ALDES liner is supplied with a 5.0 amp variable speed fan control. Make sure the rated amperage on the ventilator does not exceed 5.0 amps.
5. The ALDES liner has been designed to accommodate several different motor speed controls, (for example Thermador™ model CTR3-Q). Always consult the manufacturer's installation instructions when substituting control switches.
6. Wire connections: **(Figure 2)**
 - Black — 120 VAC from electrical panel (black)
 - White — Neutral from electrical panel (white)
 - Green — Ground from electrical panel (green)
 - Red — 120 VAC variable control to 120 VAC of ventilator

Figure 2

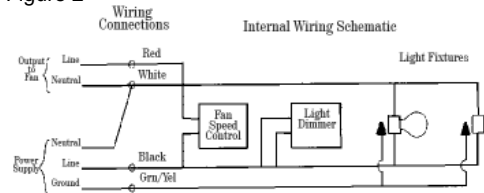

CAUTION: The neutral wire (usually white) for the ventilator must connect to the same neutral wire that comes from the electrical panel to the liner. It is recommended to run a white neutral wire from the liner's white neutral wire along the same path as the red wire from the liner's variable speed control to the ventilator.

PART 3 Securing the Liner

SECURING INSTRUCTIONS:

1. Because the professional series liner was designed for custom applications, no mounting holes have been predrilled. This allows you to attach the liner in the areas of the canopy which have ample support and backing.
2. You must secure the liner through both right and left sides, through the back and through the top.
3. Remove the filters. Mark and drill screw holes through the liner as required for custom canopy. Secure the liner by driving screws (provided by others) through the stainless steel into the framing and backing.

CONNECTING TO THE VENT PIPE:

1. Insert the tabbed end of the galvanized Start Collar into the round hole in the outside top of the liner.
2. Bend all of the tabs firmly in places against the inside top of the liner. Sheet metal screws should be placed equidistant through 3 or more tabs. **CAUTION:** For safety of the person cleaning this liner, neatly cover the well-flattened tabs with 2 or more layers of metal tape.
3. Attach the other end of the Start Collar to the range hood vent with a minimum of 3 equidistant screws and metal tape.

PART 4 Use and Care

OPERATING CONTROLS:

1. Always activate the ventilator whenever using cooking appliances.
2. Activate the ventilator a few minutes before starting to cook to establish an airflow pattern within the room.
3. Adjust the fan speed according to the amount of cooking exhaust.
4. Adjust the dimmable halogen lights as desired.
5. Eliminate air currents in the hood vicinity by shutting nearby windows and doors, turning off ceiling fans and closing the adjacent heating and air conditioning outlets.
6. Place your largest pans, skillets and stock pots on the rear burners whenever possible.

WARNING: DO NOT operate the vent system without the filters in place, or with dirty, grease laden filters.

ENERGY SAVING TIPS:

1. Do not operate the blower at a speed that is higher than necessary to remove the cooking exhaust. Running at excessive speeds removes more air from the inside of the house that must be replaced by outside air. This may be especially costly when your home's heating or air conditioning system is in operation. Turn off the unit once the smoke and cooking odors have been eliminated.
2. Clean filters and grease laden surfaces often to improve efficiency.
3. Always use lids on cookware to retain heat and moisture.
4. Minimize the amount of liquid used to cook food.
5. Select cookware of proper size, material and construction for the cooking task being performed.

CARE and CLEANING:

1. Proper cleaning is necessary to maintain performance and appearance, while also ensuring safe operation. The frequency of cleaning should be adjusted according to the type and amount of cooking. Best results will be achieved by cleaning soiled components as soon as possible.
2. Filters must be cleaned regularly. Remove one filter at a time. Grasp the filter handle and gently pull toward you, then down and back. Filter should be installed with the handle in the rear filter slot.
3. The filters may be cleaned by hand washing in hot water using a mild detergent solution, or by placing them in the top rack of an automatic dishwasher. Dry the filters completely before using again.
4. Stainless steel surfaces should be cleaned with a solution of mild detergent and warm water. Rinse and dry with a soft lint-free cloth. **CAUTION:** Do not use any type of pad that will scratch the liner.
5. **CAUTION:** If a commercially available stainless steel cleaner is used, it is important to read the labels for chlorine compounds. Chlorine is a corrosive substance. If these compounds are present, rinse thoroughly and dry with a soft lint-free cloth. Follow polish manufacturer's instructions.
6. Always wipe stainless steel surfaces with the grain. Never wipe across the grain.
7. After cleaning, reinstall the filters carefully.

REPLACING LIGHT BULBS:

Par 20 halogen lamps are available in many different styles and sizes. Following is a list recommended by the manufacturer:

- Phillips MASTER Line 50 watts 120V
- Felt Electric 50 watt 130V
- Industrial Grade Premium Quality™ P.Q.L. Incorporated Code 83009

AMERICAN
aldes
VENTILATION CORPORATION

4521 19th Street Court E., Suite 104,
Bradenton, FL 34203 USA
P: 941-351- 3441 - F: 941-351- 3442

www.americanaldes.com ~ E: info@aldes-us.com

IAQ
VENTILATION
HOTLINE
800-255-7749

hoodliner_om_0510